

Salient Features

Compact Multi-Function Test System

ATS-UKMFT 727

Programming – Electronics



REINHARDT

System- und Messelectronic GmbH

Bergstr. 33 D-86911 Diessen-Obermühlhausen

Tel. +49 8196 934100






E-Mail: info@reinhardt-testsystem.de <http://www.reinhardt-testsystem.de>

Contents

| | |
|---|----|
| REINHARDT Compact-Multi Function | |
| Test Systems | 5 |
| Mechanical Data ATS-UKMFT 727 | 8 |
| PC-Control..... | 8 |
| ATS-UKMFT 727/RML Basic Version | 8 |
| ATS-UKMFT 727/96 Basic Version | 8 |
| Main Board | 9 |
| Standard Programmable PSUs | 9 |
| Standard Sine and Square Wave Generator | 9 |
| ADM670 Measuring System In-Circuit Test..... | 10 |
| ADM Measuring Unit Function | 12 |
| Measuring-Logic-Stimulus Matrix RML32 | 13 |
| MMX670 Stimulus Matrix | 13 |
| MMX72 Stimulus Matrix | 13 |
| EMX48 Stimulus Matrix | 14 |
| SBus..... | 14 |
| RMX 96 Measuring Matrix | 14 |
| LOG670 Logic Boards..... | 14 |
| LOG96 Logic Boards..... | 14 |
| PML670 Precision-Measuring-Logic Board..... | 15 |
| Serial Logic Data – Serial Field Bus Systems | 15 |
| TRA670 Transient Recorder (Oscilloscope –Option) | 15 |
| Function/Arbitrary Waveform Generator (optional)..... | 16 |
| System Diagnose and Calibration Device (optional) | 16 |
| The Interface | 17 |
| Fixtures..... | 17 |
| Practical Ergonomic Work Desks (optional) | 17 |
| Extended Tasks Using Power Electronics | 18 |
| High Voltage Protection – Protection Module for the In-circuit-Test | 20 |
| High Voltage Test | 20 |
| HVT 16 Voltage Divider for Measuring up to 1,000V..... | 20 |
| Support Modules For Mounting into the Fixture | 20 |
| HFMOD High Frequency Measuring and Dividing Module 200–1,100 MHz | 21 |
| HFPKMOD Peak Voltage Measuring Module..... | 21 |
| OPAMOD Impedance Transformer | 21 |
| OPTOMOD Opto-Coupler Module | 21 |
| STROMMOD Current Measuring Module | 21 |
| DACMOD Current and Voltage Supplier Module | 21 |
| GenMOD Sine and Square Wave Module | 22 |
| HFGenMOD HF-Square Wave Module | 22 |
| PGENMOD Pulse Generator Module..... | 22 |
| RelMOD Relay Module..... | 22 |
| HVRelMOD High Voltage Relay Module | 22 |
| AdapLMXModule..... | 22 |
| MicMod Microphone Module | 23 |
| FARB-LED-Module..... | 23 |
| 16FARBMod Module | 23 |
| TempMOD Temperature and Humidity Measuring Module | 23 |
| Spring-suspended Switch Contact Pin..... | 23 |
| Pneumatic Contact Pin..... | 24 |
| Programmer-Connector Module ProgMOD16..... | 24 |
| Electronic Actuator M12 | 24 |
| SteuerMod-Inline USB-Module..... | 24 |
| Start Stop Steuerung USB-Module | 24 |

| | |
|--|----|
| TrigMessMod..... | 25 |
| ADAEEP Fixture Recognition Module..... | 25 |
| Circle Marker..... | 25 |
| DUT_LED Module Optical Display of Status..... | 25 |
| BEE-Module – Recognition if a Board is Placed or Removed..... | 25 |
| Measuring Ranges..... | 26 |
| In-circuit Test..... | 26 |
| Function Test..... | 34 |
| Software..... | 43 |
| Test Program Wizard..... | 43 |
| Test Sequence..... | 44 |
| Creating a Fixture and a Test Program..... | 46 |
| Programming the Test System and Working with Gerber Files..... | 47 |
| In-circuit Test and its Programming..... | 48 |
| Assigning Tracks..... | 48 |
| Pin Contact Test Editor..... | 49 |
| Track and Insulation Test Editor..... | 49 |
| IC-Test-Editor..... | 49 |
| Programming an IC-Open Test..... | 50 |
| Programming a Components Test..... | 50 |
| Programming a Components Test Manually..... | 50 |
| 2. Semi-automatic Programming..... | 52 |
| 3. Using CAD-data..... | 53 |
| Test Run..... | 53 |
| Special Functions and Branch Out..... | 53 |
| Multiple Printed Panels..... | 54 |
| Function Test Editor..... | 55 |
| Fieldbusses..... | 58 |
| Integrating External Programs..... | 58 |
| Fault Journal..... | 59 |
| Quality Management – Reference Test..... | 59 |
| Program Generators for Function Test..... | 59 |
| Modification Listing..... | 60 |
| Statistical Calculations on Faults and Parameters..... | 60 |
| Open Database Connectivity – ODBC-Interface (Option)..... | 60 |
| Downloading FPGAs or Software..... | 61 |
| ODT Optical Display Test (Option)..... | 61 |
| Display of Fault Location..... | 61 |
| Boundary Scan..... | 62 |
| RST 40 REINHARDT-Synchro-Test..... | 63 |
| Programming Station..... | 63 |
| RDR Repair Station..... | 63 |
| REINHARDT ASCII-Interface..... | 64 |
| Transfer of Bills of Materials for Creating Test Programs for the REINHARDT-In-circuit Test..... | 65 |
| OLR-Software – Optical Layout-Reconstruction for Creating a Test Program and a Fixture..... | 65 |
| Our Complete Solution incl. Fixturing..... | 67 |
| Various solutions for building test fixtures semi-automatically by using Gerber files..... | 67 |
| Elaborating Gerber Files..... | 68 |
| Building Fixtures..... | 68 |
| Test Fixtures..... | 69 |
| Our Fixturing System..... | 70 |
| Bed of nails..... | 70 |
| Retention box..... | 71 |
| Working method of an exchange plate fixture..... | 71 |
| Contacting from top and bottom..... | 71 |
| Our Fixtures..... | 72 |

| | |
|--|----|
| Type 40 Pneumatic Fixture makes contact from both sides..... | 72 |
| Type 42 Manual Fixture allows double-sided contacting..... | 72 |
| Type 42C Manual Fixture | 72 |
| Type 82C Manual Fixture | 73 |
| Type 82B Manual Fixture | 73 |
| Type 127 Manual Fixture..... | 73 |
| Type 147 Manual Fixture..... | 74 |
| Type UJ20 Universally Adjustable Test Fixture | 74 |
| Tandem Module..... | 75 |
| Universal Interface Box 165 | 75 |
| Converter- and Ranging Box..... | 75 |
| In-line-System | 75 |
| Survey Fixture Types..... | 77 |
| Expansions ATS-UKMFT727..... | 79 |
| Block Diagram ATS-UKMFT 727 | 80 |

| REINHARDT Compact-Multi Function Test Systems | UKMFT 727 | UKMFT 627 | UKMFT 616 | MFT 770-1/B * | SMFT 780 * |
|---|---|---|--|---|---|
| |  |  |  |  |  |
| HARDWARE | | | | | |
| Measuring unit In-circuit test ADM670 | ● | ● | ● | ● | ● |
| Measuring unit Function test ADM670 | ● | ● | ● | ● | ● |
| Operating system | WIN 11® | WIN 11® | WIN 11® | WIN 11® | WIN 11® |
| PC Monitor Keyboard Mouse | ○ | ○ | ○ | ● | ● |
| Free board positions after basic configuration | 5 | 5 | 2 | 13 | 23 |
| Expansion rack | – | – | – | ○/2 | ○/2 |
| DC–sources programmable | 4 | 2 | 2 | 4 | 4 |
| Fixed voltages | 5 | 5 | 5 | 6 | 6 |
| Generator sine-square wave | ● 0 to 1 MHz | ● 0 to 78 kHz | ● 0 to 78 kHz | ● 0 to 500 kHz | ● 0 to 500 kHz |
| Electronic load programmable up to 5.12 A | – | – | – | ● | ● |
| Zener diode measuring board ZDC100 1/5/10 mA, 50/75/100 V | – | – | – | ○ | ○ |
| Measuring-logic-stimulus matrix RML 32 Measuring, 24 stimulus, 32 logic channels | ● 32 max. 224/176/224 | ● 32 max. 224/176/224 | ● 32 max. 96/72/96 | ○ max. 256/192/256 | ○ max. 256/192/256 |
| Measuring matrix board RMX96 96 Measuring matrix channels per board, Reed relays | ○ 32 max. 608 | ● 128 max. 608 | ○ 32 max. 224 | ● 96 max. 1,440/4,320 | ● 480 max. 2,400/3,840 |
| High voltage measuring matrix board VMX8 8 channels per board, buffer amplifier | – | – | – | ○ 8 max. 32 | ● 8 max. 32 |
| Stimulus matrix MMX670 with PSU / MUX8 per board 48 channels in 12 groups of 4 / optional with PSU | ○ / ● 8 channels max. 96 | ○ / ● 8 channels max. 96 | ○ / ● 8 channels max. 96 | ● 48/– max. 384 | ● 48/– max. 384/552 |
| Stimulus matrix MMX72 per board 72 channels in 18 groups of 4 | ○ / ● 8 channels max. 144 | ○ / ● 8 channels max. 144 | ○ / ● 8 channels max. 144 | ○ 72/– max. 552 | ○ 72/– max. 552 |
| Stimulus matrix EMX48 48 channels per board | ○ / ● 8 channels max. 192 | ○ / ● 8 channels max. 192 | ○ / ● 8 channels max. 96 | ○ 48/– max. 384 | ○ 48/– max. 384 |
| High voltage stimulus matrix HSM670, 16 channels DC max. 1,500 V, max. 6 A, max. 300 W, AC max. 1,000 V, max. 6 A, max. 2,500 W | – | – | – | ○ max. 64 channels | ○ max. 64 channels |
| Power matrix PMX16 16 channels DC max. 100 V, max 1,000 W | – | – | – | ○ max. 64 channels | ● max. 64 channels |
| Logic board bi-directional LOG670 32 channels 0–30 V prog. 10 mV step | ○ max. 32 23 V | ○ max. 32 23 V | ○ max. 32 23 V | ○ max. 256 | ● max. 256 |
| Logic board LOG96 96 channels, 3.3 V/5 V | ○ max. 224 | ○ max. 224 | ○ max. 128 | ○ max. 256 | ○ max. 256 |
| Precision measuring logic board PML 16 Logic-, 16 Precision measuring channels, 16 Chn. Precision PSU | ○ max. 32 | ○ max. 32 | ○ max. 32 | ○ max. 128 | ○ max. 128 |
| Transient recorder TRA670, 50 MHz 8 HF-inputs; 9 NF-inputs; one channel | ○ | ○ | ○ | ○ | ● |
| DC–source 3fold NGS470/670, 0 to 8 V, 4 A, 0 to 38 V 1 A and 0 to 38 V 1 A | – | – | – | ○ | ○ |
| Twin PSU potential–free ENG–60V | – | – | – | ○ | ○ |
| AC–DC–source AC670, 0 to 280 VAC max. 42 W, 25 Hz to 6.5 kHz in 0.1 Hz steps; DC–source 0–350 VDC, 35 W | – | – | – | ○ | ○ |
| DC–load 4fold LA470 0 to 4 A, max 50 V | – | – | – | ○ | ○ |
| Motorised trimmer MOT470/670 and prog. resistance decade 0 to 16.777 MΩ | ○ max. 1 | ○ max. 1 | ○ max. 1 | ○ max. 2 | ○ max. 2 |
| Current and sources monitor I–MON | integrated | – | – | integrated | integrated |
| Power matrix LMX670, 8 power matrix incl. 8 high voltage measuring channels | – | – | – | ○ max. 32 channels | ○ max. 32 channels |
| Power sources and loads POMO80, 19" 2HU | ○ | ○ | ○ | ○ | ○ |
| Fixture control 3 relays | ● | ● | ● | ● | ● |
| Inline control 8 bit | ● | ● | ● | ● | ● |
| SteuerMod USB | ○ | ○ | ○ | ○ | ○ |
| Bus I ² C-Bus, COM, USB | ● | ● | ● | ● | ● |
| 422, 485, SPI, 2x I ² C-Bus, PWM 50 ns bis 0,8 s 1,8 bis 5 V | – | – | – | ● | ● |
| CAN-Bus, K, LIN-Bus, IEC-Bus, Lon-Bus, EIB-Bus ... | ○ | ○ | ○ | ○ | ○ |
| Boundary Scan fully graphical | ○ | ○ | ○ | ○ | ○ |
| Calibration and system diagnose | ○ | ○ | ○ | ○ | ○ |
| Working desk / cabinet | ○ | ○ | ○ | ○ | ● |
| Test fixture | ○ | ○ | ○ | ○ | ● |

| REINHARDT Compact-Multi Function Test Systems | UKMFT 727  | UKMFT 627  | UKMFT 616  | MFT 770-1/B *  | SMFT 780 *  |
|--|---|---|--|---|--|
| SOFTWARE | | | | | |
| FOR PROGRAMMING | | | | | |
| Live Online Editor | ● | ● | ● | ● | ● |
| Program generator | ● | ● | ● | ● | ● |
| WIZARD for test programs | ● | ● | ● | ● | ● |
| Autolearn In-circuit test | ● | ● | ● | ● | ● |
| Autolearn Function test | ● | ● | ● | ● | ● |
| Automatic generation of the pin contact test | ● | ● | ● | ● | ● |
| Automatic generation of the short-circuit and interrupt test | ● | ● | ● | ● | ● |
| Automatic generation of the solder defect test | ○ | ○ | ○ | ○ | ● |
| Autodelay | ● | ● | ● | ● | ● |
| Autodischarge | ● | ● | ● | ● | ● |
| Automatic generation of envelope curves | ● | ● | ● | ● | ● |
| WIZARD DC/DC- and AC/DC-Module | ● | ● | ● | ● | ● |
| CAD-Data interface ASCII | ● | ● | ● | ● | ● |
| Transfer of Bills of Material BOMs | ● | ● | ● | ● | ● |
| Universal Data Converter RUDC10 | ○ | ○ | ○ | ○ | ● |
| Eagle Interface | ○ | ○ | ○ | ○ | ● |
| Layout reconstruction software OLR | ○ | ○ | ○ | ○ | ○ |
| Offline programming station – software | ○ | ○ | ○ | ○ | ○ |
| FUNCTIONALITIES | | | | | |
| Display of fault location and software for processing Gerber files | ○ | ○ | ○ | ● | ● |
| Software IC-Open and Polarity (requires ATSGERB) | ○ | ○ | ○ | ○ | ● |
| Test of multiple printed panels | ● | ● | ● | ● | ● |
| Ramp function | ● | ● | ● | ● | ● |
| Handling of serial numbers | ● | ● | ● | ● | ● |
| Communication interface | ● | ● | ● | ● | ● |
| Various fieldbus systems, partly with optional hardware | ○ | ○ | ○ | ○ | ○ |
| Boundary Scan | ○ | ○ | ○ | ○ | ○ |
| ODT Optical display test | ○ | ○ | ○ | ○ | ○ |
| FOR QUALITY MANAGEMENT | | | | | |
| Quality management tools | ● | ● | ● | ● | ● |
| Reference test | ● | ● | ● | ● | ● |
| Binning | ○ | ○ | ○ | ○ | ○ |
| Relay test | ● | ● | ● | ● | ● |
| Auto-calibration | ● | ● | ● | ● | ● |
| Statistics software with with histogram, fault distribution | ● | ● | ● | ● | ● |
| Live Screen statistics | ● | ● | ● | ● | ● |
| ODBC Data base interface | ○ | ○ | ○ | ○ | ○ |
| Test program modification listing | ● | ● | ● | ● | ● |
| GENERAL | | | | | |
| Tester and developer mode | ● | ● | ● | ● | ● |
| Unicode-capable for worldwide operation (language) | ● | ● | ● | ● | ● |
| Networkable | ● | ● | ● | ● | ● |
| Offline repair station – software | ○ | ○ | ○ | ○ | ○ |
| Remote servicing/remote maintenance | ● | ● | ● | ● | ● |

Legend: ● : Standard, ○: Option, – : not possible

* If you need more information about ATS-KMFT 670, ATS-MFT 770 or ATS-SMFT 780, please ask for separate brochures and salient features.



ATS-UKMFT 727 Basic Unit

Since 1979, REINHARDT have been developing automatic test systems for electronic components such as e.g. devices used for EOL-test or modules such as a board/PCB which are tested in a function test or in an in-circuit test. An automatic test system like ATS-UKMFT 727 replaces test structures/devices which may be made up of boxes with e.g. turn keys and maybe with measuring modules plugged into a PC and controlled by a computer via GPIB/IEC-interface. Such a test structure is always unique, dependent on its developer and very much limited in its test capabilities. REINHARDT-test systems hold the experiences of Peter Reinhardt, founder and owner, who has developed test systems for more than 4 decades and has made thousands of project solutions. REINHARDT acts on the maxim „Test systems by practical persons for practical persons“ and „You need not reinvent the wheel“.

The REINHARDT ATS-OS-software is operated under WINDOWS® and for a very long time it has worked with menu-driven online-programming. This makes programming easy, practice-oriented and fast. The rest of the test program is based on this reaction and the knowledge gained. The existing test step is duplicated and the expansions are filled in. The combined In-circuit- and Function test grants highest security for the PCB-function. Graphic display of fault location ensures that less qualified staff can operate the unit when short-circuits, interrupts, missing components or component faults are located and displayed on screen, are located fast and exactly.

This simple and practice-oriented conception combined with modern hardware-technology allow an extremely compact construction. High switching speeds at low current consumption grant lowest heat development and therefore longevity.

Mechanical Data ATS-UKMFT 727

ATS-UKMFT 727 is compact and has a good performance although it requires little space. A test fixture is optional. The combined High Speed in-circuit and function measuring unit is identical with that of ATS-MFT 770. Programmable multi-quadrant PSUs supply and stimulate signals in function test. The standard sine-square wave generator can be programmed in voltage and frequency.

ATS-UKMFT 727 offers 7 free board positions. These positions can hold only a part of the expansion modules. For details on possible expansions please see the ATS-UKMFT 727 block diagrams at the end of this booklet.

The outer dimensions of ATS-UKMFT 727 are 280x420x155 mm.

PC-Control

With ATS-UKMFT 727, PC and monitor are an option. The unit is controlled via a USB 2.0-interface.

ATS-UKMFT 727/RML Basic Version

ATS-UKMFT 727/RML is an in-circuit- and function test system with 1 ADM670 combined in-circuit- and function measuring system, 5 fixed voltages in the +5V, -5V, +15V, -15V and +28V ranges, 4 multi-quadrant PSUs with 4 programmable output voltages, sine- and square wave generator, 32 stimulus channels, 32 logic channels, 128 in-circuit and function test channels and Guard channels.

Basic Version: 1 RML32, 1 RMX96, 5 free positions


Weight: about 16 kg

ATS-UKMFT 727/96 Basic Version

ATS-UKMFT 727/96 is an in-circuit- and function test system with 1 ADM670 combined in-circuit- and function measuring system, 5 fixed voltages in the +5V, -5V, +15V, -15V and +28V ranges, 4 multi-quadrant PSUs with 4 programmable output voltages, sine- and square wave generator and 96 in-circuit and function test channels and Guard channels.

Basic Version: 1 RMX96, 6 free positions

Weight: about 16 kg

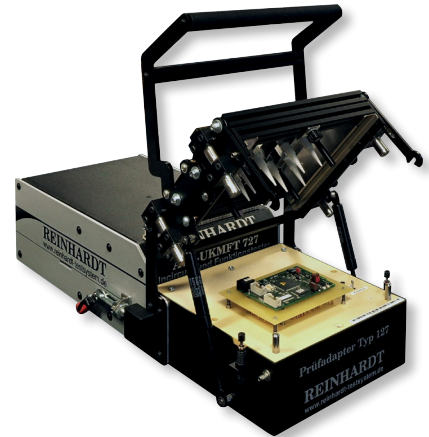

ATS-UKMFT 727 with test fixture
Type 127

Main Board

On the main board, there is the fixed voltage supply, the multiple quadrant PSUs, the sine-square wave generator, PWM-generator, the monitoring, the bus systems

- USB 2.0 5V/500 mA, 480 MHz
- SPI 2.5 kHz to 10 MHz, level can be coded internally between VPROG (default) and 5 V
- 2x I²C-Bus 56 kHz to 1 MHz (Logic level 5 V)
- 2x RS232-interface, 422/485-interface and
- 2x UART-interface 300 Hz to 1.25 MHz. The levels are either RS232/RS485- or logic compatible (can be coded internally between VPROG (default) and 5 V).
- 8 Bit Write/Read Byte, level can be coded internally between VPROG (default) or 5 V, ca. 5 kHz

and the decoding of the computer signals via an USB 2.0-interface. 8 fixture relays with single normally open contact (max. 100 V/1 A) on the UKMFT2_mainboard can also be used for fixture control. The mainboard provides the required select- and control addresses for the further modules. It also provides a bi-directional 8 Bit Write/Read Byte, its level can be coded internally between VPROG (default) or 5 V, ca. 5 kHz for external tasks (e.g. control of automatic board feed units). The mainboard holds two I²C-Bus-controllers for hardware control such as the SMT solder defect test or the fixture modules. Needless to say, it can be programmed comfortably for I²C-applications of the customer.

Standard Programmable PSUs

On the mainboard of ATS-UKMFT 727 there are four programmable multi-quadrant PSUs, two of them for 0 to +24 V, 50 mA to 1 A and two negative PSUs, 0 to -24 V, 30 mA to 0.5 A. These PSUs can be programmed with 1 mV resolution in voltage and with 10 μ A resolution in current. All PSUs have full sensing, thermo and overload switch-off, internal voltage and current monitoring.

Standard Sine and Square Wave Generator

The sine and squarewave generator on the ATS-UKMFT 727 main board can be programmed from 0 Hz to 1 MHz. Maximum voltage is 7 V_{eff} (sine) or 10 V_{pk} (squarewave) with a pulse duty factor of 0–100 % in 0.001 % steps; maximum current is at least 250 mA. The programmable offset voltage of the sine and squarewave generator is from -10 V to 10 V.

The screenshot shows a software configuration window for a signal generator. It is divided into several sections:

- Signal:** A dropdown menu is set to 'Ein'. Below it, 'Signalform:' is set to 'Sinus'. 'Frequenz:' is set to '20 kHz' and 'Amplitude:' is set to '5 Vpp'. There are also fields for 'Tastverh./Symmetrie:' and 'Offset: 0 V'.
- Benutzerdefiniertes Signal:** This section contains a 'Bezeichnung:' field, a 'Datei:' field with a browse button (three dots), and is currently empty.
- Burst:** 'Art:' is set to 'Aus'. 'Start-Phase:' is set to '0 Grad'. 'Anzahl:' is set to '1' and 'Periode:' is set to '10 ms'.

ADM670 Measuring System In-Circuit Test

The combined In-circuit and Function measuring system measures all tasks in the In-circuit test range:

The pin contact test is very important and tests if e.g. a spring-suspended contact pin makes contact with the DUT before the test it-self starts.






These measurements are resistive ($<30\text{ M}\Omega$) or if necessary capacitive too. Program generation by autolearn in a few seconds.

The net test finds e.g. conductor breaks, the isolation test discerns if there is a solder short between nets (tracks). Continuity is defined as the resistance between two pins being less than e.g. $5\ \Omega$ (programmable from $5\ \Omega$ – $5\text{ k}\Omega$). Program generation by autolearn in a few seconds.


Resistance measurement, two or four terminal, uses a DC arrangement for measuring resistors of $100\text{ m}\Omega$ to $40\text{ M}\Omega$ in test times from 3.6 ms . The test time depends on the required measuring accuracy as well as the number of averaging per test step. Program generation automatic (CAD-data required) or manual.

For measuring components in parallel connections you can include up to 8 dynamic guards, which compensate the potentials with ca. 200 mA max. current so that the component can be measured correctly. Guarding is programmed by Autoguard or manual entry.


Capacitances of only a few pF up to 50 mF are measured with high resolutions. With the help of an autocalibration, the basic capacitances are nulled and even small capacitance below 50 pF can be measured with sufficient accuracy. The required frequency is selected by software dependent on the respective measured value.

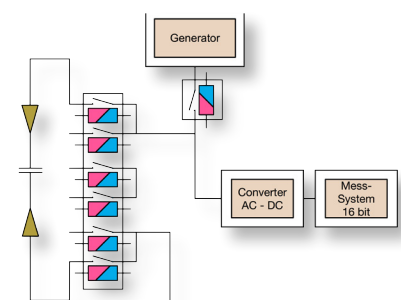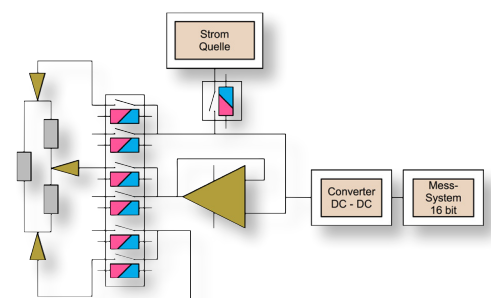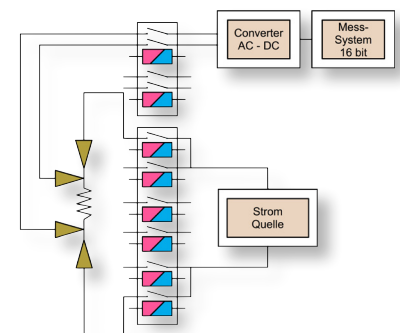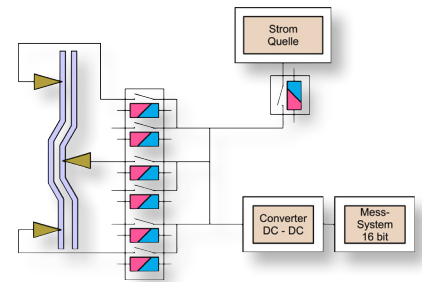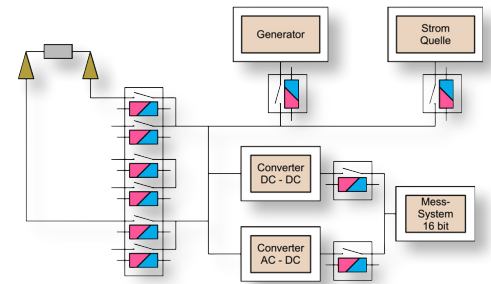


Electrolytic capacitors are also measured.

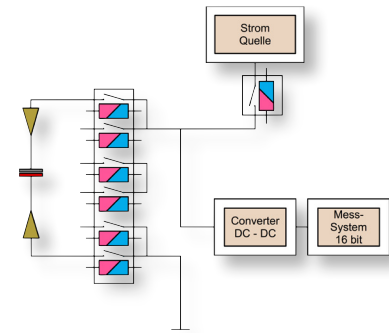


Inductances can be measured from a few μH to 2H. We use an extremely constant symmetrical sine signal with a peak to peak voltage of 400 mV. A series resistance is used to apply one of those sine wave signals to the coil to be tested. The test system automatically selects the measuring frequency.

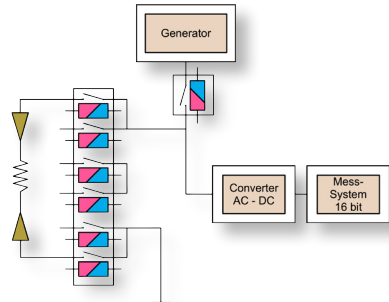


Diodes and zener diodes are measured up to voltages of 28 V. Several currents can be pre-selected.

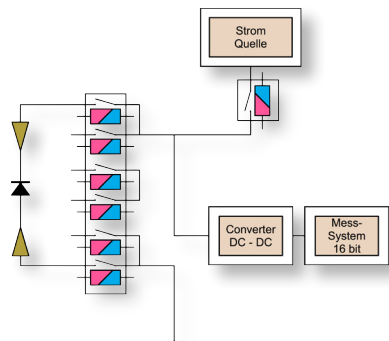


Especially with power supply units, there may be circuit constellations, such as coil and resistor and capacitors in parallel which cannot be in-circuit tested with common measuring methods. Such connections are measured with the impedance measurement. It is based on the same measuring method as is L-measurement, only difference is that the series resistor and the measuring frequency can be chosen as you want.

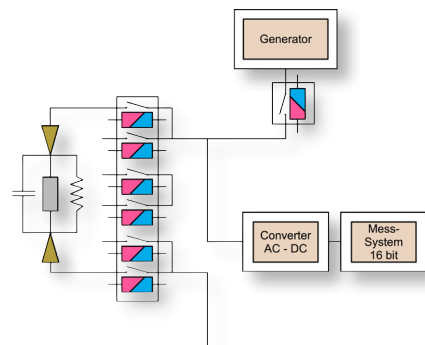


In transistor measurement, the transistor is turned on with a DC-voltage at the base. The collector-emitter voltage is measured and evaluated. The base and collector signal can be programmed in voltage and in current.

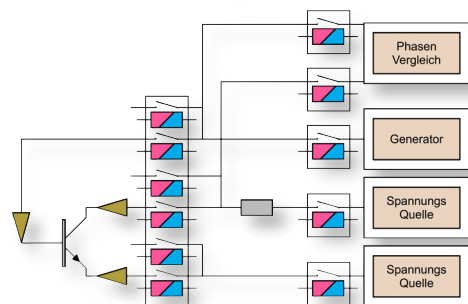

These types of transistors can be measured with the transistor measurement: NPN, PNP, P-channel MOSFET, N-channel MOSFET and J-FET transistors.

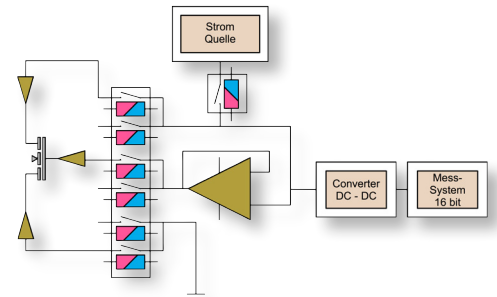

When an operational amplifier is tested, PSU1 supplies the voltage which is applied via an MMX-channel. In this test, the operational amplifier operates as buffer. A DC-voltage is applied at the non-inverting input of the operational amplifier. The output voltage of the operational amplifier is measured and evaluated.

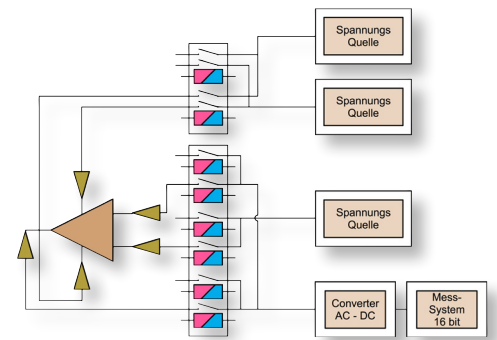

ADM Measuring Unit Function


Our measuring system function test and that for the in-circuit test are on the same board. Voltages are measured in 7 ranges from the lower mV range up to 100 V at 16 bit resolution. Basic accuracy is 0.05%.

AC voltages are measured as true RMS value from 45 Hz to 300 kHz. Peak voltage is measured up to 75 kHz.

Current is measured via external shunts which are built into the fixture.


The time and frequency measuring unit on the measuring unit is for pulse and signal ranges. Two programmable comparators are used for setting the switching level for the signal voltages from -30 V to +30 V. Measuring ranges are: frequency, periods, pulse widths, rise and fall times, event counting, pulse ratios, phase shift, delay times between two channels with a resolution of better than 50 ns.

The TRA ADM-measurement records analogue signals up to a sample width of $10\mu\text{s}$ and displays them graphically. The time base can be pre-set. You can trigger both internally and externally. The recorded signal, be it sine or any pulse form, can be evaluated fully automatically with envelope curves. For evaluation, there are of course separate measurements such as peak to peak, peak, rise time, fall time, pulse widths and frequency or periods. There is a Fourier analysis as well as a measurement of the distortion factor.

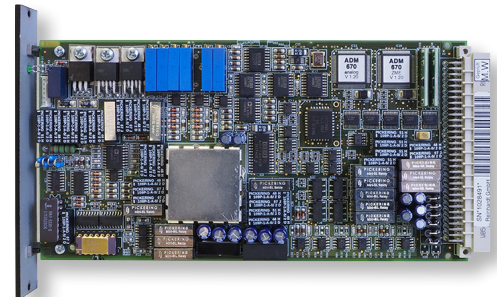

Measuring-Logic-Stimulus Matrix RML32

This combined measuring matrix, stimulus matrix and logic board comes with the basic version. With this module, you can apply analogue voltages to the measuring bus, you can connect stimulus devices such as power supply units, generators etc. to the test item and you can apply and check digital signals. The RML32 measuring-logic-stimulus matrix only has one maker per channel. The driver levels are programmed between 3.3V and 5V. There are no comparators for evaluating the applied voltage values. The input and output levels can be checked, but the levels for discerning high/low are set. The output of the pseudo PSU can be used as an additional voltage supply, 5V or 3.3V.

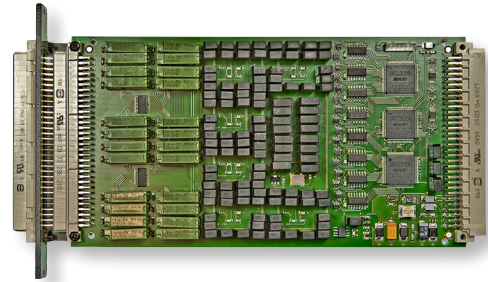


MMX670 Stimulus Matrix

The MMX670 stimulus matrix is used e.g. for engaging and switching stimulus tasks. Its application is identical with that of SMX670. It holds 48 relays which are designed for 2A switching current. The MMX670-board is compatible with SMX670, but is more flexible, since the High- and the Low-branch of each channel is no longer switched in parallel, but the High and the Low branch can be programmed individually.

There are 48 stimulus channels (one-wire technique) for potential-free stimulation and measurement in a total of 12 groups with 4 in- and outputs each.


Two 16Bit-PSUs, 0 to +24V, max. 300mA, can be programmed in 1mV-steps. Current can be programmed in 10 μ A-steps from 30–300mA. PSU2 can also be coded from 0V to -22V.

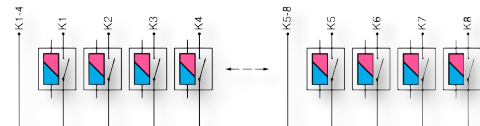

MMX72 Stimulus Matrix

The MMX72 stimulus matrix is used e.g. for engaging and switching stimulus tasks. Its application is identical with that of MMX670. It holds 72 relays which are designed for 2A switching current. The High and the Low branch of MMX72 can also be programmed individually.


There are 72 stimulus channels (one-wire technique) for potential-free stimulation and measurement in a total of 18 groups with 4 in- and outputs each.

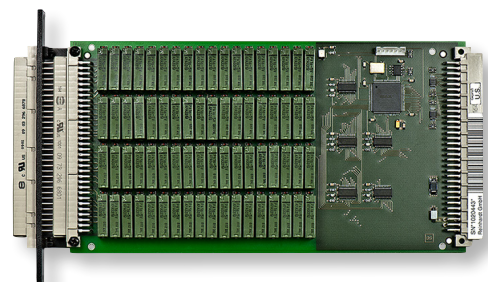

EMX48 Stimulus Matrix

The EMX48 stimulus matrix too is used e.g. for engaging and switching stimulus tasks. It holds 48 power relays with max. 90W switching power and which are designed for 230 V voltage and max. 2A switching current.

There are 48 stimulus channels (one-wire technique) for potential-free stimulation and measurement.

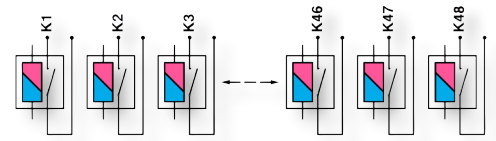


SBus

The SBus is used for applying sources such as function generator, PSUs etc., but as well any external signals to every point where the measuring matrix channels are connected to. You can measure any time in parallel to the stimulation. Because of its open make-up it is possible, e.g. to apply a logic channel to any measuring point or to several measuring points.

RMX 96 Measuring Matrix

The optional measuring matrix board with 96 measuring channels is loaded with selected miniature single-in-line-relays. There are three relays for each channel so that you can select either high, low or guard. Switching power is 10VA, max. 100V, thermo-electric voltage is far below $50\mu\text{V}$.




LOG670 Logic Boards

Logic boards are optional. Each board has got 32 bi-directional channels and tests any kind of logic. The driver level can be set between 0V and 23V. Comparator high- and low-level can also be set. The driver high-level must always be above the comparator high-level so that the high-level is controlled automatically. Each channel can be driver, comparator or Tristate or switch off fully automatically from its surroundings. The driver and comparator level can vary in every test step. With a second logic board, you can handle two logic families at a time (e.g. 3.3V logic and 5V-logic). Connected with the measuring channel, it can be switched as a hybrid channel.

LOG96 Logic Boards


The logic board with 96 logic channels is optional. Its levels can be set to 5V or 3,3V. Other than the LOG670, LOG96 has no programmable comparators for evaluating the applied voltage values. Nevertheless, the input and output levels can be checked with set levels for discerning high and low. Levels from 0–0.8V are discerned as low and levels from 2.0V–3.3V / 5V are discerned as high.

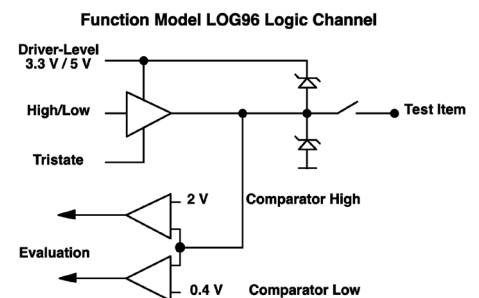

PML670 Precision-Measuring-Logic Board

Digital functions can be stimulated and evaluated with this optional module. Each of the 16 channels can be switched as input or output. Different voltage levels can be stimulated or evaluated at the same time. Each output of the PML670 can provide a precise voltage from 0.1 to 24V. One channel can be loaded with 50mA. The total current of the 16 channels may reach up to 500mA. The test item can be stimulated with 16 different voltages at the same time.

This module may also be used for 16 channel-parallel measurements, which grants very short measuring times.

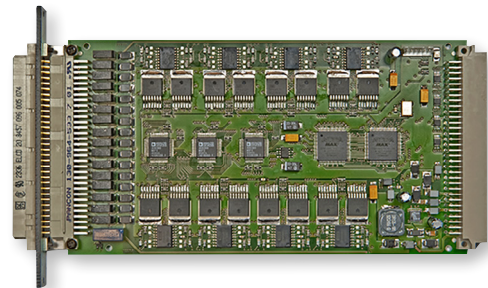


Serial Logic Data – Serial Field Bus Systems

The basic version of the ATS-UKMFT family always comes with the I2C-Bus, USB2, TCP/IP (the latter two via VISA.driver) and RS232-interface. For GPIB/IEC-/IEEE-stimulus and measuring tasks there is an optional board/interface for connecting all measuring devices common in the market such as e.g. Keysight, Tektronix, Philips, Fluke, Rohde & Schwarz so that they can be operated as comfortably as a stimulus or measuring unit of our test system. The CAN-bus can be used via a system-internal option. About 15 other fieldbus systems (PC-cards) can be built into the PC and can be addressed and evaluated comfortably by our software-windows.

TRA670 Transient Recorder (Oscilloscope –Option)

The 64k deep TRA670 transient recorder with 12bit resolution offers 50MHz bandwidth with max. 250MHz sample rate. Max. input voltage is $\pm 100V$ at min. $250\mu V$ resolution. Out of the curve forms it measures parameters such as frequency, period, rise time, fall time, pulse widths, peak voltage, distortion factor, Fourier analysis etc. Envelopes are for automatic evaluation of curve forms. 8 HF-input channels and 9 NF-input channels are available, but the transient recorder can also be used on the standard measuring bus provided by the test system. An external trigger input is also available. Input impedance can also be programmed, $1M\Omega$ or 50Ω and a second order filter can be connected.

The transient recorder records analogue signals from an input voltage range from $\pm 1V$, $\pm 10V$ and $\pm 100V$ and displays them graphically. The time base from 10ns to 5s can be pre-set. You can trigger both internally and externally – AC and DC-coupling can be pre-selected as well as the level for triggering. In digital recording, the history of a signal before the triggering point can be recorded and displayed. The recorded signal, be it sine or any pulse form, can be evaluated fully automatically with envelope curves of 2,000 points. For evaluation, there are of course separate measurements such as peak to peak, peak, rise time, fall time, pulse widths and frequency

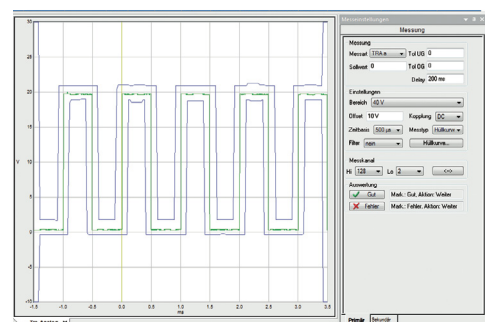


or periods. There is a Fourier analysis as well as a measurement of the distortion factor.

Function/Arbitrary Waveform Generator (optional)


By standard, ATS-UKMFT 616/627 is equipped with a generator from 0Hz to 78kHz for sine and square wave which is sufficient for most of the test tasks. Another two generators are for higher frequencies and can be programmed from 1 μ Hz to 20 MHz or 1 μ Hz to 80 MHz. We describe the 20 MHz generator below, as both generators operate very similarly and differences arise in the peak values only. Apart from sine, square wave, triangle, sawtooth, noise and pulse signals, these generators offer arbitrary functions in order to create any curve forms. As all our modules, they are programmed very comfortably in our windows. The pictures show some examples. Frequencies from 1 μ Hz to 20 MHz are available, resolutions can be set from 1 μ Hz over the complete frequency range. Burst and wobble is also possible with this generator. The amplitudes are programmed between 20 mVpp and 20 Vpp. Ramps can be programmed up to 200 kHz with 20 ppm accuracy. The generator provides a defined burst signal output. In this way it can output a certain kind of periods of any signal. Maximum frequency in the burst mode is 5 MHz. Repetitions can be programmed from 1 to 50,000 or infinite repetitions. The start phase can be programmed from -360° to $+360^\circ$. It can be programmed flat or logarithmic with 10 MHz minimum start frequency and 15 MHz maximum stop frequency. Trigger sources can be single, external or internal.

System Diagnose and Calibration Device (optional)

With the system diagnose and calibration device you can calibrate your test system on your own in a very short time (about 30 minutes) without calling the REINHARDT-service. This saves down time as well as cost. The found results are documented in a record which can be printed. The complete reference and test electronics are in a cabinet, sized 420 x 403 x 125 mm. The calibration and system diagnose device contacts all sources, measuring units and matrix channels after it is plugged on in a plug-and-play procedure. Depending on the expansion of the test system, the calibration device can be expanded with further modules at any time. All the calibration modules themselves are connected by a bus, which contains I2C-Bus, measuring bus, voltage supply etc. All reference values which are found by our special software are written into the single EEPROMs of the calibration and system diagnose device. With the calibration and system diagnose device, you can find out at any time if your test system works properly and within its specifications. This is often very comfortable if you are not sure if your test system is defective. It helps you to find defects precisely to the test system board or even the very component within a few minutes. The calibration and system diagnose unit also supports our service technicians if you

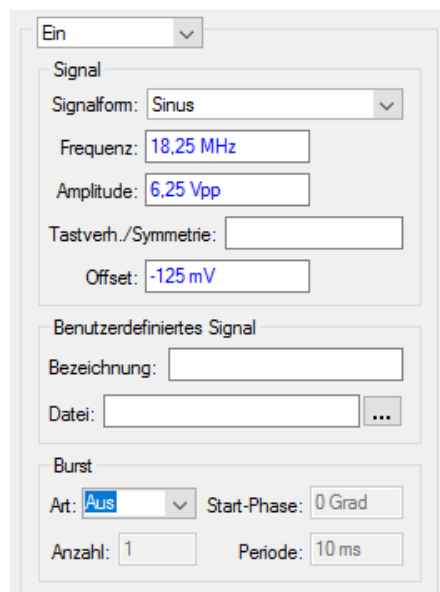

Settings curve form generator

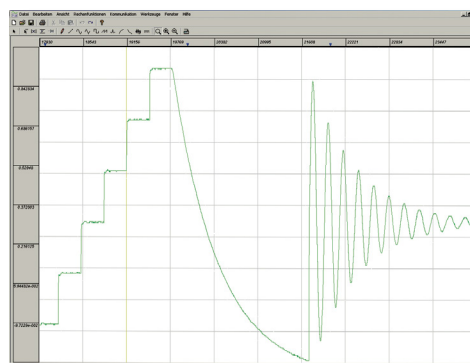

Curve form editor of the Function and Arbitrary generator



call for support and repair on the phone. It also helps to adjust e.g. the Analog-Digital-measuring unit.

The calibration and system diagnose device can be calibrated at REINHARDT – we recommend a 1–2 years interval.

The Interface

In ATS-UKMFT 727 the test system interface on the front is made up of 8 multi-way connectors (series DIN 41612). The fixtures such as Type 127 and Type 147 can be connected directly to this interface.

Fixtures

We have developed our ATS-UKMFT compact multi-function test systems especially for middle to small-sized boards. The compact multi-function test systems ATS-UKMFT 727 can be integrated e.g. in an inline facility, but it can also be expanded with a REINHARDT-universal exchange fixture. On the upper side of this fixture, there is an exchange plate (fixture plate). What is most advantageous about this system is that it costs only fractions of a complete fixture and takes only little space for storing (For more details, please see the last pages of this booklet).

This exchange plate system can be used for function and in-circuit test in retention but also in vacuum technique. Even smallest lots are then tested in a cost-effective way.

Practical Ergonomic Work Desks (optional)

All industrial work tables with 19"-sub-desks are designed in such a way that left and right of the central work place there is no legroom. Therefore we have developed an ergonomic work place whose sub-desks are all set back over the complete front so that the user enjoys legroom over the complete desk width and does not have to do without the 19" wide sub-desks. There are two versions of this working desk, either with two or three 19", 12HU-sub-desks which can also house the control PC. Optionally, this desk can be equipped with spacious 3HU drawers which can hold technical documentation etc. As an option, the 19"-sub-desks can be delivered with doors. Behind that you can mount receptions for the universal-exchange plates with bed-of-nails (380x230mm). Up to 5 exchange plates can be housed in a sub-desk.

Dimensions: Width ca. 1,780 mm, depth ca. 900 mm



Type 42A Universal-Exchange Fixture



Profile desk (picture with optional test system and accessories)

Extended Tasks Using Power Electronics

Most producers of test systems do not provide power electronics, but offer only low voltage current solutions. By contrast, REINHARDT offers special modules for testing power electronics.

The ATS-MFT and ATS-KMFT family can include all REINHARDT power electronics devices. All these tasks can easily be executed with our menu-driven software. For programming in the DC voltage range, there are several sources:

DC 30/25 DC-source, 0–30 V, 0.6 mV resolution, 0–25 A, 0.5 mA resolution, can be programmed in current and voltage; OVP; incl. RS232-interface and connection cable, ½ 19" unit, 1 HU, 482 mm deep, 7 kg

DC 60/12.5 DC-source, 0–60 V, 1.2 mV resolution, 0–12.5 A, 0.25 mA resolution, can be programmed in current and voltage; OVP; incl. RS232-interface and connection cable, ½ 19" unit, 1 HU, 482 mm deep, 7 kg

DC 600/1.3 DC-source, 0–600 V, 12 mV resolution, 0–1.3 A, 0.03 mA resolution, can be programmed in current and voltage; OVP; incl. RS232-interface and connection cable, ½ 19" unit, 1 HU, 482 mm deep, 7 kg



DC 600-4 DC-source, 0–600 V, 0–4 A, 2,400 W, can be programmed in current and voltage, incl. RS232-interface, 19" unit, 1 HU, 480 mm deep, 8.5 kg

For programming in the **AC voltage range**, there is also a number of external sources:

AC 300/500, one-phase electronic AC-source and DC-source, max. 300 VAC in 2 ranges, max. currents 4 A/2 A, 500 VA, frequency resolution 0.1 Hz, voltage 0.1 V resolution, current protected mode in 0.02 A-steps (AC and DC), frequency range 15 Hz–1 kHz, DC 0–212 V, 2 A, 213 V–424 V, 0.1 V resolution, 1 A, 3 HU, 19" wide, 570 mm deep, 21 kg, RS232-/GPIB-interface

AC 300/800, one-phase, max. 300 V in 2 ranges, max. currents 5 A/2.5 A, 800 VA, frequency resolution 0.1 Hz, voltage 0.1 V resolution, frequency range 45–500 Hz, 2 HU, 19" wide, RS232-interface

AC 300/1000, one-phase electronic AC-source and DC-source, max. 300 VAC in 2 ranges, max. currents 8 A/4 A, 1000 VA, frequency resolution 0.1 Hz, voltage 0.1 V resolution, current protected mode in 0.02 A-steps (AC and DC), frequency range 15 Hz–1 kHz, DC 0–212 V, 4 A, 213 V–424 V, 0.1 V resolution 2 A, 3 HU, 19" wide, 570 mm deep, 21 kg, RS232-/GPIB-interface

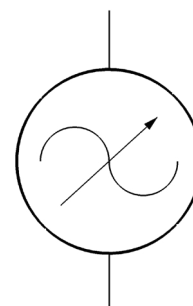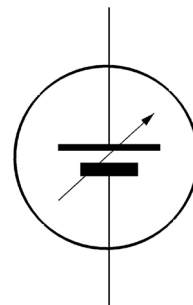

The **POMO80 power module** was designed for the 48 V-technology which is very common in the automobile industries which requires test voltages up to 70 V. They are especially used in the automobile range for simulating the voltage of the vehicle electrical distribution system. During the start procedure in winter this voltage often breaks down in a sinusoidal way between 6 V and 9 V.

The DC-modules are linear-controlled and can be started and turned-off in any form of ramp as can the loads (soft-start). Ramp and curve functions can be edited, also for DC. The loads can be modulated up to 50 kHz frequency, the starting current can be set. Via the USB-interface there is a standard possibility of re-reading the true-values. Total power is up to 1,000 V. A system diagnose and adjustment of the modules is possible by correction values which are stored in an EEPROM. The customer can thus check and calibrate his unit at his site.

Dimensions: 19", 3 HU, 450 mm deep, weight 25 kg, can be delivered as a 19"-desktop unit or a 19" build-in unit (please advise in your order). There are 7 variations of the unit (For variations and technical data please see the table in the measuring ranges.).



High Voltage Protection – Protection Module for the In-circuit-Test

Relays and inductive components may occasionally cause peak voltages up to 3,000 or 4,000V when voltages are turned off. These high voltages may damage the test system. With the high voltage protection module these voltages are limited by very fast switching bidirectional suppressor diodes at ca. 100V. The low capacitance of ca. 500pF have little effect on the In-circuit test. This module with 64 diodes is mounted to the RMX-connector of the exchange plate.


High Voltage Test

according to the safety regulations up to 2,500V or 3,000V is not possible with our test systems.

HVT 16 Voltage Divider for Measuring up to 1,000V

For measuring up to 1,000 V with our multi-function test systems, we have developed a voltage divider module with 16 channels. They can be expanded as needed. The module is plugged onto the connector in your test fixture and connected to the pins via wire wrap.

Test Fixture with Stimulus and Measuring Modules

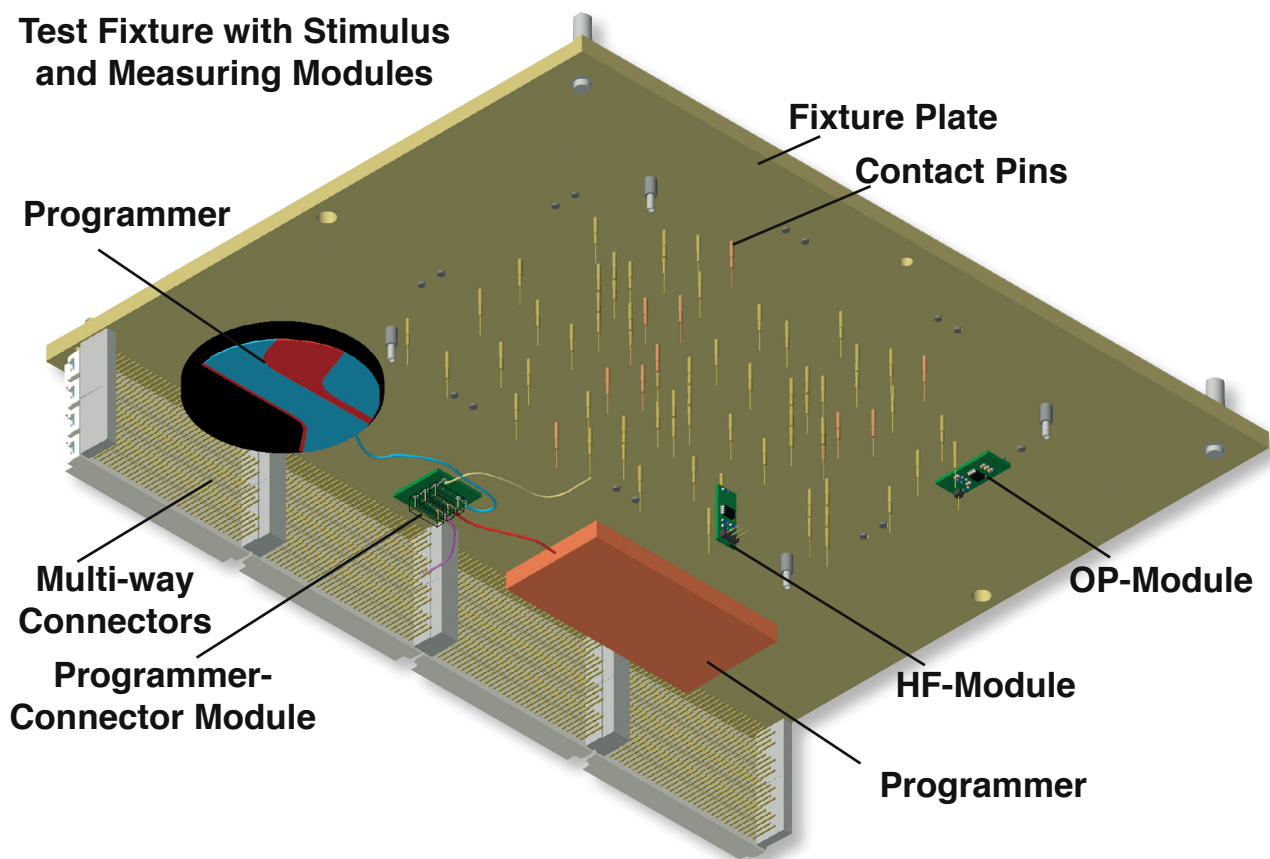


Support Modules For Mounting into the Fixture

For special tasks which cannot be solved sufficiently by the test system, we have developed a number of modules which are mounted into the fixture. These are small modules, typically sized 10x13 or 13x29mm. In most cases they are mounted to the test pin so that the cables have minimum length.

These modules are supplied by a voltage supply module which takes its operating voltage from the test system. The I²C-Bus signal is also applied in this module and is necessary for the stimulus modules for voltage, current, frequency and pulse.


HFMOD High Frequency Measuring and Dividing Module 200–1,100 MHz

With the small HFMOD-Module you can measure high frequency voltages between 0.5 mV to 3 V which are divided by 128 via a high frequency divider. The output of this module is connected to a measuring channel of the test system. It is evaluated by the REINHARDT-measuring unit in the ZME measuring range.




HFPKMOD Peak Voltage Measuring Module

This measuring module changes peak voltages up to max. 100 MHz into a DC-voltage which can then be measured by the test system. This only works with voltages above 400 mV, as it is done with a passive peak value rectification.

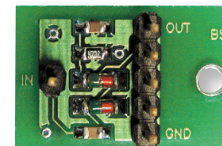


OPAMOD Impedance Transformer

This buffer module has got 1 T Ω input impedance at 8 pF. In the +/-10 V voltage range it creates an identical output voltage. The impedance transformer can be used up to 150 kHz.




OPTOMOD Opto-Coupler Module

Depending on its use, there are different signals in the items to be tested on various potentials. With the input/output isolation module, made up of two opto-couplers, they can be measured without loading the item under test unnecessarily. Signal amplitude is 0 V to 5 V, maximum usable frequency is 5 MHz.



STROMMOD Current Measuring Module

The module is equipped with a shunt and an operational amplifier and changes the voltage that falls at the shunt into a ground-related voltage. With various shunts or the Gain-resistance, the module can be adapted to the various requirements.



DACMOD Current and Voltage Supplier Module

The module is controlled by I²C-Bus and generates voltage or constant current. Voltage range is between 0 and 10 V, current range is between 0 and 25 mA. Resolution is 12 bit.



GenMOD Sine and Square Wave Module

The module is controlled by I²C-Bus. The GenMOD creates output frequencies between 1 Hz and 65 kHz. Resolution is 1 Hz. Output voltage in the sine range is 5 V_{pp}, square wave output is a TTL-output.




HFGenMOD HF-Square Wave Module

The square wave generator module creates a fixed square wave frequency. Output frequency is set via two potentiometers (coarse and fine). Various frequency ranges are selected via coding connectors. Maximum output frequency is 30 MHz.



PGENMOD Pulse Generator Module

The module was developed for additional generator stimulating. It creates the following signals: square wave signal on output 1, phase-shifted square wave signals on all three outputs and burst-impulses. There is a RISC-processor (PIC) which is controlled by I²C-Bus and three output transistors whose open-collector level is by standard bridged to +5 V. By applying an external driver voltage and converting a jumper, the level can be changed to up to 25 V. This module can program frequency from 1.1 Hz to 5 MHz and generate pulse width from 50 ns to several hundred ms.




ReIMOD Relay Module

This module switches max. 200 V and 0.5 A at 10 W maximum power. There is one normally open contact. The coil resistance is 500 Ω. The coil is switched with 5 V.




HVReIMOD High Voltage Relay Module

This module switches operating voltages up to 250 V_{eff} at 5 A current with max. 1,000 VA power. There are 2 normally open contacts. The coil resistance is 130 Ω. The coil is switched with 5 V.




AdapLMXModule

This board is mounted to the exchange plate. The board can be addressed via RS232-interface or I²C-bus via the test system and supplies 8 relays and 2 control bits for the function test. The relays of channels 1–4 can switch voltages of 250 V and currents of 4 A at max. 1,000 VA. The relays of channels 5–8 can switch 16 A at 250 V and max. 2,000 VA. Power switching is available within the fixture plate.

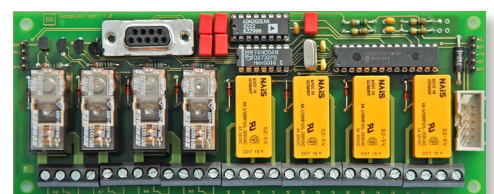


MicMod Microphone Module

With the microphone module you can check sound outputs of you component. On the module there is a microphone and an amplifier. The amplifier output signal is wired to the measuring matrix channels of the test system which then evaluates frequency and amplitude. Amplification can be set in three levels.

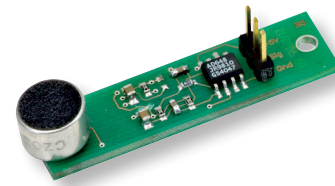

FARB-LED-Module

The microprocessor-controlled LED-test module evaluates LED-colours. A sensor with configurable colour diodes separates the light colour into its red, green and blue shares. A PIC-processor returns the RGB-values via I²C-bus as evaluation. A colour shade is calculated which is used for colour evaluation. With a lighting-LED, a surface colour can also be evaluated. The module can also be used without I²C-bus; then the PIC-processor creates two voltage outputs with values between 0–5 V which are proportional to luminosity and colour value.

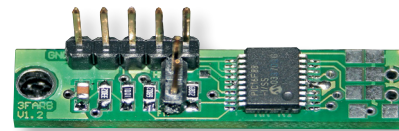


16FARBMod Module

The 16FARBMod module was developed for evaluating colours and intensity of LEDs automatically. 16 identical sensors on the board use their configurable photo diodes to separate the light colours into their red, green and blue shares. Interpretation and evaluation is via a PIC-processor which returns the RGB-values and the HSV-colour value as evaluation. Communication is via I²C-bus or alternatively via RS232.


The sensors cover the colour range 300 nm to 700 nm. Light current is supplied by glass fibre.

In the basic version, there is the evaluation module and 8 waveguides. Another 8 waveguides are optional.

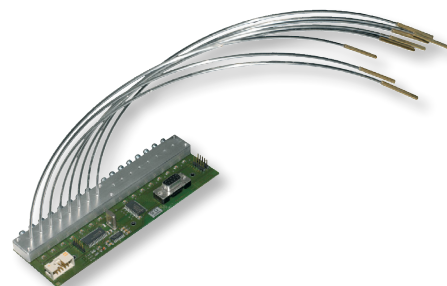

TempMOD Temperature and Humidity Measuring Module

The TempMOD Temperature and humidity measuring module measures temperature and humidity via the I²C-Bus. The 3.3 V supply voltage is generated by a voltage regulator.

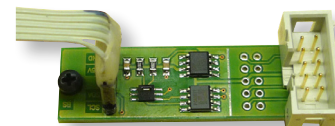

Spring-suspended Switch Contact Pin

With this spring-suspended switch contact pin you can find out, if a component is loaded or scan markings or codings. In this contact pin, there is a switch which closes when the contact pin is pressed in. The spring-suspended contact pin incl. receptacle has got an outer diameter of 1.7 mm.




Pneumatic Contact Pin

The contact pin has got an outer diameter of 3 mm plus receptacle and is activated by a pneumatic valve. A critical joint is only contacted when it is necessary so that it is not loaded during the test procedure.



Programmer-Connector Module ProgMOD16

The ProgMOD16-module is used for interconnecting the programming connections. The ProgMOD 16 Programmer connector module is a 3fold exchangeable module for up to 8 connections, in order to either connect an RMX-channel or two different programming connections to the test pin and reduce interferences. There is a connector for up to 2 JTAG-programmers (e.g. J-Link, Olimex, REINHARDT RBS100,...) to directly plug in the programmers. There is also a connector which fits the PICKit2 or PICKit3 by Mikrochip.

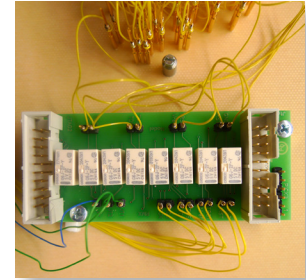


Electronic Actuator M12

The electronic actuator M12 moves keys and switches in case there is no compressed air. The shift of 12.7mm can be programmed in 170 steps. An integrated worm in the stepping motor changes the rotation into a travel movement. The actuator module is controlled via I²C bus or via 2 pins which are used for selecting 3 fixed positions.



SteuerMod-Inline USB-Module

As communication interface to a SPS, the SteuerMod-Inline USB module can be used to integrate a test system into a production line. The module is built into a top-hat rail housing. With a screw clamp it can be connected to an SPS. Its USB-socket is used to connect it to the control computer. A lamp control is integrated. A red light indicates a faulty and a green light shows a faultless test run. Blue shows e. g. a Stop which indicates that the operator has to intervene.

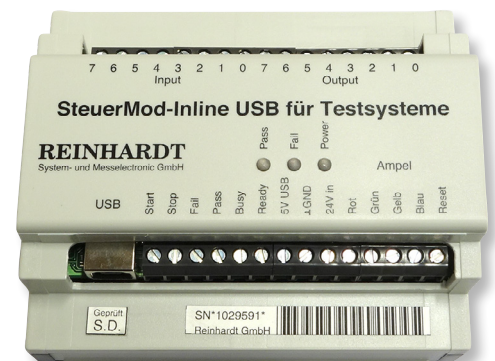

Start Stop Steuerung USB-Module


The Start Stop Steuerung USB-module is a start-/stop key for the test systems. Alternative start-/stop impulses can be created with lighted metal buttons which are normally moved by the RETURN/ESC-key on the keyboard or with the mouse. Communication is via USB.



TrigMessMod


The TrigMessMod is for measuring a triggered voltage, i. e. a voltage that is controlled by another signal in the range between 0–5 V. This measurement is executed on the module. The time of the measurement is triggered via TTL-input and can also be postponed with a programmable delay time.

If the module is slightly modified, the voltage range can also be adapted to smaller or negative voltages.

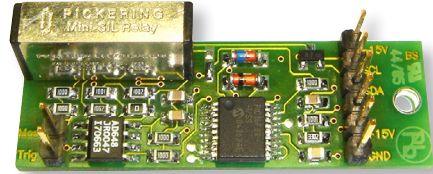


ADAEEP Fixture Recognition Module

A fixture or an exchange plate can be assigned to a project. The assignment is written to an I²C-EEPROM, address 166, on the ADAEEP. When the fixture or exchange plate is changed, the test system-software automatically loads the respective project or warns if a project that is not assigned is to be loaded manually.

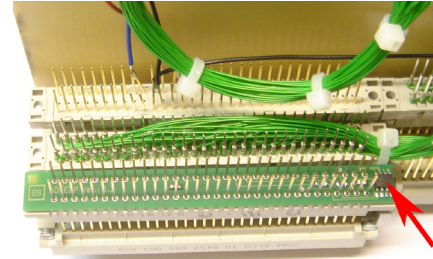


Circle Marker

The electric circle marker for marking tested PCB engraves the PCB with a 2 mm circle and requires 6–12 VDC for control. With a fixing angle, the electric circle marker can be fixed to the retention exchange box for REINHARDT-fixtures.

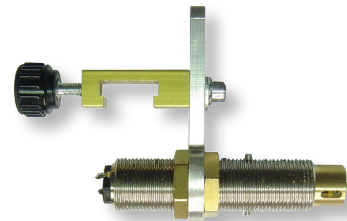

DUT_LED Module Optical Display of Status


When e.g. multiple printed panels are tested it may happen that you no longer know which panel has already been tested and if it was good or faulty. The DUT_LED module can be mounted on the exchange plate. The red LED displays the faulty, the green LED the good test run and a blinking yellow LED displays the busy-mode. A prompt if the test item was removed is also possible. Communication is via the I²C-Bus.

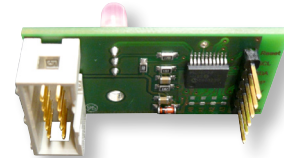

BEE-Module – Recognition if a Board is Placed or Removed

The module recognises if a board (PCB) is placed in the fixture with bed-of-nails or if it has been removed while the fixture was not contacted; retroreflective sensor, class 1M laser (invisible laser radiation, do not view directly with optical instruments), 5 VDC-supply, max. 50 mA, digital output, sensitivity can be set.

We recommend the DUT_LED-module for optical evaluation and display.

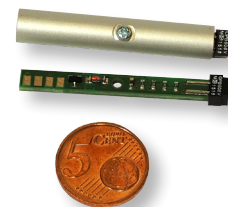

Measuring Ranges

In-circuit Test

Pin Contact Test

The pin contact test confirms whether the wired measuring channels and test item contacts have a resistance of less than 30 M Ω or a capacitance of more than 100 pF...10 nF relative to the system pin. This is useful for example in checking whether a test pin has jammed or is contaminated with flux. Learning a pin contact test checks if there is an Ohm or a capacitive connection to the system pin. The result is saved in a test project. The test time depends on the learnt measuring method and can be between 5 ms and 65 ms.

Measuring method R: A constant voltage is generated and applied to the test item via a series resistance. The voltage drop at the test item is measured and evaluated. In the learning procedure, the measuring direction is learnt so that the diodes are captured correctly. We use series resistances of 100 k Ω and 1 M Ω .

Measuring method C: The standard-C measurement in the 1 nF-range is used (please see paragraph C-Measurement) for this measurement.

| Meas.Mode | Meas.Range max. | Series Resistance | Test Voltage max. |
|-----------|-----------------|-------------------|----------------------|
| R | 30 M Ω | 1 M Ω | 5 V |
| C | 1 nF | 1 k Ω | 200 mV _{pk} |

Net Test (Continuity Test)

There is a net (continuity) if the resistance between two pins is below the net threshold value. The net threshold value can be set between 5 Ω and 5 k Ω .

Measuring method: A constant voltage (0.2 V) is generated and applied to the test item via a series resistance. Up to a net threshold value of 30 Ω , the series resistance is 10 Ω , above 30 Ω , it is 1 k Ω . The voltage drop at the test item is measured and evaluated.

| Meas. Range | Meas.Time | Test Voltage max. |
|--------------------------|--------------------|-------------------|
| 5 Ω –5 k Ω | 5 ms per test step | 0.2 V |

Isolation Test


In the isolation test, existing circuit continuity is tested to check whether the resistance between circuits is below the value given in the continuity test. (There is a field for changing the default limit value for isolation test e.g. 5 Ω –5 k Ω .) We use the same measuring method as in net test.

| Meas.Time | Test Voltage max. | Test Current max. |
|--------------------|-------------------|-------------------|
| 5 ms per test step | 0.2 V | 20 mA |

SMT Solder Defect Test

The IC-Open Test (IC Solder defect test) was developed for SMT-components on bus systems.

Method: With the fixture the IC-Open Probe is applied from above to the IC under test. All inputs of the IC (connection pins) are connected to ground. Ground is then disconnected from one pin after the other and a signal of 8 kHz and a voltage of 141 mV_{eff} is triggered. If the pins are connected, there is always a coupling to the IC-Open probe. The AC-signal received is amplified by a selective amplifier and can then be evaluated by the test system. Measuring time is about 10 ms per pin.

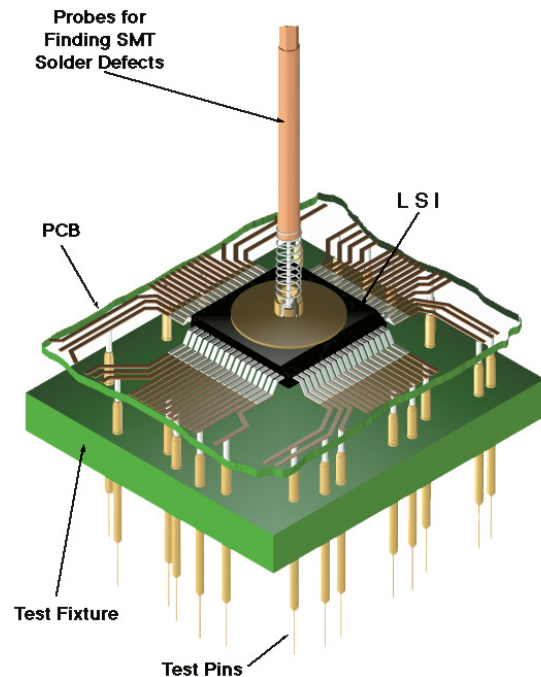

R-Measurement

Resistance measurement is in 8 ranges. The accuracies given below were found in a four-terminal measurement. In four-terminal resistance measurement, the measuring time rises by 10 ms. You can choose from four measuring speeds. For the four-terminal measurement, you need an MMX670-stimulus matrix. The measuring range of resistance measurement is 0 Ω to 40 MΩ. In the ranges from 0 Ω to 400 kΩ, max. evaluation voltage is 200 mV, in the 400 kΩ to 40 MΩ ranges max. evaluation voltage is 2 V. With the measuring times given below, all relay switching times have been taken into account.

Selected speed: **extra**

| Meas.Range | Full Scale | Resolution | Meas.Current | Meas.Time | Accuracy %* |
|--------------|---------------|------------|--------------|-----------|-------------|
| 0 Ω–4 Ω | 0 Ω–4.000 Ω | 244 μΩ | 50 mA | 3.6 ms | 1.5+0.5 |
| 4 Ω–40 Ω | 0 Ω–40.00 Ω | 2.44 mΩ | 5 mA | 3.6 ms | 1.5+0.5 |
| 40 Ω–400 Ω | 0 Ω–400.0 Ω | 24.4 mΩ | 0.5 mA | 3.6 ms | 1.5+0.5 |
| 400 Ω–4000 Ω | 0 Ω–4000 Ω | 0.244 Ω | 50 μA | 3.6 ms | 1.5+0.5 |
| 4 kΩ–40 kΩ | 0 kΩ–40.00 kΩ | 2.44 Ω | 5 μA | 3.6 ms | 2.5+0.5 |
| 40 kΩ–400 kΩ | 0 kΩ–400.0 kΩ | 24.4 Ω | 0.5 μA | 6.7 ms | 7.5+0.2 |
| 400 kΩ–4 MΩ | 0 MΩ–4 MΩ | 244 Ω | 0.5 μA | 11.2 ms | 10+0.1 |
| 4 MΩ–40 MΩ | 0 MΩ–40.00 MΩ | 2.44 kΩ | 50 nA | 22 ms | 10+0.5 |

Selected speed: **fast**

| Meas.Range | Full Scale | Resolution | Meas.Current | Meas.Time | Accuracy %* |
|--------------|---------------|------------|--------------|-----------|-------------|
| 0 Ω–4 Ω | 0 Ω–4.000 Ω | 244 μΩ | 50 mA | 4.4 ms | 0.75+0.5 |
| 4 Ω–40 Ω | 0 Ω–40.00 Ω | 2.44 mΩ | 5 mA | 4.4 ms | 0.75+0.10 |
| 40 Ω–400 Ω | 0 Ω–400.0 Ω | 24.4 mΩ | 0.5 mA | 4.4 ms | 0.75+0.01 |
| 400 Ω–4000 Ω | 0 Ω–4000 Ω | 0.244 Ω | 50 μA | 4.4 ms | 0.5+0.01 |
| 4 kΩ–40 kΩ | 0 kΩ–40.00 kΩ | 2.44 Ω | 5 μA | 4.4 ms | 0.5+0.01 |
| 40 kΩ–400 kΩ | 0 kΩ–400.0 kΩ | 24.4 Ω | 0.5 μA | 10 ms | 0.5+0.2 |
| 400 kΩ–4 MΩ | 0 MΩ–4 MΩ | 244 Ω | 0.5 μA | 20 ms | 5+0.1 |
| 4 MΩ–40 MΩ | 0 MΩ–40.00 MΩ | 2.44 kΩ | 50 nA | 50 ms | 5+0.5 |

* The first value is in percent of the measured value, the second value is in percent of the measuring range. Standard settings are marked in grey.

Selected speed: **medium**

| Meas.Range | Full Scale | Resolution | Meas.Current | Meas.Time | Accuracy %* |
|--------------|---------------|------------|--------------|-----------|-------------|
| 0 Ω–4 Ω | 0 Ω–4.000 Ω | 244 μΩ | 50 mA | 25 ms | 0.65+0.3 |
| 4 Ω–40 Ω | 0 Ω–40.00 Ω | 2.44 mΩ | 5 mA | 25 ms | 0.65+0.03 |
| 40 Ω–400 Ω | 0 Ω–400.0 Ω | 24.4 mΩ | 0.5 mA | 25 ms | 0.65+0.01 |
| 400 Ω–4000 Ω | 0 Ω–4000 Ω | 0.244 Ω | 50 μA | 25 ms | 0.4+0.01 |
| 4 kΩ–40 kΩ | 0 kΩ–40.00 kΩ | 2.44 Ω | 5 μA | 25 ms | 0.4+0.01 |
| 40 kΩ–400 kΩ | 0 kΩ–400.0 kΩ | 24.4 Ω | 0.5 μA | 30 ms | 0.6+0.01 |
| 400 kΩ–4 MΩ | 0 MΩ–4 MΩ | 244 Ω | 0.5 μA | 40 ms | 1.0+0.01 |
| 4 MΩ–40 MΩ | 0 MΩ–40.00 MΩ | 2.44 kΩ | 50 nA | 150 ms | 1.5+0.2 |

* The first value is in percent of the measured value, the second value is in percent of the measuring range. Standard settings are marked in grey.

Selected speed: **slow**

| Meas.Range | Full Scale | Resolution | Meas.Current | Meas.Time | Accuracy %* |
|--------------|---------------|------------|--------------|-----------|-------------|
| 0 Ω–4 Ω | 0 Ω–4.000 Ω | 244 μΩ | 50 mA | 205 ms | 0.5+0.03 |
| 4 Ω–40 Ω | 0 Ω–40.00 Ω | 2.44 mΩ | 5 mA | 205 ms | 0.5+0.01 |
| 40 Ω–400 Ω | 0 Ω–400.0 Ω | 24.4 mΩ | 0.5 mA | 205 ms | 0.5+0.01 |
| 400 Ω–4000 Ω | 0 Ω–4000 Ω | 0.244 Ω | 50 μA | 205 ms | 0.3+0.01 |
| 4 kΩ–40 kΩ | 0 kΩ–40.00 kΩ | 2.44 Ω | 5 μA | 205 ms | 0.3+0.01 |
| 40 kΩ–400 kΩ | 0 kΩ–400.0 kΩ | 24.4 Ω | 0.5 μA | 210 ms | 0.5+0.01 |
| 400 kΩ–4 MΩ | 0 MΩ–4 MΩ | 244 Ω | 0.5 μA | 220 ms | 0.5+0.01 |
| 4 MΩ–40 MΩ | 0 MΩ–40.00 MΩ | 2.44 kΩ | 50 nA | 480 ms | 0.75+0.01 |

* The first value is in percent of the measured value, the second value is in percent of the measuring range.

C-Measurement

We use two different measuring methods for measuring capacitance:

1. In C measurements from 1 pF to 10 μ F we use highly constant, symmetrical sine wave signals with a peak to peak voltage of 400 mV.

Method C-Measurement: Via a series resistor, a sine signal is applied to the capacitor to be tested. The AC-voltage drop at the capacitor is measured and evaluated. Depending on the desired value you enter, the test system automatically selects the measuring frequency.

Selected speed: **Fast**

| Meas.Range | Frequency | Ser.Resist. | Voltage max. | Meas.Time | Tolerance % |
|----------------------|-----------|--------------|--------------|-----------|-------------|
| 1 pF–1 nF | 90.5 kHz | 1 k Ω | 400 mVpp | 18 ms | 1.5+1 |
| 1 nF–10 nF | 50.5 kHz | 1 k Ω | 400 mVpp | 18 ms | 1.5+0.2 |
| 10 nF–100 nF | 10 kHz | 1 k Ω | 400 mVpp | 18 ms | 1.5+0.2 |
| 100 nF–1 μ F | 1 kHz | 1 k Ω | 400 mVpp | 18 ms | 1.5+0.2 |
| 1 μ F–10 μ F | 100 Hz | 1 k Ω | 400 mVpp | 35 ms | 1.5+0.2 |

Selected speed: **Standard**

| Meas.Range | Frequency | Ser.Resist. | Voltage max. | Meas.Time | Tolerance % |
|----------------------|-----------|--------------|--------------|-----------|-------------|
| 1 pF–1 nF | 90.5 kHz | 1 k Ω | 400 mVpp | 21 ms | 1.5+1 |
| 1 nF–10 nF | 50.5 kHz | 1 k Ω | 400 mVpp | 26 ms | 1.5+0.2 |
| 10 nF–100 nF | 10 kHz | 1 k Ω | 400 mVpp | 26 ms | 1.5+0.2 |
| 100 nF–1 μ F | 1 kHz | 1 k Ω | 400 mVpp | 26 ms | 1.5+0.2 |
| 1 μ F–10 μ F | 100 Hz | 1 k Ω | 400 mVpp | 51 ms | 1.5+0.2 |

* The first value is in percent of the measured value, the second value is in percent of the measuring range.

2. The second measuring method (current-pulse principle) covers the range 10 μ F to 10 mF.

Method: To start with the capacitor to be tested is discharged so that any residual charge does not affect the measured value. Using a precision current pulse of 50 μ A, 0.5 mA or 5 mA the capacitor to be tested is charged for a fixed time of 30 ms. To evaluate the capacitance, the voltage at the capacitor is measured and the computer then calculates the capacitance. After the measurement, the measuring unit discharges the capacitance to 0V.

Selected speed: **Fast**

| Meas.Range | Precision Current | Voltage max. | Meas.Time * | Tolerance % |
|-------------------------|-------------------|--------------|-------------|-------------|
| 10 μ sF–100 μ F | 50 μ A | 650 mV | 46 ms | 3+0.1 |
| 100 μ F–1 mF | 0.5 mA | 650 mV | 51 ms | 3+0.1 |
| 1 mF–10 mF | 5 mA | 650 mV | 82 ms | 3+0.1 |

Selected speed: **Standard**

| Meas.Range | Precision Current | Voltage max. | Meas.Time * | Tolerance % |
|-------------------------|-------------------|--------------|-------------|-------------|
| 10 μ sF–100 μ F | 50 μ A | 650 mV | 75 ms | 3+0.1 |
| 100 μ F–1 mF | 0.5 mA | 650 mV | 85 ms | 3+0.1 |
| 1 mF–10 mF | 5 mA | 650 mV | 125 ms | 3+0.1 |

* In order to reach this measuring time, the capacitor must be discharged before the measurement.

Tolerance: The first value is in percent of the measured value, the second value is in percent of the measuring range.

Diode Measurement

No-load voltage in Zener diode measurement can be programmed as needed from 0–22 V with 14 mV resolution. In diode measurement, no-load voltage is set to 2 V.

Method: A programmable constant current is applied to the diode to be tested and parallel to that the threshold voltage or the zener voltage is measured. Diodes can also be measured in a four-terminal measurement.

| | Meas.Time | Current | Voltage max. |
|------------------|-----------|-----------------------------|--------------|
| D Diodes | 5.5 ms | 100 μ A–1mA–10mA–100 mA | 2V |
| Z Diodes (<10 V) | 17 ms | 100 μ A–1mA–10mA–100 mA | 22V |
| Z Diodes (>10 V) | 20 ms | | |
| ZM Measurement | 5 ms | 100 μ A–1mA–10mA–100 mA | 10V |

In all ranges, the accuracy of the measuring current is 2%.

Transistor Measurement

Method: Transistor measurement checks if a transistor connects through. The required basic signal can be programmed in voltage from 0 to 10 V and in current in steps 50 μ A, 500 μ A, 5 mA and 50 mA. The same voltages and currents are available for the collector signal. Current accuracy is 2%. A collector-emitter voltage is measured and evaluated. There are measuring modes for NPN, PNP and JFet. By selecting the basis and collector voltage, the respective MOSFET-types can be tested with the NPN and PNP measuring modes. Measuring time is 5.5 ms.

Inductance Measurement

Method: Extremely constant symmetrical sinewave signals with a peak to peak voltage of 400 mV are used for measuring coils from $4\ \mu\text{H}$ to 2 H. One of the sinewave signals is applied to the coil to be tested via a series resistor. The AC-voltage drop at the series resistor and at the coil under test is measured and evaluated. The inductance is calculated from the two measured values, the constant input voltage, the frequency and the series resistor. Depending on the desired value you enter, the measuring frequency is automatically set by the test system.

| Meas.Range | Min. Quality | Ser.Resist. | Frequency | Meas.Time | Tolerance % |
|--|--------------|---------------|-----------|-----------|-------------|
| $4\ \mu\text{H}$ – $40\ \mu\text{H}$ | 1 | $10\ \Omega$ | 50 kHz | 115 ms | 5+0.5 |
| $40\ \mu\text{H}$ – $400\ \mu\text{H}$ | 1 | $100\ \Omega$ | 50 kHz | 115 ms | 5+0.5 |
| $400\ \mu\text{H}$ –4 mH | 2 | $100\ \Omega$ | 10 kHz | 115 ms | 4+0.1 |
| 4 mH–40 mH | 2 | 1 k Ω | 10 kHz | 115 ms | 4+0.1 |
| 40 mH–400 mH | 1 | 1 k Ω | 1 kHz | 125 ms | 4+0.1 |
| 400 mH–2 H | 2 | 1 k Ω | 100 Hz | 125 ms | 4+0.1 |

Tolerance: The first value is in percent of the measured value, the second value is in percent of the measuring range.

Impedance Measurement IM

Method: We use the same measuring method as in L-measurement. The only difference is that the frequency and the series resistance can be programmed. The measuring result is given in Ω .

| Frequency | Voltage | Series Resistance | Meas.Time |
|---------------|---------|---|-----------|
| 40 Hz–500 Hz | 400 mV | $10\ \Omega$, $100\ \Omega$, 1 k Ω | 115 ms |
| 500 Hz–50 kHz | 400 mV | $10\ \Omega$, $100\ \Omega$, 1 k Ω | 900 ms |


Guarding

You can guard in the In-circuit measuring ranges R, C, L, D, Z and IM. 8 Guard channels can be closed per test step. Max. Guard current is limited at ca. 120 mA.

Measuring Polarity

CP-measurement measures polarity of Elcaps, **CA-measurement** measures capacitive coupling. *Both measuring ranges are optional and only work with the necessary hardware.*

Method: Ground or a sine signal 141 mV, 5 Hz ... 1 kHz) resp. are alternatingly applied to the polarised capacitor. A capacitive probe measures the coupling (signal strength) on the capacitor housing. The small signal is amplified by a selective amplifier. Then the amplitude of the signal is evaluated by applying the signal alternatingly. There is an obvious difference between a minus and a plus signal. (The signal is obviously higher at minus-application than at plus-application.)
Measuring time up to 200 Hz is 200 ms plus a period of the set frequency. Above 200 Hz, measuring time is 15 ms plus twice a period.

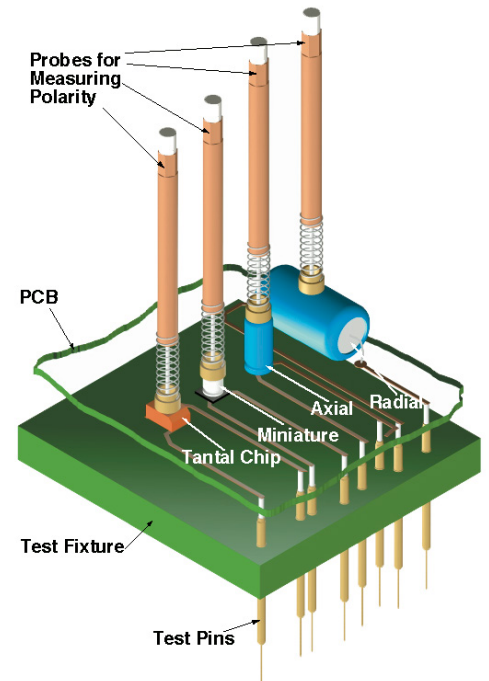

Measuring an Operational Amplifier

Method: PSU1 generates the supply voltage for the operational amplifier OPV. This voltage is applied to the test item via a stimulus matrix channel. Via two RMX-channels the output is connected to the inverting input of the operational amplifier. So the operational amplifier is used as buffer. At the non-inverting input a DC-voltage is applied which can be programmed from 0 to 10 V with a current limitation from 0 to 100 mA. The output voltage of the operational amplifier is measured and evaluated. With a good operational amplifier, the output voltage must be identical with that of the programmed input voltage.

Thyristor Measurement

Method: A constant current is applied to the thyristors to be tested. Maximum voltage of the current source is 3 V. First there is a check if the thyristor has turned on. If the anode-cathode-voltage drops below 2.8 V in this measurement, the measuring result is "Fail". Then a drive voltage is applied to the gate. The anode-cathode voltage is measured now and displayed in the measuring window. The anode-cathode current can be programmed from 1 to 100 mA.

You can choose between measuring modes P-Gate, N-Gate and Triac.

Relay Measurement

Method: In relay measurement the resistance of a closed relay contact is measured and evaluated. It also tests if a relay switches. The control voltage of the relay can be programmed from 0 V to 27 V and the current from 0 mA to 100 mA. The measuring current for capturing the closed relay contact is always 50 mA. The measuring range goes to 25 Ω (max. measuring voltage 1.25 V). There is a four-terminal measurement for capturing the exact resistance. A measuring voltage of 3.5 V is used for checking if the relay contact is always closed (sealed). If the resistance value of the open relay contact drops below 31.5 Ω , the measuring result is "short". You can choose between relays with normally open or normally closed contacts.

Opto-coupler Measurement

Method: The collector-emitter-voltage is evaluated with a controlled opto-coupler. The LED-drive voltage can be programmed from 0 V to 27 V and the current from 0.1 mA to 100 mA. There is also a check, if the output transistor is high-resistive when the LED is not driven. The high resistance check is made with a voltage of 3 V. If this voltage drops below 2.7 V without drive, the measuring result is "Fail".

Function Test

UDC

The input voltage is amplified by a potential-free pre-amplifier with 7 measuring ranges and digitized via a 16 bit AD-converter. You can choose from three measuring speeds. Under "fast" speed, the AD-converter only measures. The measuring time therefore is only 1.5 ms. Under "medium" speed the measurement is executed for 20 ms, in "slow" speed it is executed for 200 ms and an average is taken. For the UDC-measurement, there is also a trigger drive so that the measurement can start pointedly. You can also set a delay between trigger and start of the measurement. You can trigger to positive and negative edges. Trigger levels reach from -30 to +30 V. The trigger signal is transmitted to the measuring unit via the guard bus.

| Meas. Range | Full Scale | Input Resistance | Resolution | Accuracy % |
|-------------|--------------------|------------------|------------|------------|
| 100 mV | -100 mV to +100 mV | $10^{13} \Omega$ | $3 \mu V$ | 0.1+0.07 |
| 400 mV | -400 mV to +400 mV | $10^{13} \Omega$ | $12 \mu V$ | 0.06+0.03 |
| 1 V | -1 V to +1 V | $10^{13} \Omega$ | $30 \mu V$ | 0.05+0.02 |
| 4 V | -4 V to +4 V | $10^{13} \Omega$ | 0.12 mV | 0.05+0.01 |
| 10 V | -10 V to +10 V | 10 M Ω | 0.3 mV | 0.05+0.015 |
| 40 V | -40 V to +40 V | 10 M Ω | 1.2 mV | 0.05+0.005 |
| 100 V | -100 V to +100 V | 10 M Ω | 3 mV | 0.05+0.005 |

IDC

DC current measurement is a voltage measurement. The operator must place a measuring transformer (shunt, current transducer) in the test fixture. The only difference between UDC and IDC-measurement is that in current measurement the measured value is edited in "A".

UAC

The input signal is prepared by a potential-free pre-amplifier. The output signal of the amplifier feeds a TrueRMS-converter. Frequency ranges from 45 Hz to 300 kHz. Again, you can choose from three measuring speeds. "medium" and "slow" can measure frequencies higher than 45 Hz. The only difference between the two speed levels lies between turning on the signal and starting the AD-converter. Speed "fast" is for frequencies above 750 Hz.

| Meas. Range | Resolution | Input Resistance | Accuracy % 45 Hz–20 kHz | Accuracy % 20 kHz–100 kHz | Accuracy % 100 kHz–300 kHz |
|-------------|--------------|------------------|----------------------------|------------------------------|-------------------------------|
| 70 mV | $3 \mu V$ | 1.1 M Ω | 0.4 \pm 0.2 | 0.7 \pm 0.4 | 5 \pm 0.6 |
| 300 mV | $12.2 \mu V$ | 1.1 M Ω | 0.35 \pm 0.1 | 0.7 \pm 0.2 | 5 \pm 0.6 |
| 700 mV | $30 \mu V$ | 1.1 M Ω | 0.35 \pm 0.05 | 0.7 \pm 0.1 | 5 \pm 0.6 |
| 3 V | 0.12 mV | 1.1 M Ω | 0.35 \pm 0.025 | 0.7 \pm 0.1 | 5 \pm 0.6 |
| 7 V | 0.3 mV | 1 M Ω | 0.35 \pm 0.025 | 0.7 \pm 0.1 | 5 \pm 0.6 |
| 30 V | 1.22 mV | 1 M Ω | 0.35 \pm 0.025 | 0.7 \pm 0.1 | 5 \pm 0.6 |
| 70 V | 3 mV | 1 M Ω | 0.35 \pm 0.025 | 0.7 \pm 0.1 | 5 \pm 0.6 |

The table refers to "medium" and "slow" speeds.

Measuring times: fast 40 ms, medium 440 ms, slow 840 ms

Max. Crest factor is 7.

IAC

AC current measurement is a voltage measurement. The operator must place a measuring transformer (shunt, current transducer) in the test fixture. The only difference between UAC and IAC-measurement is that in current measurement the measured value is edited in "A".

You can expand **ATS-KMFT 670** with a **7½ position digital voltmeter (option)**. The digital voltmeter is comfortably addressed via the system software. You can then use the following measuring ranges:

PUDC

DC voltage measurement is in 5 ranges.
(Tolerances are valid in a calibration cycle of 1 year and 23 °C +/-5).

| Meas.Range | Resolution | Input Resistance | Accuracy ppm |
|-------------|------------|------------------|--------------|
| 100.0000 mV | 10 nV | >10.000 GΩ | 37 ppm + 9 |
| 1.0000000 V | 100 nV | >10.000 GΩ | 25 ppm + 2 |
| 10.000000 V | 1 μV | >10.000 GΩ | 24 ppm + 4 |
| 100.00000 V | 10 μV | 10.000 MΩ | 35 ppm + 5 |
| 1000.0000 V | 10 μV | 10.000 MΩ ± 1 % | 41 ppm + 6 |

PIDC

DC current measurement is in 4 ranges.
(Tolerances are valid in a calibration cycle of 1 year and 23 °C +/-5).

| Meas.Range | Resolution | Accuracy % |
|--------------|------------|---------------|
| 10.000000 mA | 1 nA | 500 ppm + 40 |
| 100.00000 mA | 10 nA | 500 ppm + 40 |
| 1000.0000 mA | 100 nA | 800 ppm + 40 |
| 3.000000 mA | 1 μA | 1200 ppm + 15 |

PUAC

AC voltage measurement (TRUE RMS) is in 5 ranges, accuracy is +/- (% of the measured value + % of the measuring range), 23 °C +/-5 °C

| Meas.Range | Resolution | Calibration Cycle | Accuracy % 10 Hz–20 kHz | Accuracy % 20 kHz–50 kHz | Accuracy % 50 kHz–100 kHz |
|------------|------------|-------------------|----------------------------|-----------------------------|------------------------------|
| 100.000 mV | 0.1 μV | 90 Days | 0.05+0.03 | 0.11+0.05 | 0.60+0.08 |
| 1.000000 V | 1 μV | 90 Days | 0.05+0.03 | 0.11+0.05 | 0.60+0.08 |
| 10.00000 V | 10 μV | 1 Year | 0.06+0.03 | 0.12+0.05 | 0.60+0.08 |
| 100.0000 V | 10 μV | 1 Year | 0.06+0.03 | 0.12+0.05 | 0.60+0.08 |
| 750.000 V | 1 mV | 1 Year | 0.06+0.03 | 0.12+0.05 | 0.60+0.08 |

PIAC

AC current measurement is in 2 ranges (tolerances at 23 °C +/-5).

| Meas.Range | Resolution | Calibration Cycle | Accuracy % 3 Hz–10 Hz | Accuracy % 10 Hz–5 kHz |
|------------|------------|-------------------|--------------------------|---------------------------|
| 1.000000 A | 1.0 μA | 90 Days | 0.30+0.04 | 0.10+0.04 |
| 3.00000 A | 10 μA | 90 Days | 0.35+0.06 | 0.15+0.06 |

PR

R measurement is with the system multimeter in 8 ranges (Tolerances are valid in a calibration cycle of 1 year and 23°C +/-5).

| Meas.Range | Resolution | Meas.Current | Accuracy ppm |
|--------------|------------|--------------|--------------|
| 10.000000 Ω | 1 μΩ | 10 mA | 60 ppm + 9 |
| 100.00000 Ω | 10 μΩ | 1 mA | 52 ppm + 9 |
| 1.0000000 kΩ | 100 μΩ | 1 mA | 50 ppm + 2 |
| 10.000000 kΩ | 1 mΩ | 100 μA | 50 ppm + 2 |
| 100.00000 kΩ | 10 mΩ | 10 μA | 70 ppm + 2 |
| 1.0000000 MΩ | 100 mΩ | 10 μA | 70 ppm + 4 |
| 10.000000 MΩ | 1 Ω | 640 nA | 400 ppm + 4 |
| 100.00000 MΩ | 10 Ω | 640 nA | 1500 ppm + 4 |

With the exception of four-terminal measurement, because of contacts, relay contacts and lines, there is a series resistance in these ranges. These tolerances are only valid in function test.

PK

In the analog Peak measurement, there is a Sample&Hold circuit between pre-amplifier and AD-converter where the highest and lowest values are saved.

| Meas.Range | Accuracy % 0 Hz–20 kHz | Accuracy % 20 kHz–75 kHz |
|------------|---------------------------|-----------------------------|
| 400 mV | 1.0 ±0.75 | 5.0 ±0.75 |
| 1 V | 1.0 ±0.75 | 5.0 ±0.75 |
| 4 V | 1.0 ±0.75 | 5.0 ±0.75 |
| 10 V | 1.0 ±0.75 | 5.0 ±0.75 |
| 40 V | 1.0 ±0.75 | 5.0 ±0.75 |
| 100 V | 1.0 ±0.75 | 5.0 ±0.75 |

There is also a digital Peak-measurement. In digital Peak-measurement, the measuring signal is scanned with 100 kHz at a measuring time up to 40.96 ms. At a measuring time longer than 40.96 ms, it is scanned with 10 kHz. The system then displays the highest or lowest measuring value.

Time measuring system, clock rate 20MHz, 31 bit counter

The start- and stop level can be programmed in the range -30V to +30V with 15 mV resolution. For UDC-measurement, there is also trigger drive so that the measurement can start pointedly. You can trigger to positive and negative edges. Trigger levels may reach from -30V to +30V. The trigger signal is transmitted to the measuring unit via the guard bus. The ZME also includes a hold-off-function which allows max. 163.84ms hold-off period. In this case, min. hold-off resolution is 50ns.

| | Range | Resolution |
|----------------------|---------|------------|
| High Frequency | 25 mHz | 5 Hz |
| Low Frequency/Period | 200 kHz | 50 ns |
| Pos. Pulse Width | 2 mHz | 50 ns |
| Neg. Pulse Width | 2 mHz | 50 ns |
| Rise Time | 2 mHz | 50 ns |
| Fall Time | 2 mHz | 50 ns |
| Run Time ++ | 2 mHz | 50 ns |
| Run Time +- | 2 mHz | 50 ns |
| Run Time-+ | 2 mHz | 50 ns |
| Run Time -- | 2 mHz | 50 ns |
| Events | 1 bit | |
| Pulse Ratio | | 50 ns |
| Precision-HF | 25 mHz | 1 Hz |
| Phase Shift | 360 ° | 0.1 ° |

Monitor Measurement

Monitor measurement measures the integrated stimulus devices (PSUs, generator, fixed voltages, etc.) with the advantage that no special wiring is required by the operator. The output currents of the stimulus devices can also be measured directly.

TRA ADM-Measurement

The "TRA ADM"-measurement is equivalent with the "TRA A"-measurement. Potential-free measurements are also available. For external triggering the trigger signal is applied at the guardbus.

| Timebase | Meas. Frequency | Number Meas. Points |
|-------------|-----------------|---------------------|
| 10 μ s | 100 kHz | 10 |
| 20 μ s | 100 kHz | 20 |
| 50 μ s | 100 kHz | 50 |
| 100 μ s | 100 kHz | 100 |
| 200 μ s | 100 kHz | 200 |
| 500 μ s | 100 kHz | 500 |
| 1 ms | 100 kHz | 1000 |
| 2 ms | 100 kHz | 2000 |
| 5 ms | 10 kHz | 500 |
| 10 ms | 10 kHz | 1000 |
| 20 ms | 10 kHz | 2000 |
| 50 ms | 10 kHz | 4096 |

TRA670 Transient Recorder

The optional TRA670 provides a high frequency amplifier (50 MHz). AD-converter and a very fast AD-converter (250 MSPS). The measuring signal can be applied via the RMX-channels, 9 external channels or 8 coaxial channels. Bandwidth and measuring ranges are independent of the used measuring system. With frequencies above 1 MHz it makes sense to use the coaxial channels.

The following ranges are for evaluating the recorded signal (evaluation is a calculation from the recorded curves):

| | |
|------------|--|
| NoMess | There is no evaluation |
| MinPk | negative peak voltage measurement |
| MaxPk | positive peak voltage measurement |
| Pk-Pk | peak-peak-voltage measurement |
| Freq | frequency measurement |
| Pos.P | pulse width positive |
| Pos.P | pulse width negative |
| Rise | rise time measurement |
| Fall | fall time measurement |
| Envelope | envelope curve-comparison measurement, programmable in time and voltage axis |
| Key | for manual interpretation by the operator |
| Mean | average value of the signal |
| RMS | effective value of the signal |
| Distortion | evaluation of the distortion factor |

| Range | Full Scale | Resolution | Accuracy |
|-------|------------------|-------------|---------------|
| 200 V | -200 V to +200 V | 50 mV | 1 % ±4 Digits |
| 80 V | -80 V to +80 V | 20 mV | 1 % ±4 Digits |
| 20 V | -20 V to +20 V | 5 mV | 1 % ±4 Digits |
| 8 V | -8 V to +8 V | 2 mV | 1 % ±4 Digits |
| 2 V | -2 V to +2 V | 500 μ V | 1 % ±4 Digits |
| 0.8 V | -0.8 V to +0.8 V | 200 μ V | 1 % ±4 Digits |

Max. frequency: 50 MHz
 Resolution: 12 Bit
 Clock rates: 250 MSPS
 Input resistance: 50 Ω /1 M Ω

The basic version of the ATS-UKMFT2-Family has got 4 programmable voltage supplies and 5 fixed voltages. The tolerances given depend on the programmed value and are found without load.

| | Voltage | Resol. | Tolerances | I max. | Resol. | Tolerances |
|----------------|------------|--------|-------------------|-----------------|------------|------------------|
| PSU 1 positive | 0V to +24V | 1 mV | 0.01 % ± 5 mV | 50 mA to 1 A | 10 μ A | 0.1 % ± 2 mA |
| PSU 1 negative | 0V to -22V | 1 mV | 0.01 % ± 5 mV | 30 mA to 500 mA | 10 μ A | 0.1 % ± 2 mA |
| PSU 2 positive | 0V to +24V | 1 mV | 0.01 % ± 5 mV | 50 mA to 1 A | 10 μ A | 0.1 % ± 2 mA |
| PSU 2 negative | 0V to -24V | 1 mV | 0.01 % ± 5 mV | 30 mA to 500 mA | 10 μ A | 0.1 % ± 2 mA |

Fixed voltage supplies +5V, max. current 1 A; -5, +15, -15, +28 V with 250 mA max. current

MNG-PSUs ATS-UKMFT2-Family

The MNG1 and MNG2 PSUs are on the optional MMX670 boards with PSUs.

| MNG | Voltage | U-Resolution | U-Tolerance | Current | I-Resolution | I-Tolerance |
|-------|------------|--------------|-------------------|-----------|--------------|------------------|
| MNG 1 | 0V to +24V | 1 mV | 0.01 % ± 5 mV | 30–300 mA | 10 μ A | 0.1 % ± 1 mA |
| MNG 2 | 0V to +24V | 1 mV | 0.01 % ± 5 mV | 30–300 mA | 10 μ A | 0.1 % ± 1 mA |
| | 0V to -24V | 1 mV | 0.01 % ± 5 mV | 30–300 mA | 10 μ A | 0.1 % ± 1 mA |

Standard Sine and Square Wave Generator ATS-UKMFT2-Family

The output frequency can be programmed from 0 Hz to 1 MHz. The pulse duty factor of squarewave can be programmed from 1–100%. The offset voltage can be programmed from -10 V to +10 V with ± 5 mV resolution.

| | Frequency | Resol. F | Amplitude | Resol. U | Tol. U | |
|----------------------|---------------|----------|-------------------------|---------------------|----------------------------------|--------|
| Generator Sine | 0 Hz to 1 MHz | 10 mHz | 0V to 7V _{eff} | 1 mV _{eff} | 0.1 % ± 10 mV _{eff} | |
| Generator Squarewave | 0 Hz to 1 MHz | 10 mHz | 0V to 10V _{pk} | 1 mV _{pk} | 0.1 % ± 10 mV _{pk} | |
| | Offset | Resol. O | Tol. O | TV % | Aufl. TV % | I max. |
| Generator Sine | -10V to 10V | 1 mV | 0.1 % ± 5 mV | ----- | ----- | 250 mA |
| Generator Squarewave | -10V to 10V | 1 mV | 0.1 % ± 5 mV | 0 % to 100 % | 0.001 % | 250 mA |

20 MHz Function Arbitrary Generator:

Sine, square wave, triangle, sawtooth, noise, impulse, arbitrary functions, burst, wobble. There are frequencies from 1 μ Hz to 20 MHz with resolutions from 1 μ Hz. Amplitudes can be programmed between 20 mVpp up to 20 Vpp. Ramps can be programmed up to 200 kHz with 20 ppm accuracy. Maximum frequencies in the burst range is 5 MHz. Trigger can be done single, external or internal.

| | Resol. | Frequ. min. | Frequ. max. | Ampl. max. | U Tolerance | F Accuracy |
|---------------------------------|--------------|----------------|-------------|------------|-------------|------------|
| Generator Sine | 1.0 μ Hz | 1.0 μ Hz | 20 MHz | 10 Vpp | 1 % 1 kHz | 20 ppm |
| Generator Square | 1.0 μ Hz | 1.0 μ Hz | 20 MHz | 10 Vpp | 1 % 1 kHz | 20 ppm |
| Generator Triangle/ Sawtooth | 1.0 μ Hz | 1.0 μ Hz | 20 MHz | 10 Vpp | 1 % 1 kHz | 20 ppm |
| Generator Pulse | 20 ns | 500.0 μ Hz | 5 MHz | 10 Vpp | 1 % 1 kHz | 20 ppm |
| Generator Arbitrary | 20 ns | 1.0 μ Hz | 6 MHz | 10 Vpp | 1 % 1 kHz | 20 ppm |

80mHz Function Arbitrary Generator:

Sine, square wave, triangle, sawtooth, noise, impulse, arbitrary functions, burst, wobble. There are frequencies from 1 μ Hz to 80 mHz with resolutions from 1 μ Hz. Amplitudes can be programmed between 10 mVpp up to 10 Vpp. Ramps can be programmed up to 1 mHz with 3 ppm accuracy. Maximum frequencies in the burst range is 80 mHz. Trigger can be done single, external or internal.

| | Resol. | Frequ. min. | Frequ. max. | Ampl. max. | U Tolerance | F Accuracy |
|---------------------|--------------|----------------|-------------|------------|-------------|------------|
| Generator Sine | 1.0 μ Hz | 1.0 μ Hz | 80 mHz | 10 Vpp | 1% 1 kHz | 3 ppm |
| Generator Square | 1.0 μ Hz | 1.0 μ Hz | 80 mHz | 10 Vpp | 1% 1 kHz | 3 ppm |
| Generator Pulse | 8 ns | 500.0 μ Hz | 50 mHz | 10 Vpp | 1% 1 kHz | 3 ppm |
| Generator Arbitrary | 20 ns | 1.0 μ Hz | 25 mHz | 10 Vpp | 1% 1 kHz | 3 ppm |

RMX Measuring Matrix

| | |
|---------------------|--|
| Service life | 250x10 ⁶ switching operations |
| Contact resistance | 0.1 Ω per relay contact |
| Max. current | 0.5 A |
| Max. voltage | 100 V |
| Max. contact rating | 10 VA |
| Coil resistance | 500 Ω |

* Mechanically there are a lot more than 250x10⁶ switching operations – contact resistance will then be out of the specifications.

Measuring-Logic-Stimulus Matrix Board RML32 – Stimulus Matrix

| | AC | DC |
|---------------------------------|---|-------|
| Max. breaking voltage | 100 V _{pk} / 70 V _{eff} | 100 V |
| Max. r.m.s current | 2 A | 2 A |
| Max. breaking capacity at 30 V | 60 VA | 60 W |
| Max. breaking capacity at 70 V | 140 VA | 90 W |
| Max. breaking capacity at 100 V | – | 90 W |

RML32-Board – Logic

| | |
|---------------------|-------------|
| Driver level | 3.3 V / 5 V |
| Max. driver current | 15 mA |
| Max. input voltage | 5 V |
| Rise/Fall Time | 500 ns |

Stimulus Matrix MMX670, MMX72 and EMX48

Insulation resistance 10⁹ Ω

| | AC | DC |
|---------------------------------|---|-------|
| Max. breaking voltage | 100 V _{pk} / 70 V _{eff} | 100 V |
| Max. r.m.s current | 2 A | 2 A |
| Max. breaking capacity at 30 V | 60 VA | 60 W |
| Max. breaking capacity at 50 V | 100 VA | 90 W |
| Max. breaking capacity at 70 V | 140 VA | 63 W |
| Max. breaking capacity at 100 V | – | 50 W |

LOG96-Board

| | |
|---------------------|-----------|
| Driver level | 3.3V / 5V |
| Max. driver current | 15mA |
| Max. input voltage | 5V |
| Rise/Fall Time | 500ns |

PML670 Precision Measuring Logic Board

| | |
|---|--------------|
| Driver level | 0 to 24 V |
| Resolution | 0.5 mV |
| Accuracy with sense connection | ±2 mV |
| Maximum current carrying capacity per channel | 50 mA |
| Maximum current carrying capacity all channels together | 500 mA |
| Valid input voltage comparator | -0.7 to 24 V |
| Measuring range comparator | 0 to 24 V |
| Resolution | 0.5 mV |
| Accuracy | ±4 mV |

Technical Data and Variations of the POMO80 power module





POMO80 is made up of PSUs and loads with arbitrary generator which can generate individual curve forms for every measuring task.

Example for order name: *POMO80/1/2*: The number second to last is for the number of DC-modules, the last number is for the number of load modules. The title of the column is the order name.

| POMO | 80/1/2 | 80/2/1 | 80/0/2P | 80/2/0 | 80/1/0 | 80/0/4 | 80/0/3 |
|---|--------|--------|---------|--------|--------|--------|--------|
| DC-Module 0–30 V, max. 14 A, 30–65 V, max. 7 A, 65–80 V, max. 4 A, U resolution 25 mV, I resolution 4 mA | 1 | 2 | - | 2 | 1 | - | - |
| Load Module 0–30 A, 10 mA resolution, 0–3 A, 1 mA resolution, max. 400 VA to 40 V, 200 VA from 40 to 100 V, modulation I-, R- and P-mode-operation, modulation up to 50 kHz | 2 | 1 | 2 | - | - | 4 | 3 |
| Load Module P 0–40 A, 10 mA resolution, 0–3 A, 1 mA resolution, max. 400 VA to 40 V, 200 VA from 40 to 100 V, modulation I-, R- and P-mode-operation, modulation up to 50 kHz | - | - | 2 | - | - | - | - |

Dimensions: 19", 3HU, 450 mm deep, weight 25 kg
can be provided as a 19" desktop-unit or a 19" built-in unit (please advise in your order)

Below, there are some examples for what a load- or DC-curve can look like so that in-rush currents of a bulb can be simulated or that a certain basic load is applied to a test item e. g. a PSU) and power peaks can be modulated.

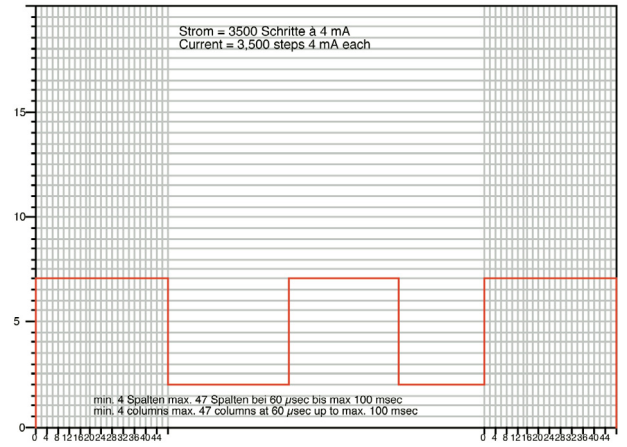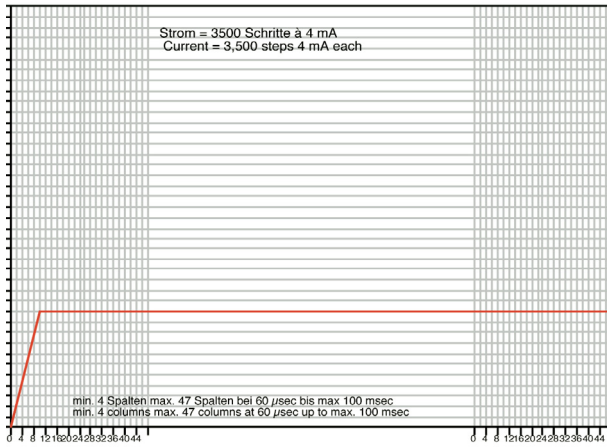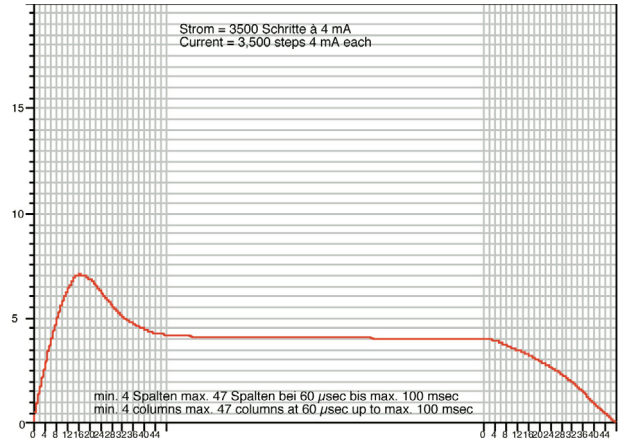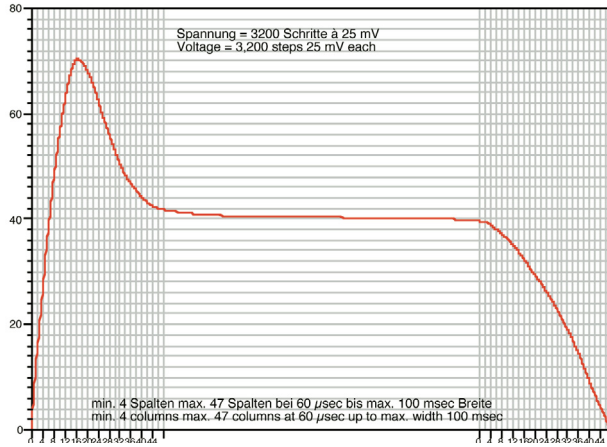

IE & OE Specifications subject to change without prior notice.

Software

All our test systems are programmed in forms: As in tables and lists, only the necessary data are entered, whereas many other systems are programmed line by line. In designing software, REINHARDT always aim at enabling the user to operate the system in a comfortable, fast and productive way. A technician with basic knowledge of WINDOWS® must be able to program the test system. It must be possible to get started easily and immediately even after a longer interval. Both the tester and the programmer do not need software knowledge, they just have to apply the test item and press the start key. This is why most REINHARDT-customers use their test system in production only one week after delivery and can then produce with it. It takes only one tenth to one twentieth of the usual time to program smallest series, just in time products and middle to comprehensive products.

The forms of the software are opened and run in a logic flow. All inputs of parameters and information texts are tested syntactically when they are entered. They are only accepted when entered correctly or when the values correspond with the physical suppositions. You enter only the fourth part of the actual input, because you do not have to enter all the repetitive terms of a programming language. This is why you have to make only a fourth of the usual inputs. Because of the well-structured forms, there is highest transparency in creating a program. Therefore there is an extremely good control when the program has to be changed later: the test step and the parameter to be changed are found within seconds. All important functions are entered via mouse or cursor and function keys. Input thus becomes easy and practice-oriented even for those who are not used to typing.

Test Program Wizard

A wizard helps generate the PCB test since the sequence of generating a test program is always very similar although the junction of different pieces of information such as CAD-data, pictures, fixtures etc. is required

The wizard is menu-driven: First it asks which test is to be executed, In-circuit- or Function test or combined. In the following steps you state if a pin test, isolation test, IC-Open test and a component test is executed. Then the data for graphical display of fault location are loaded. After that, all tasks are neatly listed again. In the next steps, the wizard guides you through all necessary programming modules so that you only have to follow its instructions. Thus, even an inexperienced user can generate a test program fast and easily.

Test Sequence




A test program is made up of several single test modes such as e.g. pin contact test, insulation test, IC-solder defect test, components test, function test etc. In the test sequence tree on the left-hand of the screen you can see which test mode is active at the moment. This function can also be faded out.

For testing in production there is the "Testermode", where the test mode is already set, if e.g. a function test follows the components test. In the "Testermode" the monitor displays only the very necessary data so that even a trainee can operate the test system without problems and can concentrate on the essential. In this mode, the tester cannot edit. The test program cannot be changed then, i. e. the test modes cannot be turned on or off and you cannot branch off to other test modes. There are only the necessary operation keys for the tester such as e.g. Start, Stop, Fault Display ...


First you can enter a serial number which is e.g. generated via barcode scanner, entered by keyboard or automatic increment or decrement.

Pin contact tests, if all spring contact pins make contact with the PCB. In case of fault, the respective pins are displayed graphically.

The number of faults which have occurred so far in this test mode and the total of faults in this test module is displayed on screen. The analog bar displays how far the test run has proceeded.

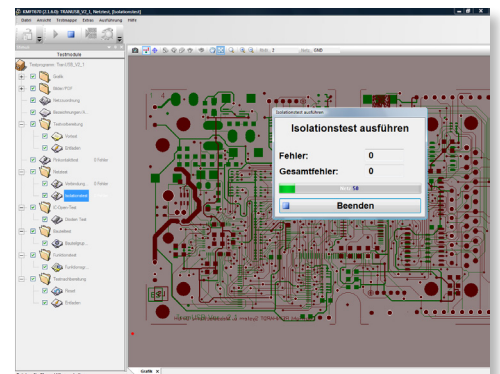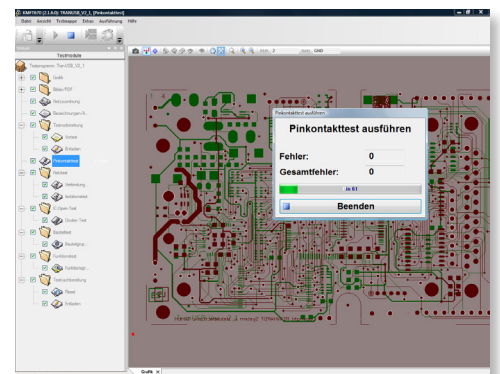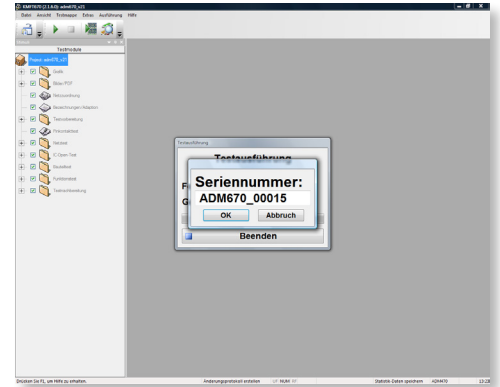


Solder short-circuits or interrupts are found and displayed in the track and insulation test.

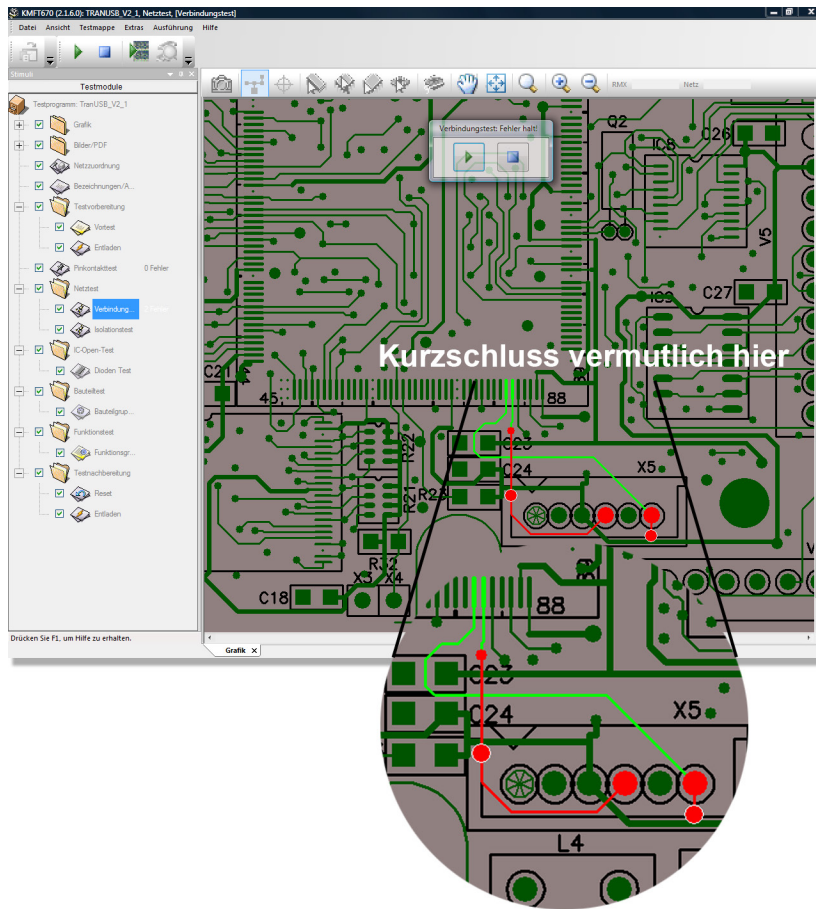


An IC-Open test follows which makes sure that the IC-pins make electric contact to the PCB. A fault has occurred on the IC which is marked in white on the

following picture. The crosshairs clearly mark the pin with the solder defect. The conductor track which is connected to this pin, is optically set off.

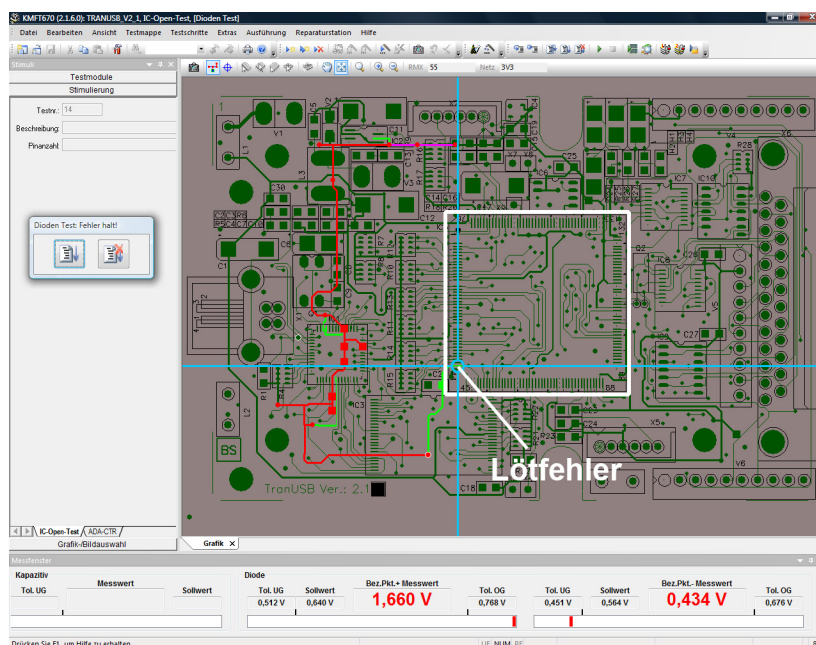


In the next test mode the components are tested: Has the correct type of component (e.g. R, FET, OPs ...) with the correct value in the correct orientation been placed in the correct position? As in our example, the graphical fault display appears which shows the defective component exactly. The connected tracks are optically set off so that you can see which other components are connected. Apart from that the window shows that the test has been finished and was faulty or OK. If you want, you can now move into the mode which displays the single faults and where you can remove them. You can remove the test item now and replace it by a new one.

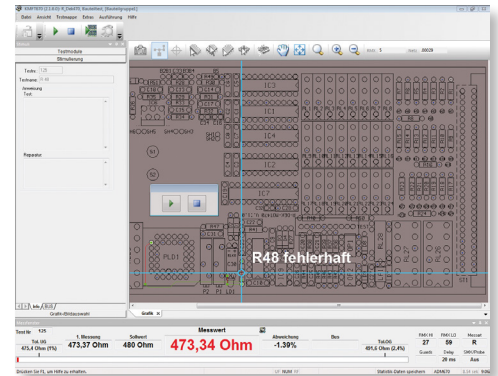


Creating a Fixture and a Test Program

One of the most difficult tasks around automatic test systems is fixturing the test item via a needle or connector fixture and creating test programs. For this we offer special solutions which enable you to create a test fixture and test program in typically one day of work. We use the Gerber files to create the data for the drilling files and the creation of the fixture and for graphical display of fault location on screen. CAD-files for creating test programs can be transferred by post-processors and in this way, a comprehensive test program can be created in a few minutes. We are going to support all common standards in electronics production so that for programming your test system, you can use drivers of renowned producers in this field. In this way you will be able to transfer data of any CAD-system or to create and translate those of competitive test systems.

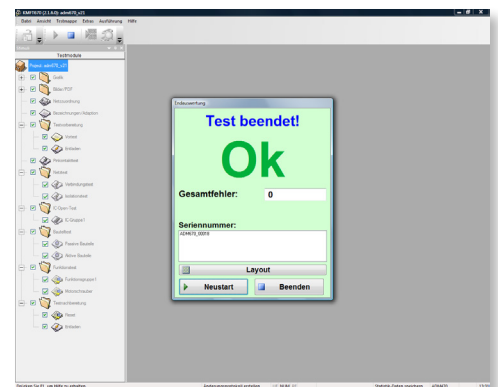

As many production areas are sluggish and the test bay is often overworked, series defects are often not found before days have passed and the test bay is forced to rework every single PCB. This affects quality and reliability and customers often do not accept this. In this case it is advantageous to test and check the assembly immediately after soldering. Max. 3–5 PCBs will be between assembly and test so that you can intervene very fast, find the faults at once and remove them.

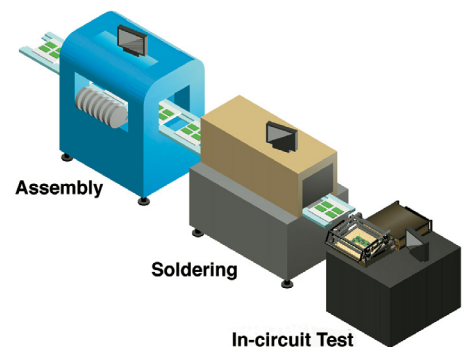

Programming the Test System and Working with Gerber Files

Before we start explaining how to program by text and screen-pictures, we present a diagram which shows the single steps of programming. For programming we assume a typical board size of Euro-format with mixed loading, microprocessor.

Diagram Creating a Test Program with Typical Times and a Finished Fixture



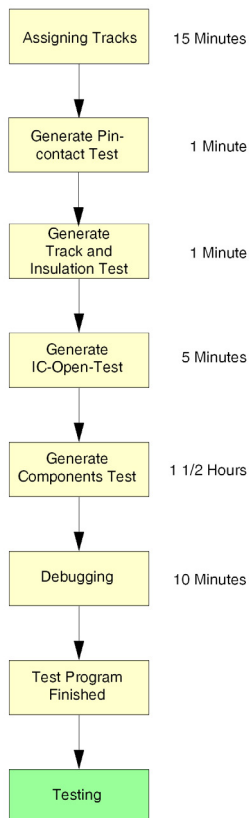


Diagram for Building a Fixture, Graphical Display of Faults and Creating a Test Program with Typical Times

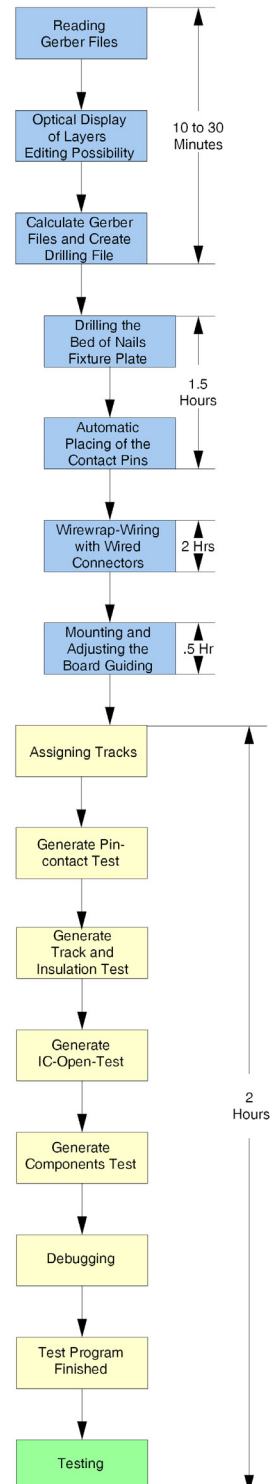

First the Gerber data of the test item are read in. We use the Gerber data for creating bed-of-nails fixtures and for graphical support in programming. This additional possibility helps our customers when the CAD-data of the developer are insufficient or unavailable.

All common CAD systems offer Gerber data, the only common standard of CAD systems. That is why we use these data which are more or less made up of single vectors. With them we calculate complete conductor tracks with the component drillings and the through-connections. The single layers (up to 255) can be graphically displayed on screen, either one after the other or all at the same time, or they can be edited if needed. Various DCodes can be extracted of the displayed layers and single layers can be reflected. When all the layers are congruent, the software starts recalculating all tracks. This process is worked out within a few seconds, even for double-Eurocards in multi-layer technique. A drilling file for the bed-of-nails is created then incl. graphical data for display on screen. For more details please see the chapter on our fixtures. The whole process for editing, displaying the PCB, creating the tracks and the drilling data takes about 10 to 30 minutes.

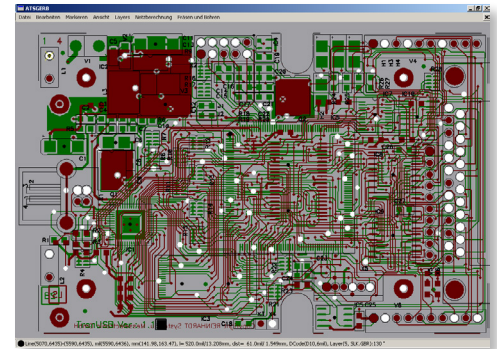

In-circuit Test and its Programming


There are 5 editors for the in-circuit test:

Graphic data or CAD-data import

1. Assigning tracks
2. Pin contact test editor
3. Track test editor (Continuity and insulation test)
4. IC-test editor
5. Components test editor
6. The editors and procedures are described in detail on the following pages.

For creating a test program, a test file is created first with the single parts of the test program (test mode) filed in a clear way, because a test program can be made up of several parts.


Then the graphical data, which were automatically created by the ATSGERB-software (software for dealing with Gerber files), can be chosen and integrated under menu-control.

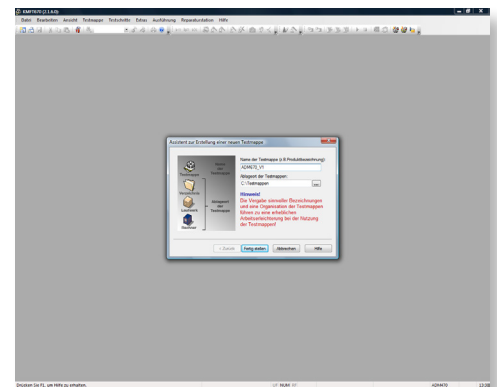

Assigning Tracks

Assigning tracks means that the test contact pin is assigned (and this also means the track of the component) to the test system measuring channel.

With a REINHARDT-In-circuit test system you do not have to wire the bed-of-nails fixture specifically but you wire it 1 : 1. Assigning spring test contact pins to the respective test system measuring channel is comfortable via identification probe and monitor control. Because of this procedure you spend only 1/20 of the time you need for wiring your fixture specifically. Wiring mistakes, which can hardly be avoided in more complex fixtures, need not be searched and corrected.

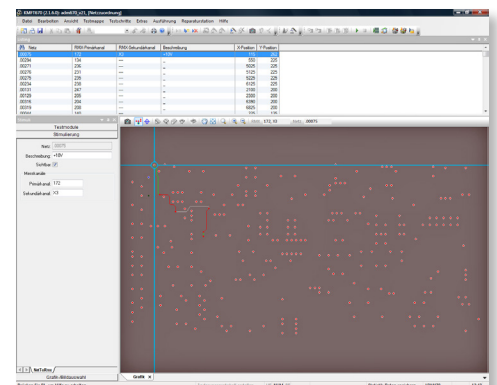

Pin Contact Test Editor

Pin contact test finds faults in contacting the test item with the contact pins and displays them on screen. This avoids ghost and pseudo-faults. If there is no pin contact test and a contact pin does not make contact to the test item, the test system may send the message that a transistor is defective or resistor is not assembled although that is not true.

The pin contact test is learnt fully automatically. You contact your test item which is known to be good and just enter the first and the last pin number to be learnt. In about 10s to 20s all the placed pins and the pins which make contact with the test item are learnt automatically. Our method is based on a resistance and a capacitance measurement. You can call an editor where it is possible to manually change the threshold values of the automatically created program. A graphical display is also created automatically for displaying the fault location. If there is a contact fault in the test run, the defective spring test contact pin is immediately graphically displayed. In this way, even a temporary worker can find and change a defective contact pin within seconds.

Track and Insulation Test Editor

The track and insulation test finds solder short-circuits and interrupts and displays them.

Most faults are results of soldering defects; soldering short circuits make the greatest parts of them. With an automatic learning method in the track test editor, the complete tracks on the test item are learnt automatically in typically 10s and a test program is created out of them. You can place one or more contact pins per track so that you can also find interrupts on the PCB. In the track test you can also make manual changes so that e.g. low-ohm resistors which are displayed as tracks can be deleted and are only tested in the components test. If there are short-circuits, the tracks can be graphically displayed on screen.

IC-Test-Editor

This test method was developed for the SMT-technology, in order to find solder defects which occur especially at LSIs with fine pitch-connections or at Ball Grid Arrays. This test range finds these faults without reservations to bus systems or technology. ICs can be displayed graphically on screen as Single-in-Line, Dual-in-Line, SO, QFP, PLCC, PGA or BGA etc. In case of fault, the graphical fault location can be shown in this way.


There is an optional software and optional selective amplifier PCB with 16 channels (max. 16 boards). Each PCB can hold 16 capacitive probes (=a total of 256 channels). The spring-suspended probe is applied to the IC from above with the test fixture.

The hard- and software described above is also required for identifying polarity of axial and radial electrolytic and Tantalum capacitors (see components test).

Programming an IC-Open Test

The IC-Open-Test is generated semi-automatically. For programming e.g. a PLCC-IC you place the crosshairs in the graphical window on pin 1, click on it and the software at once recognises all the connected IC-pins. A learning mode learns all desired values and threshold values for the later test run. The pin-exact graphical fault location is generated in this procedure, i.e. programming an IC is finished in less than 20 s.

Measuring method: After all inputs of the IC have been applied to ground by the test system, all wired pins can be triggered one after the other with a signal of about 8 kHz below the threshold voltage. Capacitance is measured with the probe, which is applied from above, and the selective amplifier. You can also test connectors with this method. Time and again, connector systems are delivered with one or more parts of female or male multi-point connectors missing. This cannot be noticed from outside, but only when you connect them. With this method, complicated connector systems are measured fully automatically with 20 ms per contact. The necessary test steps can be generated automatically.

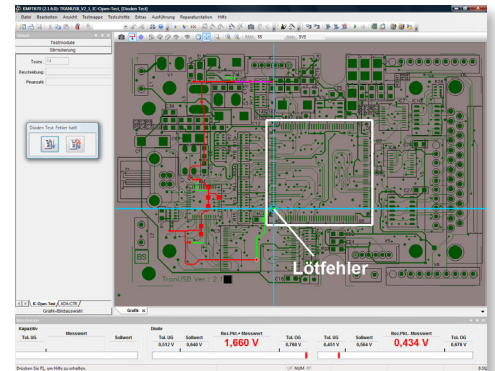

Programming a Components Test

This editor is for testing components such as resistors, capacitors, inductances, diodes, zener diodes, transistors, FETs, thyristors, relays, opto-couplers, linear ICs, transformers etc.

There are three ways of programming:

1. manual with absolutely free wiring and without Gerber data,
2. semi-automatic programming with free wiring and use of Gerber data,
3. automatic programming out of CAD-data with autolearn of the complete measured values, with autoguarding and autodelay.


For the first method without Gerber data a printed circuit assembly and the circuit diagram are sufficient. With this method, you can plan typically 1 minute per component. You need the printed circuit assembly, the circuit diagram and the Gerber data for the second method. For the third method you need the printed circuit assembly, the circuit diagram, the Gerber data and the CAD-data.

Programming a Components Test Manually

Why program manually when almost every CAD-system today can supply data and graphs for automatic program generation?

Orders are placed with companies who supply assembled PCBs (commissioned work) without any data but a sample, components list, printed circuit assembly and possibly position and printed circuit diagram, but even these PCBs must be in-circuit tested.

To begin with, a graphic file can be integrated for a later display of fault location. It can be created by scanning or by a picture taken with a digital camera. After the editor is called, 5 default windows open. In the left window, you select the graphic files you need for fault

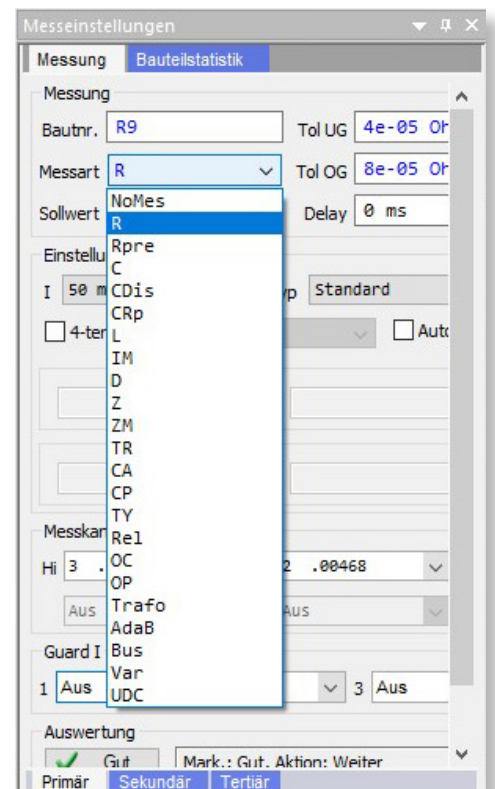

display. In the central one you have graphical display and in the right one you enter the data you need for a component measurement. After the component number, e. g. R130, the measuring mode (resistance measurement, capacitor or coil measurement etc.) you enter the desired value. The programmer does not need to take care of the settings of the stimulus signal and its values (voltage, current, frequency ...) nor the timing or the measuring ranges. The upper and lower tolerance limit is calculated automatically according to the set default values, but can be changed proportionally or numerically at any time. The delay between stimulus and measurement of the resp. component is shown in the "Delay"-field. This delay-time is usually found automatically by the system, but it can as well be entered manually. Then you enter the measuring channel high and low. With the search probe of method 1 you can also find it by contacting the track specifically. Press the measuring button so that the test system executes the measurement. In the lower part of the screen, the measured value is displayed in green in case it is "good". If not within the set upper- and lower limit tolerance,

the measured values and the analog measuring bar are displayed in red. If the measured value is red you can mostly find the resp. guard channel (even more than one) by activating the autoguarding and nulling parasitical components so that the correct measured value is applied. In the next step, the component to be tested can be marked with a crosshairs, so that in the test run the component is displayed as defective. For a further survey, a line with all important details for the resp. component is created for every component test step so that there is a listing on screen which you can scroll.

You just press a take-over key in order to create the next components test step. This copies the former test step and increments the component number by 1. Typical programming time for such a test step is less than 1 minute.

In the components test editor, you also program the test of polarised capacitors. For measuring polarised capacitors, a sine signal (ca. 5 to 6 kHz at 200 mV) is alternatingly applied. A capacitive probe measures the coupling (signal strength) on the capacitor housing. A

The screenshot displays the KMF1670 software interface for component testing. The main window shows a PCB layout with various components and traces. A red crosshair is positioned over a component, indicating the measurement point. The 'Messung' (Measurement) panel on the right shows the following settings:

- Messung: R21, Tol UG: 140 kOhm, Tol OG: 170 kOhm
- Messart: R, Sollwert: 155 kOhm, Delay: 50 ms
- Einstellungen: I: 1 µA, Typ: Standard, 4-term: SMX Aus, Autorange:
- Messkanal: Hi: 53, Lo: 54
- Guard: Aus, Aus, Aus
- Auswertung: Gut, Fehler

The 'Messwert' (Measurement Value) panel at the bottom shows the following results:

- Test Nr: 110
- 1. Messung: Sollwert: 155 kOhm, Messwert: 152,83 kOhm, Abweichung: -1.40%
- Tol.UG: 140 kOhm (9,7%), Tol.UG: 170 kOhm (9,7%)
- Guards: 26, Delay: 50 ms, SMX/Probe: Aus

selective amplifier (polarity board) with very low input capacitance and high input impedance is connected before and amplifies the weak signal. Then the amplitude of the signal is evaluated by applying the signal alternately. There is an obvious difference between a minus and a plus signal (The signal is obviously higher at minus-application than at plus-application.).


We also use this method for finding missing capacitors at blocking of ICs or for switching small capacitors in series with Elcaps.

2. Semi-automatic Programming

The Gerber data of the test item are the basis for this method. When the editor is called, five default-windows open. In the left window, you first choose the resp. Gerber files to start programming the components test. The Gerber assembly circuit in the central window also gives information on the wiring of the measuring channels. In order to find out, which test system channels are wired to the component to be tested, you aim the crosshairs to connection pin A of the component to be tested, Rx in our example. The connected conductor track flashes when you press the left mouse key. Pressing the right mouse key opens a context menu where you set if this pin is to be high or low. The same applies for the B-Pin (2nd connection pin of our resistor).

The test system knows now which measuring channels are connected. After you have entered the component number, e.g. R130, the measuring mode (resistance, capacitor or coil measurement etc.), you set the desired value. The upper and lower tolerance limit is calculated automatically with the set default values, but they can as well be changed proportionally or numerically. The delay time between stimulus and measurement of the component to be measured is shown in the delay-field. This delay-time is usually found automatically by the system, but it can as well be entered manually. Then you press the measuring button and the test system executes the measurement. In the lower part of the screen, the measured value is displayed in green in case it is "good". If it is not within the set upper- and lower limit tolerance, the measured values and the analog measuring bar is displayed in red. If the measured value is red you can mostly find the resp. guard channel (even more than one) by activating the autoguarding. For a further survey, a line with all important details for the resp. component is created for every component test step so that there is a listing on screen which you can scroll and can also be edited in the listing itself.

How does the test program work or branch out, if the measured value is not within its limits? If the measured value is OK, you will mostly go to the next test step. If the measured value is not within its permissible limits, there is an entry in the fault register and the system proceeds to the next test step. You can e.g. enter a "Halt" so that the test program stops after a fault and shows a message for the operator, e.g. "Turn switcher S1 on the test item to the right". The evaluation menu already offers all reactions which are needed for automatic test, e.g. NotAus, End, Loops, Goto; LoadGo ...

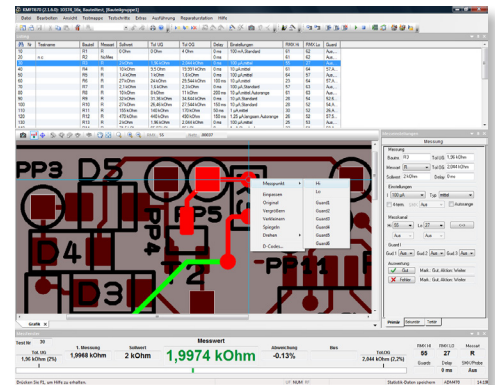

For creating the next components test step, you just press a take-over key. This copies the former test step and automatically increments the component number by 1. The typical programming time for such a test step is even shorter than that in manual programming, 30s per components test steps are absolutely realistic.


3. Using CAD-data

Our test system has got an interface for generating the program automatically via ASCII-data and autolearn. If your CAD-system has got an ASCII-interface, you only have to take care that the ASCII-data of your system and our system agree. A little post-processor will help. We have found that automatic program generation takes about ten minutes for about 300 components.

Test Run

When the test system is booted after turn on, it automatically loads the test program which fits the fixture or it starts with the test program that was activated last. The operator only has to apply the test item in the test fixture and press the start key. In case of fault the test run is stopped. On screen there is a clear graphical error display and an analog measuring bar (components test) with the current measured value, the desired value and upper and lower limits. A choice-menu with numerous special functions is part of the test program: You can de-activate that the test system stops in case of fault. If there are no faults on the test item, this will be clearly shown on screen.

During the test run, there is a window which displays test functions, state and progress in the test program in percent. We also took care that the operator only gets the really important and necessary displays on screen and is not distracted or stressed by unnecessary graphical gadgets.

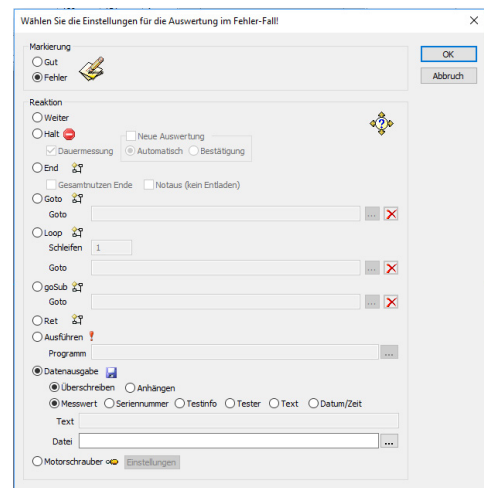

Special Functions and Branch Out

How does the test program react or branch out if the measured value is not within the allowed limits?

If the measured value is not within its allowed limits, there is normally an entry into the error register and the program possibly proceeds to the next test step. Another mark could be a "HALT", i. e., in case of fault, the system always stops at this test step without an entry into the fault register. This is typically used in order to bring coding switches or bridges into a prescribed position for further test. This can of course be supported with a graphical display. NOTAUS is another possibility which is especially valuable for function test. If e. g. in a current consumption test, certain limits are exceeded, the system turns off all stimulus and measuring devices within a few milliseconds. Several other possibilities such as loop, execute external programs, write measured values into files or activate motorised trimmer can also be selected in this menu, i. e. all functions are necessary in practice.

Function Test Editor

The function test editor is made up of 5 parts:

The *survey listing* shows the test number, the test function, the PSUs, sources or loads resp., the measuring channel and the measuring range and the criteria for fail or good.

In the *stimulus field* (by default on the left-hand) you fill in the test number and information line and program the sources and PSUs, the stimulus matrix, IEC-devices or other functions such as resistance decade, ramps, motorised trimmer or other expansion modules.

Measurements are programmed in the programming field "*Measurement*" (by default on the extreme right-

The lower and upper tolerance limit can nevertheless be entered independent of one another directly or in percent. In the "*Delay*" field you enter the delay time between stimulus and the first measurement. This is necessary when a test item requires e.g. an allowed transient period until the measured value is constant. A comfortable autolearn method saves inputs. This autolearn method measures the existing values, uses the measured value as desired value and then uses the default values to calculate the lower and upper limit tolerances. Autolearn is started with the learn-button.

As there are additional possibilities for inputs for some measuring methods, there is a secondary measuring input window. In this field you can e.g. program "Unit". This enables you e.g. to execute a voltage measurement at a current resistor (shunt), which would in most cases bring results from 0, ... V, but if you enter "mA"

The screenshot shows the Function Test Editor interface with several key areas highlighted:

- Stimulus:** The left-hand panel where test parameters like voltage (5V, 15V) and current (1A) are configured.
- Test step listing:** The top table listing test steps with columns for Testname, Messart, Sollwert, Tol.UG, Tol.LG, Delay, RMX.Hi, RMX.Lo, No1, No2, La1, Gen, Look, SMX, and Siml. Auswert.
- Graphics, graphical programming and display of fault location:** The central circuit board diagram showing components like resistors (R1-R10) and capacitors (C1-C10) with measurement points.
- Measuring window:** The right-hand panel showing measurement settings such as Messart (UDC), Messwert (2,5048 V), Sollwert (2,5 V), and Tolerances (Tol.UG: 2,4 V, Tol.LG: 2,6 V).
- Measured value:** The bottom status bar displaying the current measurement result: 2,5048 V with a deviation of +0.19%.

hand). In the selection window "*MeasMode*" you select between more than 40 measuring modes. In our example we have selected UDC for DC-voltage measurement. In the "*Desired Value*" field you enter the desired value with its unit. After this value is verified, the system automatically supplies the TolUG and TolOG (lower and upper limit values). You do not have to accept the default-tolerances, but can e.g. enter 5V 2% (the desired value is 5 V with 2% upper and lower tolerance limits).



in the unit-field and a measuring factor of e.g. 0.1, the correct value (e.g. 100mA) is displayed and recorded. You can also select reference, i.e. in any range of the system you can log the measured value as reference value and measure related to it or ratio in further test steps. You use the conversion factor for displaying the measured values in a different way by multiplication or division.

You enter special settings for the selected measuring mode in the "Settings" field. In our example you can directly select the measuring range for an UDC-measurement or an Autorange is selected.

Menu item "Measuring Channel" is used for finding out which measuring channels are used for this measurement. Each measuring channel can be used as both high and low by the test system. There are several ways of input. Either you select the channels directly or you use the Gerber files and just click on the resp. component pin in the graphics window (by default in the middle of your screen), press the right mouse key and set if it is to be entered as high or low channel. How does the test program react or branch out if the measured value is not within the allowed limits? In most cases you will proceed to the next test step if the measured value is OK. If the measured value is not within the allowed limits, there is an entry in the fault register and the program proceeds to the next test step. You could also enter e. g. a "Stop" which stops the test program in case of fault and possibly displays an order for the operator such as e. g. "Turn switcher S1 on the test item to right". All reactions which are necessary for automatic test, are already supplied by the evaluation menu e. g. NotAus, End, Loop, Goto, LoadGo...

In the field which displays the measured values, you will find all important measurement results. As the test system offers Online-Editing, you can execute every test step by pressing the F3-key or by activating the button for executing a test step. In this field the current measured value is displayed numerically and in a bar. If the current measured value is not steady, the bar moves back and forth. If the measured value is not within the set upper and lower limits, the digital measured value is displayed in red, as is the display in the bar. The first measured value is also displayed in this window. This is very important for programming a delay time. It reduces or possibly avoids a debugging for the test run.

The picture shows how the PSUs are programmed.

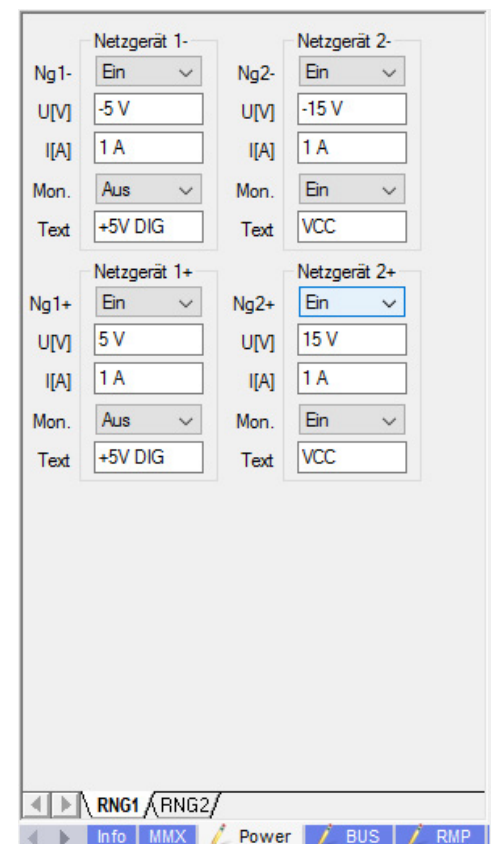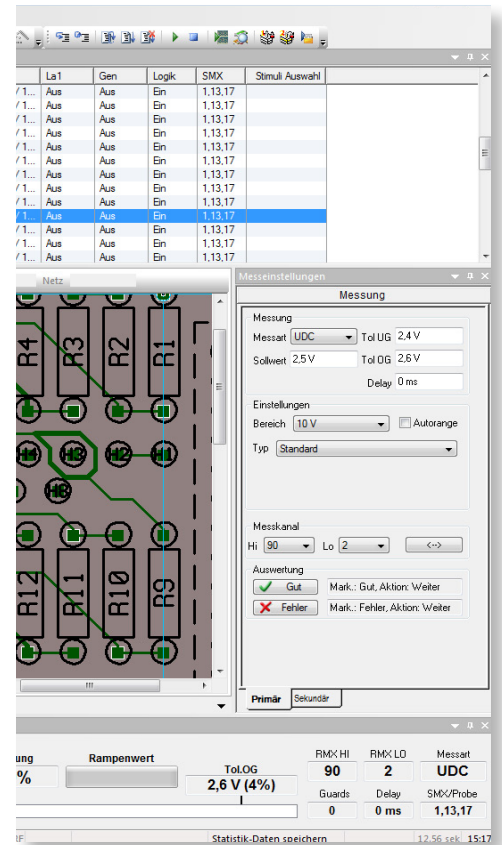




Next, the sine- and square wave generator are programmed with current limitation, offset and pulse duty factor.

In the *digital form* you program the bi-directional ALOG670 logic board. It is used for stimulating the test item with logic combinations and evaluate and measure them. First of all the logic channels are assigned to the test item and busses are created (e.g. data bus). The data connections should be named (e.g. Data6), so that there is always a clear recognition and documentation.

In the stimulus window, you can then program the driver level, the comparator level, high and low. You can do this on the keyboard. **Up** is for the driver on log.1, **Down** is for the driver on log.0, **High** is for a comparator with log.1, **Low** for a comparator with log.0. **_is** for Tri-state, **Pos** for a positive pulse and **Neg** for a negative pulse.

In the graphical logic programming window, the channels (max. 256) are shown from top to bottom, the number of test steps is shown from left to right. If several busses are used, each bus is displayed in a different colour. The graphics also take into account if busses or connections are drivers (bold lines) or if they are comparators (regular lines). Dotted lines are for Tri-state. You can stimulate or evaluate the bus systems with decimal or hexadecimal input. There are also comprehensive software generators, which can simulate stimuli in random patterns, binary sequences, chess board pattern and a number of other possibilities. Via autolearn, the program is generated automatically within seconds on a test item which is known to be good. Needless to say, you can enter bit by bit manually – nevertheless automatic programming reduces the programming time enormously. You can see at any time if all channels have shown reaction during programming so that test accuracy is high. Entering delay times, duplicating parts of the program in width and length is also a comfortable basic part of digital programming.

The (optional) transient recorder is used for recording AC- and pulse voltages with a maximum internal sample rate up to 100 ns. The auto-key is used for setting amplitude, offset and time base automatically. You can select this with the input voltage divider in 1, 2, 5 steps, you decide on AC or DC coupled. The time base is again set in 1, 2, 5 steps and you set the trigger levels and select the triggering. The parameters are entered on the right of the form "transient recorder". After a single key-stroke it starts measuring and displays the signal on screen. You can choose cut-outs of such curves which are enlarged, pulses and curves can also be measured in 8 ranges and be displayed numerically. You can enter limit values for those 8 parameters which are then measured individually. Nevertheless it is best to generate an envelope curve which can be selected with various limit values.

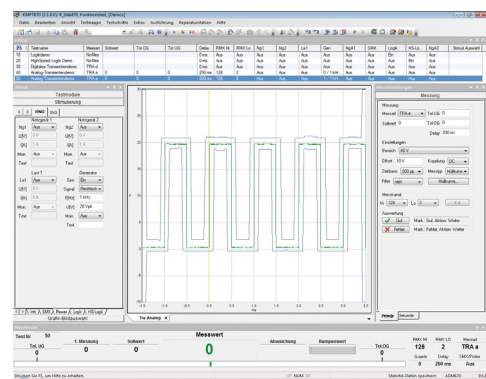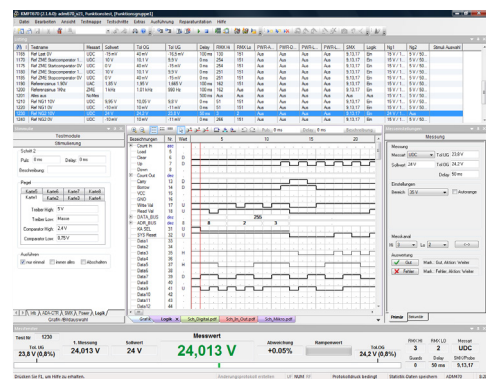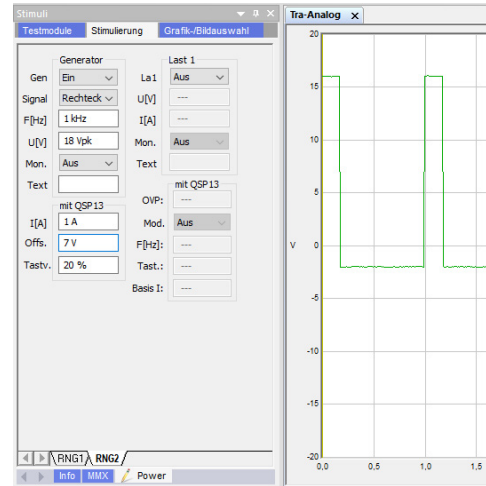

Fieldbusses

With a BUS-system you can transmit data to the test item or to a measuring device. In the stimulus field, data can only be transmitted. Data can be received with the "BUS" measuring mode. At the moment, busses IEC, I2C, COM, Int37, CAN, VISA, I2C-EEP, Profibus, eBus, TCP/IP, Ser, SPI, ODBC are available. By default, the data are interpreted as ASCII-text. When transmitted as binary values, you may choose between decimal, hexadecimal and binary display.

| BUS | Used Hardware | Series |
|----------|---|--------|
| IEC | IEEE-interface board in the PC | no |
| I2C | integrated I ² C-Bus of the DEC670 multi-function board | yes |
| COM | PC interface | yes |
| Int37 | REINHARDT-Interface for test system control | yes |
| CAN | CAN-inteface board in the PC | no |
| VISA | integration of the VISA-software interface | yes |
| I2C-EEP | integrated I ² C-Bus of the DEC670 multi-function board | yes |
| Profibus | Profibus-interface board in the PC | no |
| eBUS | eBUS via eBUS-adapter by DUNGS | no |
| TCP/IP | communication with various devices via Ethernet-interface of the control computer | yes |
| Ser | integrated COM-interface on the DEC670 multi-function board | yes |
| SPI | integrated SPI-interface on the DEC670 multi-function board | yes |
| ODBC | software-interface for communication with a data base management system | no |

As the DEC670 multi-function board is not used in the ATS-UKMFT-family, its busses are not available, too.

Apart from these bus systems there is the bus "Buffer" in the bus measurement for the evaluation of the internal software buffer. No new data are gained via a bus. With "Buffer" you can also evaluate a file.

Integrating External Programs

External programs enable you to integrate external software in a test run. You can also read out the contents of files and evaluate them within the test program. This measuring mode helps to execute an external program and take it over again by the test system. If an external program is called, the program can be controlled by program parameters. When an external program is called, this program remains active and the test system-software remains open in the background. When the external program is closed, the test system-software comes into the foreground and continues to execute the program.

Bus

Art: COM

Konfig.: #1 9600 N 8 1 -

Adresse:

Init: *CLS 13

Trigger:

Attribut: Fehler Reset

Fault Journal

There is a hard copy of the fault journal below as it is set (default) when a test system is delivered. The customer may use the EXCEL®-software (which is not part of our delivery) in order to create his own layout for editing the desired values. He can also supply his company sign etc.

Testmappe: TM_adm470_v21
Seriennummer: ADM0014

Isolationsstest Fehler
Netz 117 verbunden mit Netz 177
Netz 177 verbunden mit Netz 117

IC-Test/IC-Gruppe1/Schritt 10: PLD1 Fehler
fehlerhafte IC-Pin-Nummern: 5

| Bauteiltest/Schritt | Passive Bauteile/Bezeichnung | Messart | Untergrenze | Messwert | Obergrenze | Ergebnis |
|--|------------------------------|---------|-------------|------------|------------|----------|
| 1820 | | R | 261,9 Ohm | 179,97 Ohm | 300 Ohm | Fehler |
| Funktionsstest/Funktionsgruppe1 | | | | | | |
| Schritt | Bezeichnung | Messart | Untergrenze | Messwert | Obergrenze | Ergebnis |
| 1155 | Ref Sinus Amplitude 0V | UDC | -16,5 mV | Overflow | 40 mV | Fehler |
| 1160 | Ref Last 10V | UDC | 9,9 V | 0,0009 V | 10,1 V | Fehler |
| 1170 | Ref ZME Startcomparator 10V | UDC | 9,9 V | 0,0125 V | 10,1 V | Fehler |
| 1180 | Ref ZME Stopcomparator 10V | UDC | 9,9 V | 0,0064 V | 10,1 V | Fehler |
| 1200 | Referenzsinus 1KHz | ZME | 899 Hz | 5,00 Hz | 1,1 kHz | Fehler |
| 1250 | Spannungsquelle +10V | UDC | 9,9 V | -3,8474 V | 10,1 V | Fehler |
| 1260 | Spannungsquelle -5V | UDC | -5,05 V | -3,9890 V | -4,95 V | Fehler |
| 1270 | +10V am Messbus | UDC | 9,9 V | -0,0352 V | 10,1 V | Fehler |
| 1280 | 500Hz für Transistor | ZME | 494 Hz | 0,00 Hz | 506 Hz | Fehler |
| 1290 | +10V an Guard | UDC | 9,9 V | -3,9630 V | 10,1 V | Fehler |

Quality Management – Reference Test


More often, reference tests are specified in testing requirements. Based on a test item which is known to be good, the function of the test system and the fixture must be checked and documented after a specified number of test runs or after a specified time interval. As soon as the number of test runs or the time interval is reached, the test system is blocked and testing can only continue after the reference test. You need an ADAEEP fixture recognition module for the reference test.

Prüfung fehlerhaft

2 fehlerhafte Netze im Isolationsstest
1 fehlerhaftes IC im IC-Test
1 fehlerhafter Schritt im Bauteiltest
10 fehlerhafte Schritte im Funktionsstest

Testname: TESTSYSTEMADMIN
Datum/Zeit: Donnerstag, 29. Oktober 2015 11:49:20



Unterschrift:

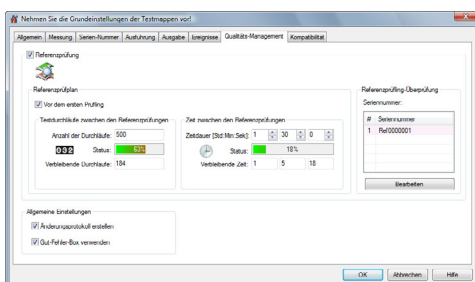


This reference test complements the System Diagnose.

Program Generators for Function Test

In developing this software our 25 years of experience in power supply test was taken into account, because we wanted to share our knowledge and experience with our customers. Therefore, our complete knowledge was made part of this automatic program generator and we have developed a standard valuable tool for programming and wiring in function test. This wizard enables even an inexperienced operator to create an executable, efficient and expressive function test program for power supplies and transducers in a few minutes. The wizard first demands the kind of primary supply, AC or DC. Then it lists e.g. all available AC-sources in a pull-down menu. A new form appears in the next step where you only enter the nominal voltage (e.g. 230 V) and the minimum and maximum supply level. The maximum primary power supply (Imax) can be entered as well as the minimum no-load current. With an AC-supply, the frequency is also entered. In further input forms you describe the outputs. When the nominal voltage is entered, the system proposes +/- 10 % by default which can of course be changed again. Apart from that you enter the maximum current, the current limit values and the frequency for an AC-supply.

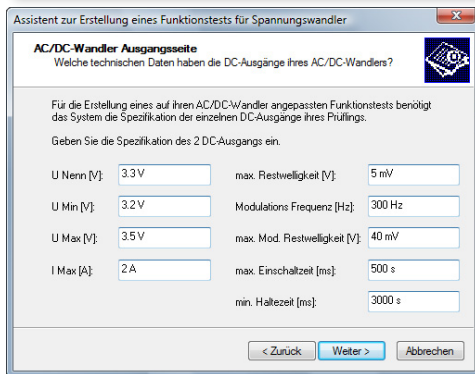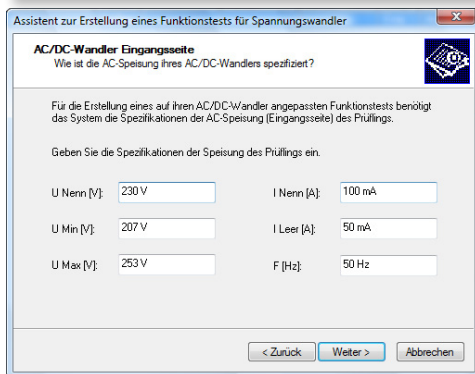


The wizard then asks you for the number of primary outputs and asks you to enter the technical specifications into the respective fields.

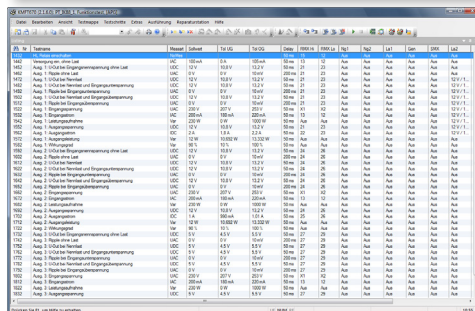

In these fields you enter Umin, Umax and Imax as well as the max. residual ripple, the modulation frequency, max. activation time and minimum stop time.


When all values and limits are entered, the system again proposes the available electronic loads. The wizard takes care that the respective modules fit the required specifications.

The entry for the DC-supplied power supplies is similar. The software then creates the test program for the test item with nominal voltage, minimum supply and maximum supply. Efficiency, residual ripple etc. are tested. In parallel the software creates a wiring plan which only has to be realised identically. So a very good test program is already available which can be expanded with additional test steps at any time.

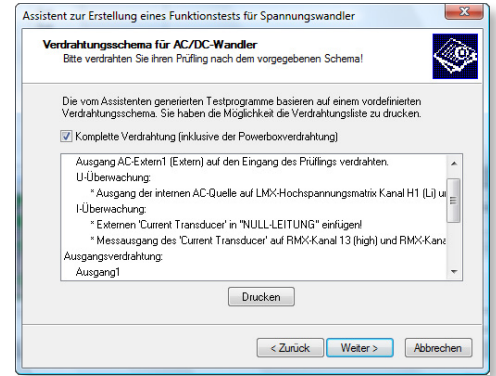



Modification Listing

The modification listing grants a complete documentation and history of any change in a test program for the electronic PCB. There is information as to when incl. date and time, where (test device), maybe who logged in and detailed information on the changes.



Statistical Calculations on Faults and Parameters


Our test systems come with a comprehensive statistics package as standard and this will for example print the measured values of all the handled units to test and then process them as required. We supply two modules for further processing. The report on faults is expressed as a percentage and also the number of defective units is displayed. Then there is a graphic representation complete with fault frequency distribution which can be used to produce a histogram or calculation of the relevant statistical values. The values displayed include: highest measured value, expected value scatter, scatter, 3 sigma limits, above/below, and a graphic representation of the distribution curve. These parameters provide quality control with useful evidence for improving the product and recognising early failures which are represented by asymmetrical distribution curves and taking steps to eliminate them. The statistics can be produced completely automatically or they can be calculated on a separate computer.

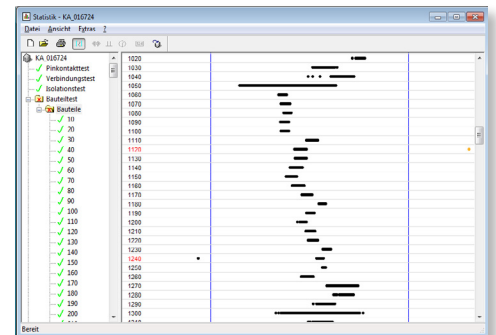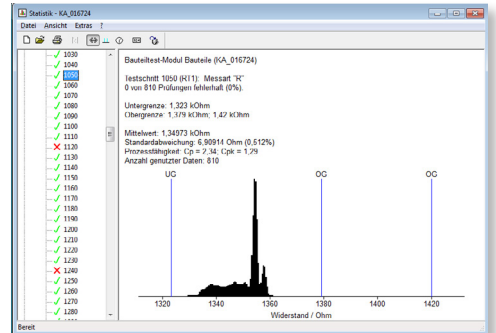

Open Database Connectivity – ODBC-Interface (Option)

Sometimes the REINHARDT-test system is integrated in quality management or production procedures with data base management. By default, statistics data can be interpreted separately and supplied for processing in a data base with the Export function of the statistics software. An interface of the REINHARDT-test system to the data base grants further facilities. The data transfer can be configured so that the data base management system can process the information for quality management, statistics, etc.

The required data base is selected with the ODBC-interface and a connection text is generated. In the test run, this text is used for selecting the data base where the data are stored. Then the table

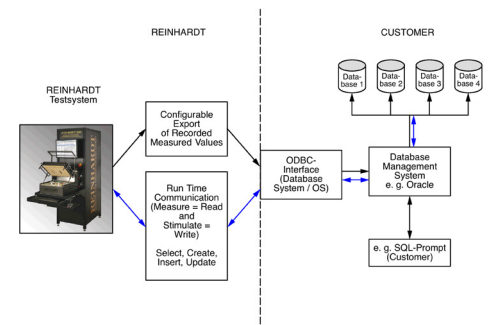


is chosen which stores the data. For that you may use an existing table or generate a new one. When the table is selected, its fields are listed so that only the data sources must be assigned. If the name of a table which does not exist yet is entered, the required fields must be selected and connected to the data sources.

Downloading FPGAs or Software

Within the last years, we had to learn in many applications that it is necessary to fuse FPGAs or similar elements and to load special software in the test procedure. Depending on the application, these tasks can be executed by our serial interfaces RS232 or I²C, but also with our HighSpeed-Logic and the static logic channels to a single depth of 8K. With RAM-information above 8K, they can be repeated. With RAM-information in the MegaByte-range, we would recommend to integrate programming systems common in the market. Our software is prepared for that.


ODT Optical Display Test (Option)

LCD and LED-displays, dot matrix, mask and seven segment displays are widespread and must be tested. A USB-video camera with any resolution supervises the display. The displayed numbers or letters are read, independent of font or typeface. The results are processed in the test procedure. A dot matrix can be evaluated. An automatic black-white adjustment is possible as is automatic adjustment. Contrast or intensity of the display are checked. For seven-segment displays and dot matrix, there is a comfortable editor with auto-learn functions and a character library. In board assembly, displays are often soldered or mounted a bit crookedly. Therefore, an automatic xy-adjustment or alignment with programmable limits has been integrated.

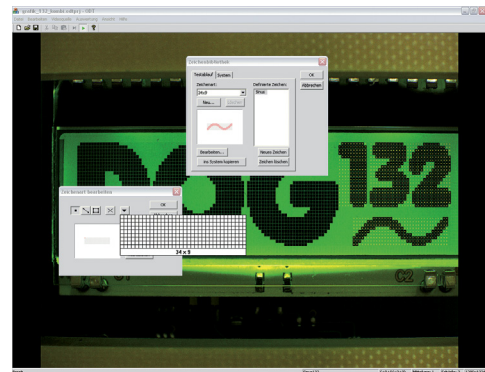


Display of Fault Location

You must choose the right test method in order to get the best test and an optimum fault isolation. After the test system has found a fault, you can indicate this fault visually on the screen by only one key stroke. For that, a video camera takes a picture of the test item. This picture is digitised. The fault is graphically displayed with a crosshairs or a frame around several objects. Another software works out CAD-data. These pictures can be taken from any CAD-system working with graphics boards and transferred to the test system. Again, you need a special board in your PC, a video camera, black-white with tripod and a control software. The information gained in this way can also be used on the off-line repair station, so that a repair is possible without any technical papers.

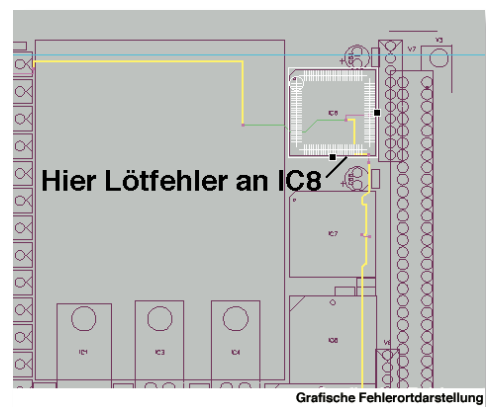

Boundary Scan

Sometimes there are constellations on BGA- or μ BGA-components, where connections for the In-circuit test are not accessible mechanically. A Boundary Scan test can be suitable in this case but it has to be prepared in development and design of the electronic PCB. Boundary Scan only requires two additional bus connections, the TCK (Test Clock) and the TMS (Test Mode Select) which are connected in parallel to any IC used in Boundary Scan. Digital Boundary Scan can check connections between the resp. circuits. A short-circuit can also be found. A digital signal pattern is applied to the IC-pin under test (Test Data Output TDO). The connected IC (ICs) is scanned via Boundary Scan, if the resp. signal pattern is applied (Test Data Input TDI). Since more and more electronic components such as CPLD or FPGA and more and more bus components too are Boundary Scan-capable, this can prove a comfortable expansion for a combined In-circuit and Function test.

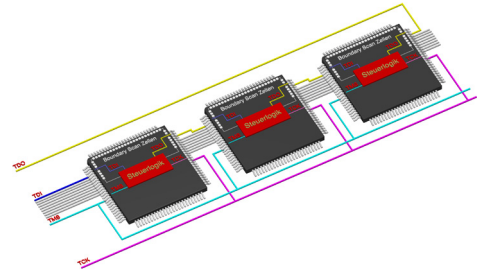

REINHARDT-test systems with their combined In-circuit and Function test offer a perfect surrounding for expansion with Boundary Scan-test. In case certain points of the DUT cannot be addressed directly via Boundary Scan, you can do that via the very cost-effective bi-directional logic channels of REINHARDT-test systems (e. g. LOG 96 Logic Board).

The RBS 100 (REINHARDT Boundary Scan) module is completely integrated in the user-friendly software of REINHARDT-test systems. As in other REINHARDT-solutions, only the Gerber files and the BSDL-data (Boundary Scan Description Language) of the ICs are required for creating a Boundary Scan-test program.

| Nr | Testname | Messart | Schwert | Tol UG | Tol OG | Delay | RISX H | RISX Lo | Ng1 | Ng2 | La1 |
|------|---------------------------|---------|------------|------------|------------|-------|--------|---------|---------|-----|-----|
| 1000 | Flussleiter? | UDC | 5 V | 100 mV | 100 mV | 1 ms | Aus | Aus | 5 V / 1 | Aus | Aus |
| 1070 | Fehler LED EPLD | FANB. | 180 | 170 | 190 | 0 ms | Aus | Aus | 5 V / 1 | Aus | Aus |
| 1080 | Fehler LED MICRO | FANB. | 180 | 170 | 190 | 0 ms | Aus | Aus | 5 V / 1 | Aus | Aus |
| 1090 | Fehler LED ACCESS | FANB. | 180 | 170 | 190 | 0 ms | Aus | Aus | 5 V / 1 | Aus | Aus |
| 1100 | Clock 120kHz messen | ZME | 12 MHz | 11,989 MHz | 12,011 MHz | 1 ms | 285 | 2 | 5 V / 1 | Aus | Aus |
| 1110 | Master Clock 30kHz messen | ZME | 30,780 kHz | 30,620 kHz | 30,939 kHz | 1 ms | 422 | 2 | 5 V / 1 | Aus | Aus |
| 1120 | Fluss Puls messen | ZME | 300 ms | 270 ms | 330 ms | 0 ms | 230 | 478 | 5 V / 1 | Aus | Aus |

DAC-Messung
Messwert: 5,0032 V
Abweichung: +0,06%
Tol.UG: 5,016 V (0,3%)

RAM-Test
Messwert: 4,985 V (0,3%)

Bustreiberprogrammierung


SPI-Programmierung

These data are used for graphical display of fault locations and the connections of the single ICs.

RST 40 REINHARDT-Synchro-Test


When the test station in the electronics test bay proves to be the bottleneck in production because of ever more comprehensive tests or because more and more test tasks are executed on the test station with its bed-of-nails apart from the in-circuit- and function test, the ever growing test speed cannot compensate this. With the RST 40 REINHARDT-Synchrotest module, a threefold or fourfold test is executed in parallel just like a mixed test with the in-circuit test on one station and the function test on a second station etc. With the so-called multiple project, e. g. with 3 different PCBs, different types of electronics PCBs can be tested simultaneously. Even somebody who is not very familiar with network programming, with C++ or Visual Basic can integrate the REINHARDT-test systems in a network with this module. four systems can save 400 % test time.

This software module allows remote programming, diagnose and control via network so that one or more test systems can be controlled, monitored or tested from wherever you want.

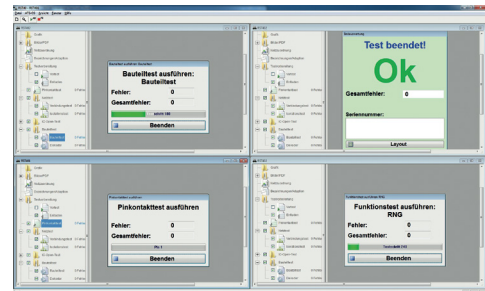


Programming Station

If your test system has no capacity left for programming tasks, you need a programming station. Programming can be offline on any PC-computer. You only need a copyright. This programming station can be connected to the test system via networking, but programs may also be stored to disks which are in turn stored to the test system. You may use one or more programming stations, but you need to buy a software-copyright for each of them.

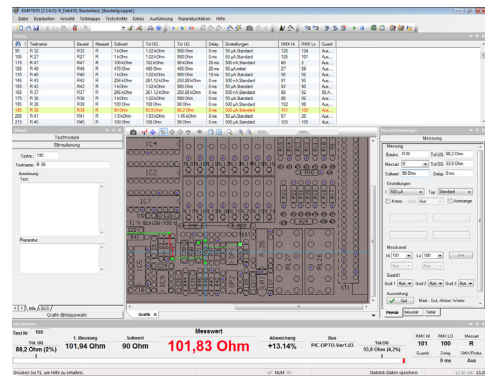

RDR Repair Station

We have developed the REINHARDT Offline Repair Station for our WINDOWS®-based test systems. The repair station software can be installed on an offline repair place or on the test station and with a further licence on two stations at a time. The software comes with an USB-dongle so that it can also be used alternately on various stations. With the RDR-software PCBs can be repaired offline with complete graphic display of faults. It also displays the respective test step with all its information such as e. g. measuring range, upper/lower limit, comments, measuring channels etc. With the repair station, the test system need not be used for repair so that there is higher throughput of devices under test. This software uses the statistical data of the PCBs. Working with an offline repair station is only possible if the devices under test are clearly identified by a number or a text, such as e. g. a serial number. In the statistics data the number of repair

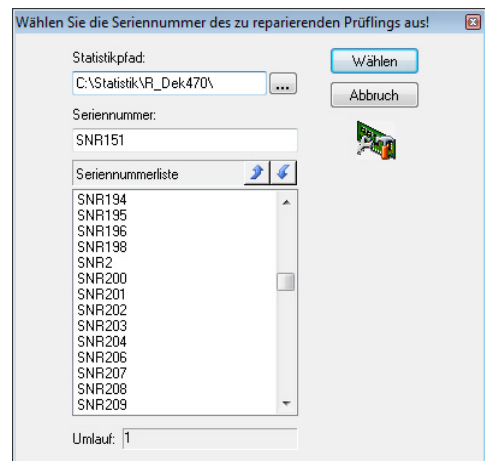

and isolation test and the APG in the component editor as well as the component statistics can be used. Conversion of the data is widely automatic and is easy to understand even for inexperienced users.


Transfer of Bills of Materials for Creating Test Programs for the REINHARDT-In-circuit Test

Our extremely practice- and user-friendly transfer of bills of materials (also known as BOM) for creating complete in-circuit test programs does not require any special knowledge in information technology. You must only know how to use a PC. Our solution is a very cost-effective alternative.


Every CAD-system for the development of electronic PCBs which is up-to-date, can edit bills of materials. This is absolutely necessary for outsourcing, both in producing PCBs as in purchasing components. With an EXCEL-software we read in the bills of materials, sort them, delete unnecessary information such as e. g. company heading etc. With cut and paste, the sequences of the columns are then sorted as required by the REINHARDT-CAD-Import. By generating a Macro, these steps of the procedure with the EXCEL-software can be simplified and automated. The created file is exported as ASCII-file and can now be imported in the standard import of test system. The test system software reads the processed EXCEL-list and automatically creates a program. The Gerber files of the PCB-creation are used for creating a layout with the connection points. The connection points of every component are learnt in a few seconds by clicking on the connection pins. Our automatic program generator generates 300 components in typically 3–4 minutes. The set desired values with their tolerances are learnt from a PCB which is known to be good. Guarding follows and up to 8 Guard points are transferred to the program. Debugging, i. e. delay times which arise by loading capacitances, is generated automatically and transferred to the program. The few test steps that could not be generated in this procedure are marked red and must be checked. Mostly there are blocking capacitors of the various ICs. As they are connected in parallel, a new test line must be created which lists all these capacitors. This also applies to resistors which are connected in parallel. In this way, a comprehensive in-circuit test program can be created in typically 3 hours, but without an extremely complex software.

OLR-Software – Optical Layout-Reconstruction for Creating a Test Program and a Fixture


If no Gerber files are available, you can generate the necessary data for creating a test fixture. The solder side of the PCB is scanned, with SMT the component side too or both sides are scanned. The PCB can be aligned and rotated and you can enter its outside measurements. The completely assembled PCB is then rectified 1 : 1 on screen. There are software tools for generating the test points of the ICs. Thus you can generate all test points for e. g. an IC with 128 pins in a few sec-

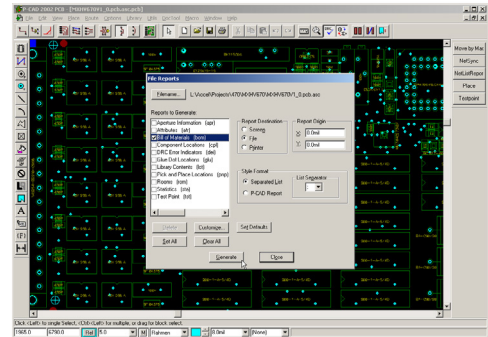

Creating a Bill of Materials

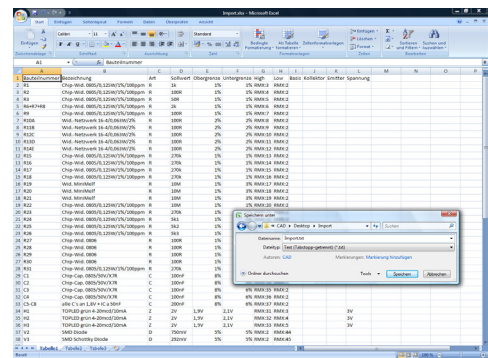


Save read-in and processed file

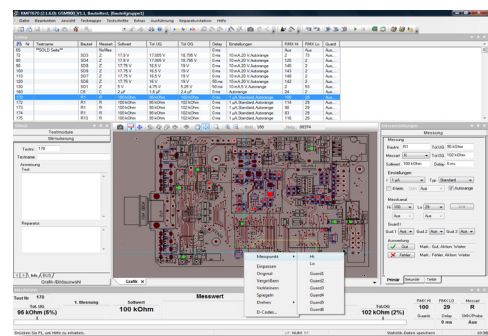

The automatically created program

onds. A grid which can be set and moved is for exactly positioning the contact points. The remaining points, single points, multi-way connectors as well as PLCC-cases can be generated and positioned 1 : 1 on the test item. You can also process the generated files to a drilling machine which then drills a test fixture. Scanning the PCB and inserting the IC-overlays or test point-overlays resp. usually takes 10 to 15 minutes.

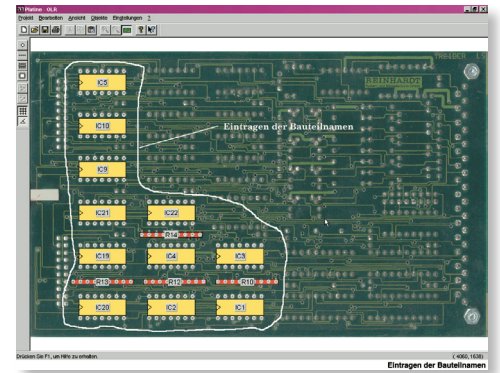

Our Complete Solution incl. Fixturing


A test system, whether for In-circuit or for Function test, can only be used in a reasonable way, if the item under test, PCB, hybrid, module or SMT-PCB, can be connected as well as possible for a most comprehensive test. We have always tried to produce cost-effective test systems with an extremely user-friendly software. Our solutions for fixturing are extraordinary: We have developed various systems for fixturing which are unusual in costs, user-friendliness and space needed for them. Testing has become economical even with small units. Our semi-automatic system for building fixtures can be used together with our fixtures. In less than one day you can thus create a solution for many hundred pins at your own site.

Various solutions for building test fixtures semi-automatically by using Gerber files

In Germany and Western Europe it has become pretty expensive to produce and test PCBs because of the wages and the costs around them. Many companies have therefore shifted their large scale production to the Far East in order to produce more economically there. This brings about that there are only middle and small-lot productions on the German and the European markets. This is why things had to be thought over in testing and especially in building fixtures. Years ago, production runs with 100,000 and more pieces per type were absolutely common. In the meantime, the numbers of pieces have diminished pretty much. Nowadays, one can hardly plan in this way. In the past the costs for fixturing could easily be allotted to the number of pieces – testing nevertheless remained economical. In the meantime, the structure of the market has changed in that a big part of the electronics is produced by mechanical engineering industries as well as by their sub-contractors. There is an enormous variety of types in this field therefore, with limited numbers of pieces at that. Today, there are production lots between 200 and 400 pieces. In creating fixtures for such lots, especially in the in-circuit test field, the costs very often run up to sums in between 4,000 and 10,000 Euro for both preparation and creation. You also have to pay the capacity/non-capacity of the service industries. These costs can in no way be apportioned to the numbers of pieces given above. Therefore it has become necessary to think about new ways for such lots.

We have made fundamental changes in the preparations for a fixture as well as in the final mounting of the fixture with the corresponding systems. We deliver the *semi-automatic system* (software and CNC drilling machine), which calculates the positions of the test pins, drills the fixture and places the pins. *It helps you to create a fixture on your own – in your own house in less than one day. Please ask for a detailed quotation.*


The following diagram shows the structure of the tasks:

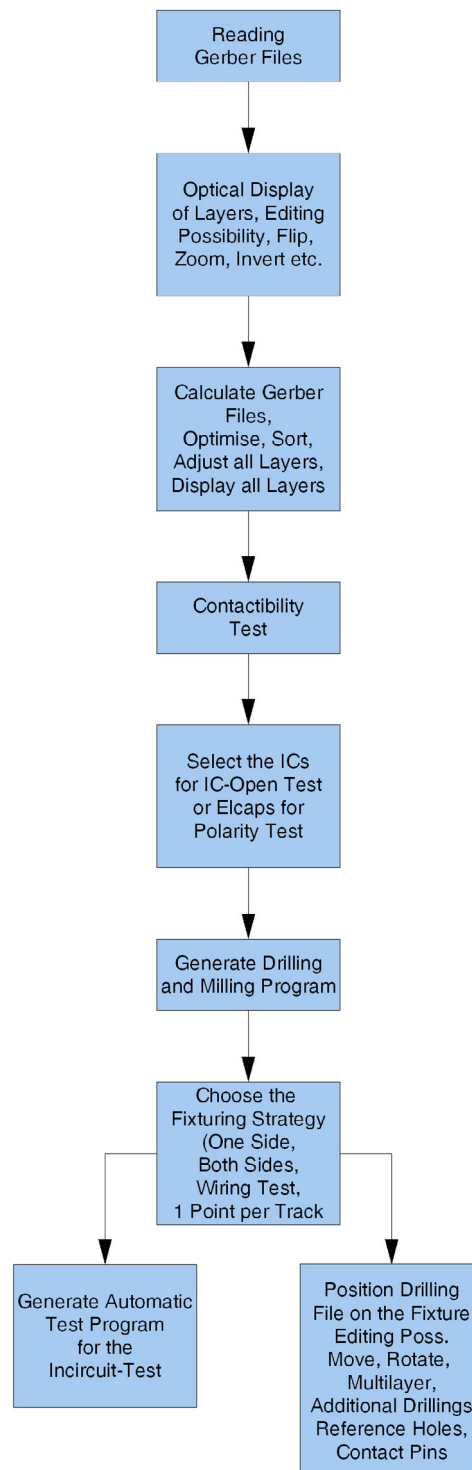

Elaborating Gerber Files

Without exceptions, all CAD systems offer Gerber data, the only common standard of CAD systems. That is why we use these data which are made up of single vectors. With them we calculate complete conductor tracks with the component drillings and the through-connections. The single layers (up to 255) can be graphically displayed on screen, either one after the other or all at the same time, or they can be edited if needed. Various D-Codes can be extracted of the displayed layers and single layers can be reflected. When all the layers are congruent, the software starts recalculating all tracks. This process is worked out within a few minutes, even for double-Eurocards in multi-layer technique. In a menu, you finally select if either all terminating points of the tracks or only one drilling per track is used for creating a fixture; of course this is displayed graphically. This software also checks the minimum distances between the monitoring points: It displays a message if you can no longer use 100 mil-contact pins (cost-effective, robust), because they are too close or that you have to use a 75 mil-contact pin (blue frame) for this monitoring point. Two monitoring points marked in a red frame mean you can only use 50 mil or even smaller contact pins here (if possible you should avoid this, as they are expensive and not robust.). The user should try to avoid such narrowings and use a suitable other test pad, even if this causes a re-design of the PCB. Tracks which are not contacted are flashing, i. e. they are not contacted, e. g. if IC-pins were connected with a track below the IC or if fixturing is from one side only and the track is on the side of the PCB which cannot be contacted from this side. As soon as everything is corrected or accepted, you place the reference pins or items which support you in inserting the boards. Finally the drilling diagram is positioned on the usable area of the fixture. This is done by centering it or by rotating. The usable area of the fixture can be used by some drilling programs so that two or more devices under test can be set on one fixture box if the test items are small.

The whole process for editing, displaying the PCB, creating the tracks and the drilling data takes about 10 minutes. These processes take about 2 to 3 weeks less than they used to when done in the manual technique used until now.

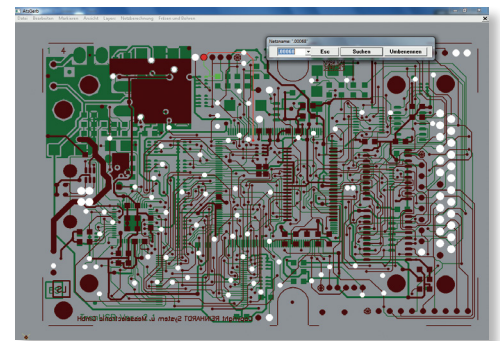


Building Fixtures

The CNC drilling machine we offer is a package which contains hard- and software, box for 630 receptacles with spring contacts and sub-cabinet, but neither computer nor monitor. This three-dimensional CNC-drilling machine has got a slide travel of 395 mm (X axis), of 300 mm (Y axis) and 140 mm (Z axis). Accuracy is 20–30 μ , repeat accuracy is 10 μ . The unit requires compressed air, not lubricated, 6 bar pressure at a quantity of 50 l/minute.

Supply: 230 V



Dimensions: 80 cm high, 80 cm wide, 100 cm deep, weight about 110 kg.

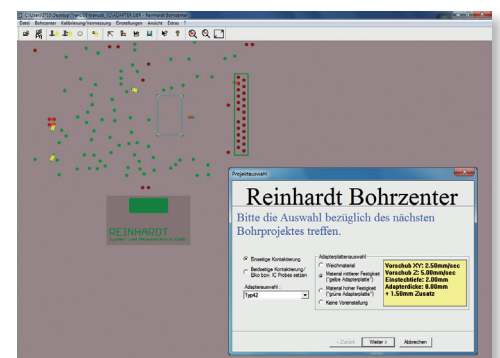

Using the data which have been gained and selected out of Gerber files, the laminated paper plate is drilled for the contact pins, the reference pins, guidings and perhaps the IC-Open probes and polarity probes. You neither have to take care of offsets or other special inputs when you want to use the fixture drilling center as the dimensions of the plates are known and there are fixed holders for them. All holes can be drilled into the laminated paper plate true to gauge in less than one hour. A special press-in device, which is also controlled by the CNC-machine, supports this procedure. The spring contacts with receptacles are pressed in automatically with high accuracy. Using the D-codes, the system selects contact pins with different heads from the bi-partite magazine. You have to use different heads if you have chosen different contacting points. The contact pin of a wired component e. g. would be contacted with a crown, an open feed-through or a test pad would be contacted with a tip. On the whole, this process takes less than two hours. Wiring with wire-wrap cables follows. We have prepared cables with connectors on both ends. With them, the connector which contacts the test system is wired to the spring contacts. Wiring about 300 connections approximately takes you two hours. A test fixture incl. the calculation times of the Gerber files can be finished completely in about 4 to 6 hours.

Test Fixtures


We grant that, from the very first thought until it is finished, a fixture can be made in less than one day. You therefore need a great deal less know-how and less efforts. This further reduces cost and time so that building a fixture today takes about 300 to 800 Euro. We have calculated that this fixturing system is profitable after only three fixtures. The costs for any further fixture will only be a fraction of the usual costs. Normally, you will only have 1/5 or 1/8 of the usual costs. What cannot be given in a sum of money is the spontaneity that results from the fact that you are able to build fixtures all on your own – within hours at your own site and without contacting suppliers.

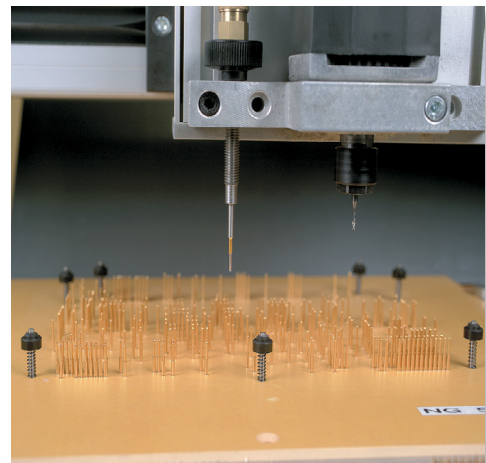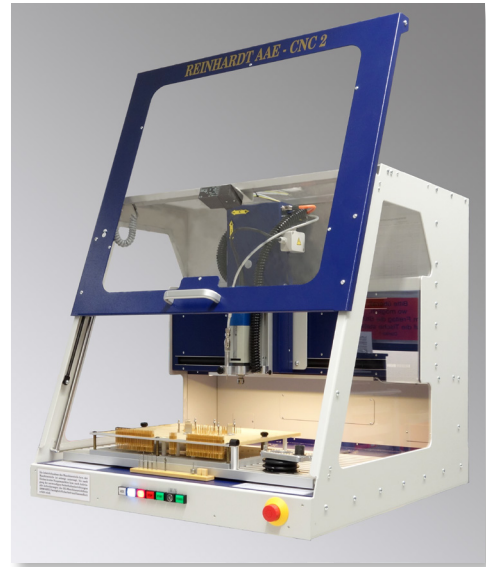

Our Fixturing System

As Germany's leading manufacturer of In-circuit- and Functional test systems, we have been producing test fixtures for testing electronic PCBs since 1990. Meanwhile, there are more than 86,000 fixturings are used with REINHARDT-fixtures. As we keep close contact with our customers, we know their difficulties in building

In both In-circuit- and Function test you have to measure into the test item, i.e. for location of defect each component has to be contacted or in function test the respective monitoring points or clusters have to be contacted. Spring contact pins are put onto the GRP-plate and make contact with the test item. For that, the test pads are contacted as are solder joints which are used in through-hole technique. For contacting every joint, quite a number of those spring contact pins is

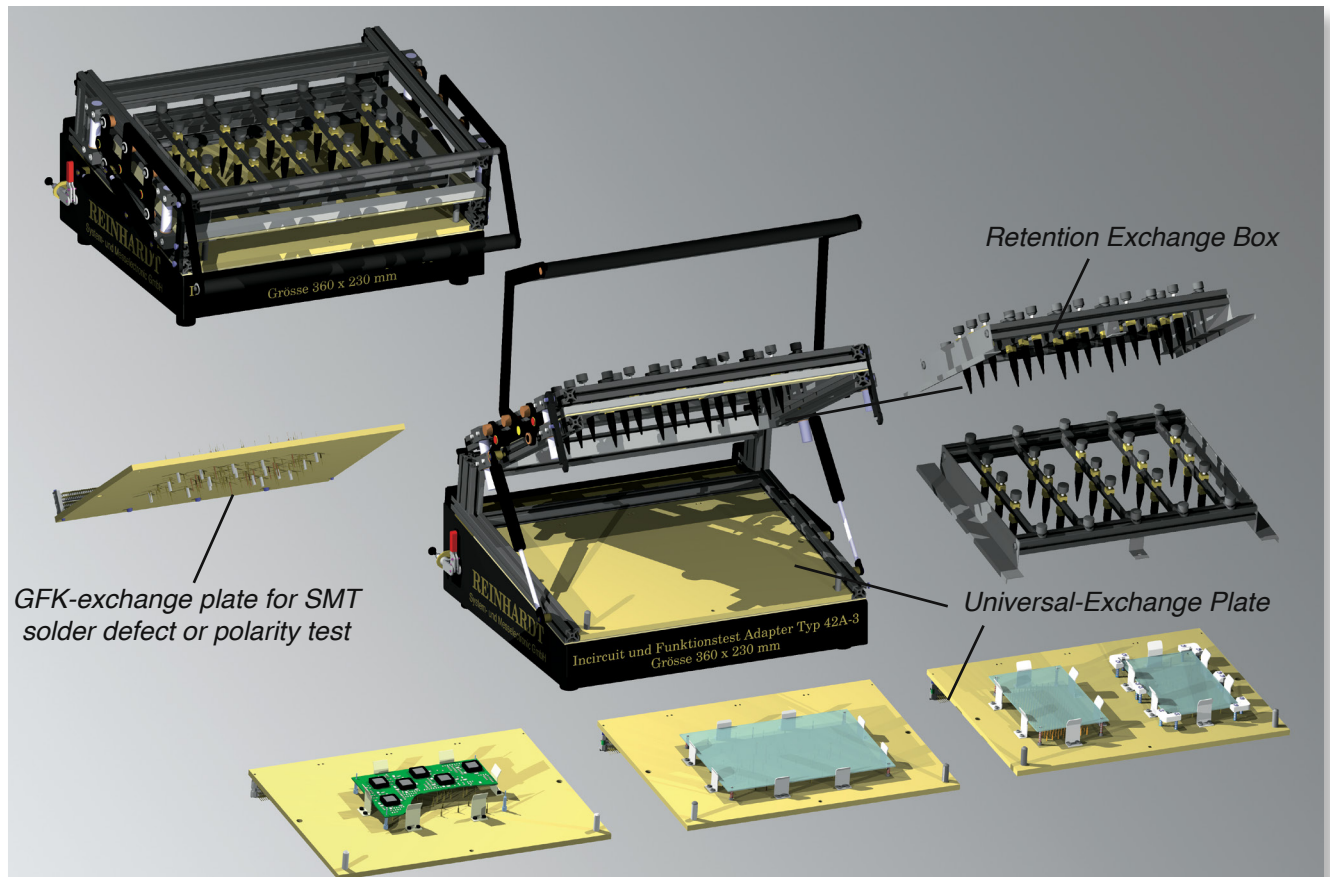

fixtures for in-circuit and functional test. Our long-time experience becomes part of our fixturing systems which are continuously adapted to the requested needs. At the same time, we keep our fixtures practice-oriented and cost-effective.

In the field these systems turned out to stand many millions of contactings of test items. This is granted by a well dimensioned mechanics. Precision deep groove ball bearings are used at the heavily loaded pivot points so that our fixtures are almost maintenance-free.

Ergonomic operation is most important for us. This is why the lids of our test fixtures open wide. In this way, the device under test can be placed and removed quickly and comfortably. Therefore, handling times are short and the operator gets less tired.

put onto the hardboard or GRP-plate. The test item is placed on them and adjusted with collector pins. With retention pins which should be evenly distributed over the PCB, it is pressed to the contacting areas.

Bed of nails

Our beds of nails (exchange plate) are drawers. Needless to say, the lower GRP-exchange plate (drawer) is compatible to former fixture types. The basic fixture is connected by plugging a number of 64/96way multi-way connectors (only once!). This is why the times for changing component types are very short (typically 1 minute). For technical details, please see the survey of fixture types.

Retention box

An exchangeable box with retention pins comes with the basic version of a fixture. The retention pins can be adjusted as required by the resp. item to be tested. You therefore only buy the box once – this reduces your testing cost.

For SMT-solder defect test or polarity test you can change the box for an optional upper GRP-exchange plate.

Working method of an exchange plate fixture

Procedure from placing the test item to contacting it:



1. After opening the upper lid with its integrated retention pins, the test item can be placed comfortably as it is guided precisely by the collector pins.

2. The lower bed of nails is fixed with these types of fixtures. After the upper part with the retention box is turned down, the retention box clicks into place and is then lowered from above – absolutely in parallel with a few hundredth millimeters accuracy at each of the four sides and without any tilting (There are four linear guidings with bronze bushes which do not require maintenance). With its retention pins, the retention box holds down the test item and presses it to the bed of nails with the spring-suspended contact pins. As the front lever is wide and ergonomic, both left-handers and right-handers can use the fixture without difficulties. Operation forces have been distributed so that over 90% of the operational distance, you only apply less than 1 kg force. Only for a peak of a few percent of the total operational distance, the force rises to 6 kg with the maximum number of pins (e. ge. >800).

Contacting from top and bottom

For contacting from top and bottom, an upper SMT-GRP exchange plate with the pins, polarity test probes and receptacles of spring-suspended reference pins can be used instead of the retention box. Contacting the electronic PCBs from both sides (above and below) is only possible, because REINHARDT-fixtures press down the test item exactly in parallel.

REINHARDT-fixtures offer another big advantage for preparatory measurements for new test programs: Since you always have to measure signals at the single pins, the fixture types 40, 42 and 82C, be it pneumatic or manual, can be opened although the upper part is closed for contacting the test item (see picture below) and you can reach the pin connection for measurement tasks.

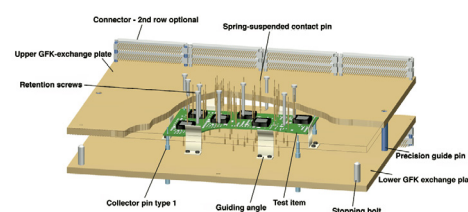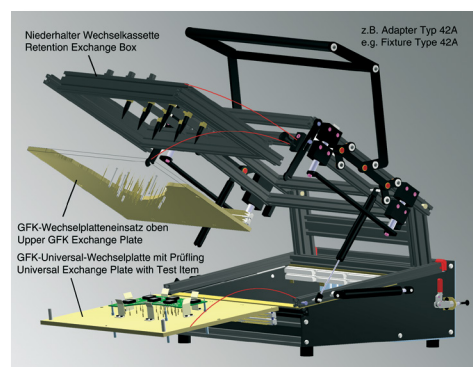

Type 42 with open lower part

Our Fixtures


Type 40 Pneumatic Fixture makes contact from both sides

Fixture Type 40 is closed manually, but two pneumatic cylinders press it down. Dual-stage is available so that very precise testing of components is possible. After the test, the pneumatic cylinder returns to its home position and the fixture opens automatically.

Security switch by two-handed operation

Shift: In-circuit test: 20 mm, Function test 13 mm

Compressed air, unoiled, 6 bar, 5 Micron

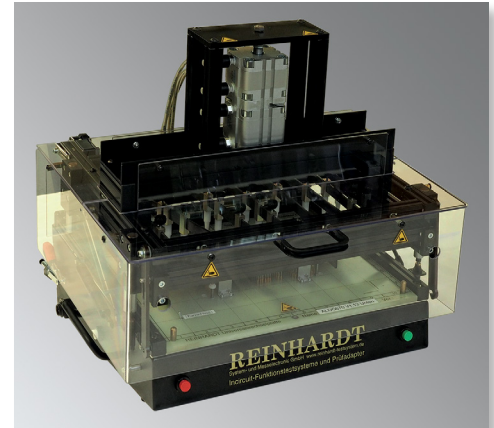

Type 40B Pneumatic Fixture with Protective Cover

Type 42 Manual Fixture allows double-sided contacting

Manual fixture Type 42 is our best-selling fixture. It comes as a desk-version with sloping working area and a lower exchange plate and a retention box. Working area: 360x230 mm, max. 1,000 contact pins



Type 42A

Type 42C Manual Fixture

Fixture Type 42C comes with a sloping working area and is designed for use with an ATS-KMFT 670/ATS-MFT 770 with expansion rack. The fixture has 4 linear guidings. It comes with a lower exchange plate and a retention box and 1 (max. 36) 64- and 7 96-way interchange connectors. Working area: 360x230 mm, max. 1,000 contact pins



Type 42C

Type 82C Manual Fixture

This manual test fixture has a working area of 480 x 320 mm and was designed for a basic system with expansion rack.



Type 82C Manual Fixture

Type 82B Manual Fixture

This manual test fixture has got 480x320mm working area. A lot of space is available inside. This fixture comes with one SR18VG-interface.



Type 82B

Type 127 Manual Fixture


Type 127 was designed for medium-sized PCBs and max. 500 spring contact pins. It is particularly suitable for use with an ATS-UKMFT 627. Fixture Type 127 is delivered with a retention box and retention pins.



Type 127 Manual Fixture

Type 147 Manual Fixture

Fixture Type 147 has the same usable area as types 42 and 40 although its pressure force is for max. 800 spring contact pins. It is also particularly suitable for use with an ATS-UKMFT 627. Type 147 comes with a retention exchange box. With knurled head screws, the 5 longitudinal arms with the retention pins are individually adjusted for the various test items.

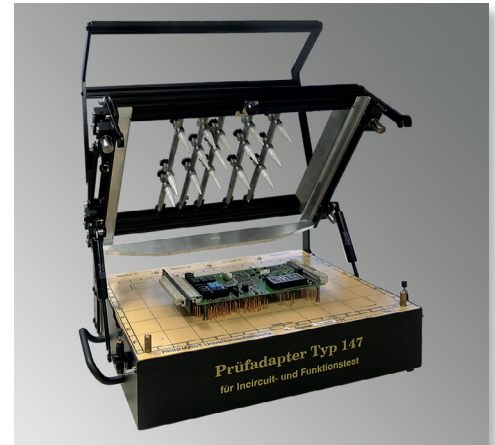

Type 147 Manual Fixture

Type UJ20 Universally Adjustable Test Fixture

With the universally adjustable test fixture Type UJ 20 single electronic PCBs or smallest series in the development of electronic PCBs can be contacted in a cost-effective way in testing prototypes, in function test of batches or in flashing.


Test fixture Type UJ 20 is equipped with adjustable guiding edges, guiding brinks and guiding pins so that the device under test is repeatedly and exactly positioned. The spring contact pins are positioned so that with the upper hatch they press down on the electronic PCB with its contacting points. The spring contact pins are mounted to jibs which can be aligned in every horizontal position and which are fixed in place with a knurled screw. Via cables, the spring contact pins are connected to an interface connector which itself is connected to the test equipment.

Basic version: 10 contacting jibs 120mm, 1 guiding edge –firmly mounted, 3 guiding edges, 2 guiding brinks, 4 guiding pins.

Interface connector: D-Sub 25 pin unwired

Overall dimensions: W/D/H: about 360 mm/380 mm/200 mm

Board dimensions: max. 270 x 120 mm

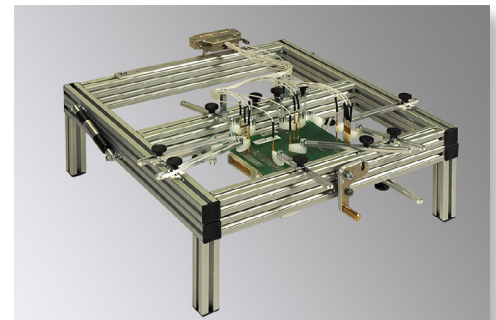


Type UJ 20

Tandem Module

Tandem module 627/127 is a twin fixture box for contacting 2 fixtures Type 127 on one REINHARDT-test system. The module is designed for mutual contacting for higher throughput. A connection kit for two fixtures Type 127 is included.


Depth about 165 mm, width about 600 mm

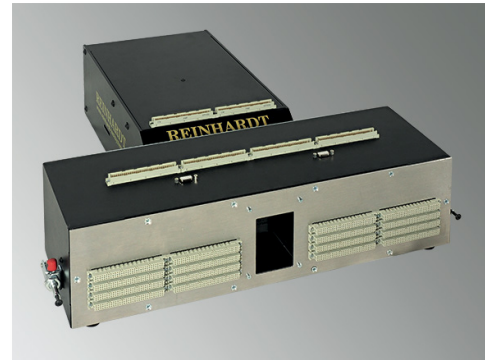


Tandem Module 627/127

Universal Interface Box 165

This box was developed especially for REINHARDT-test systems and allows the easy contacting of function test components with e.g. cable endings and connectors for final functional test. On the one side, there is the SR18VG REINHARDT-interface and on the opposite side there is an aluminium plate, where you can mount connections specifically for the test item. Inside the box (around 10 cm or 16.5 cm deep) the ranging from test system connectors to test item connectors are wired. This avoids a confusing jumble of cables and connectors and resulting operating errors. This interface box also allows to convert the interfaces of other test system producers to REINHARDT-test systems.

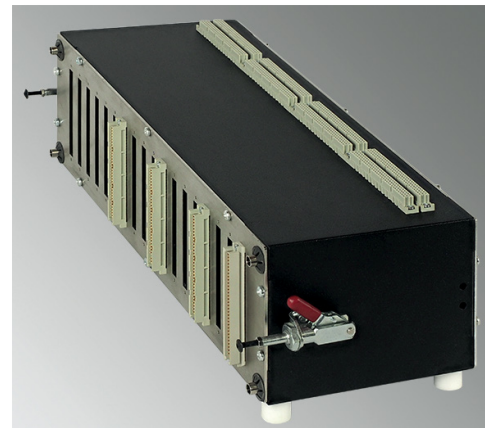


Universal interface box 165 – similar to picture

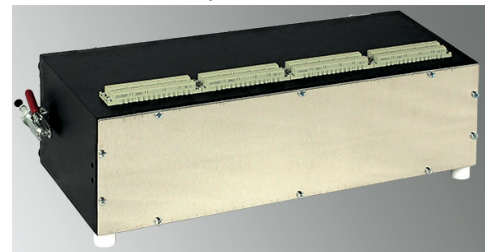

Converter- and Ranging Box



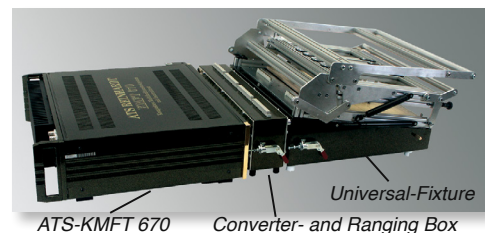




The Converter- and Ranging Box enables you to connect former REINHARDT-fixture systems to the present 770/670-series. It is plugged between test system and fixture.



In-line-System

REINHARDT-test systems are designed for both in-line systems and isolated use. Many control options are standard, others are options, such as e.g. the [SteuerMod-Inline USB](#) control module. Via ASCII- or ODBC-interface it can communicate with MES- or process control systems.



More spare parts and accessories for our fixtures are described in a special brochure. Please ask for "Accessories and Spare Parts for REINHARDT-Test Fixtures" or see our homepage on the internet under http://www.reinhardt-testsystem.de/english/test_fixtures/fixture_accessories.php.

| Fixture–Type | Type 40A | Type 42A | Type 42C | Type 82C | Type 82B | Type 127 | Type 147 |
|---|---|---|---|--|---|---|---|
| |  |  |  |  |  |  |  |
| for Function Test for In–circuit Test | ✓ ✓ | ✓ ✓ | ✓ ✓ | ✓ ✓ | ✓ ✓ | ✓ ✓ | ✓ ✓ |
| Contacting from Above and Below | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| Work. Area in mm Width – Depth | 360 x 230 | 360 x 230 | 360 x 230 | 480 x 320 | 480 x 320 | 191.5 x 172 | 360 x 230 |
| Exchange Plates Dimensions in mm | ca. 380 x 297 | ca. 380 x 297 | ca. 380 x 297 | 500 x 400 | 500 x 400 | ca. 216.8 x 229 | ca. 380 x 297 |
| Contact Pins Number | 1000 | 1000 | 1000 | 1000** | 1000** | 500 pcs. | 800 pcs. |
| Operation Force manual Ø in kg | 0 kg | 2.0 kg | 2.0 kg | 2.0 kg | 2.0 kg | 1.9 kg | 1.9 kg |
| Interface Basic Allocation | 4 x 64 total 256 | 4 x 64 total 256 | 1 x 64, 7 x 96 total 736 | 2 x 64, 3 x 96 total 416 | 2 x 64, 3 x 96 total 416 | 2 x 64 total 128 | 4 x 96 pcs. total 384 |
| Interface max. Contacts | SR18VG 1152 (1728*) | SR18VG 1152 (1728*) | SR18VG 1152 (3456*) | SR18VG 1152 (3456*) | SR18VG 1152 (3456*) | SR08VG 512 (768*) | SR08VG 512 (768*) |
| Exchange Plate Interface Basic Allocation | 4 x 64 total 256 | 4 x 64 total 256 | 4 x 64 total 256 | 4 x 64 total 256 | 4 x 64 total 256 | 2 x 96 pcs. total 192 | 4 x 96 pcs. total 384 |
| Exchange Plate Interface max. Contacts | 16 x 64/96 total 1536 | 16 x 64/96 total 1536 | 16 x 64/96 total 1536 | 16 x 64/96 total 1536 | 16 x 64/96 total 1536 | 8 x 64/96 total 768 | 8 x 64/96 pcs. total 768 |
| Opening and Access when Contacted | ✓ | ✓ | ✓ | ✓ | ✓ | – | – |
| SMT Solder Defect + Polarity Probe | ✓/ both sides | ✓/ both sides | ✓/ both sides | ✓/ both sides | ✓/ both sides | ✓/ both sides | ✓/ both sides |
| Retention Pins/ Arms | 15 5 | 15 5 | 15 5 | 18 6 | 18 6 | 12 pcs. 4 pcs. | 15 pcs. 5 pcs. |
| Retention Exchange Box | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 2Level Fixturing Pneu- matic | ✓ 6 bar | Option manual | Option manual | – | – | – | – |
| Manual Operation | left/right | left/right | left/right | left/right | left/right | left/right | left/right |
| max. Com.Height *** contact one side contact both sides | 45 mm 15 mm | 45 mm 15 mm | 45 mm 15 mm | 45 mm 15 mm | 45 mm 15 mm | no pocket 15 mm | no pocket 15 mm |
| Total Dimensions width, depth, height | 50 x 47.5 x 46 cm | 51 x 51 x 29 cm | 51 x 54 x 29 cm | 65 x 64 x 44 cm | 65 x 64 x 32 cm | 28 x 33 x 23 cm | 44 x 42 x 23 cm |
| Weight ca. | 21 kg | 16 kg | 20 kg | 25 kg | 25 kg | 9 kg | 12 kg |

* SR8VG and SR18VG are test system-interfaces for REINHARDT-test systems
if 96-way connectors are used

** with "Fixture/exchange plate brace 453".

*** can be increased by milling grooves

| Fixture–Type | Type 127 | Type 147 |
|---|---|---|
| |  |  |
| for Function Test for In–circuit Test | ✓ ✓ | ✓ ✓ |
| Contacting from Above and Below | ✓ | ✓ |
| Work. Area in mm Width – Depth | 191.5x172 | 360 x 230 |
| Exchange Plates Dimensions in mm | 217.6x230 | 380 x 297 |
| Contact Pins Number | 500 pcs. | 800 pcs. |
| Operation Force manual Ø in kg | 1.9 kg | 1.9 kg |
| Interface Basic Allocation | 2 x 64 total 128 | 4 x 96 pcs. total 384 |
| Interface max. Contacts | SR08VG 512 (768*) | SR08VG 512 (768*) |
| Exchange Plate Interface Basic Allocation | 2 x 96 pcs. total 192 | 4 x 96 pcs. total 384 |
| Exchange Plate Interface max. Contacts | 8 x 64/96 total 768 | 8 x 64/96 pcs. total 768 |
| Opening and Access when Contacted | – | – |
| SMT Solder Defect + Polarity Probe | ✓/ both sides | ✓/ both sides |
| Retention Pins/ Profile Arms | 12 pcs. 4 pcs. | 15 pcs. 5 pcs. |
| Retention Exchange Box | ✓ | ✓ |
| 2Level Fixturing Pneu- matic | – | – |
| Manual Operation | left/right | left/right |
| max. Comp. Height** contact one side contact both sides | no pocket 15 mm | no pocket 15 mm |
| Total Dimensions width, depth, height | 28 x 33 x 23 cm | 44 x 42 x 23 cm |
| Weight ca. | 9 kg | 12 kg |

Expansions ATS-UKMFT 727

RMX-boards, MMX-boards, RML-boards, Logic boards
or a Transient Recorder
can be plugged into all board positions.

